

Cobalto™ C05300 Scanner Family

On-Counter Omnidirectional Presentation Bar Code Scanner



BSR idware GmbH
Jakob-Haringer-Str.3
A-5020 Salzburg
Web: www.bsr.at



Product Reference Guide

Datalogic ADC, Inc.
959 Terry Street
Eugene, OR 97402
USA
Telephone: (541) 683-5700
Fax: (541) 345-7140

©2014 Datalogic ADC, Inc.

An Unpublished Work - All rights reserved. No part of the contents of this documentation or the procedures described therein may be reproduced or transmitted in any form or by any means without prior written permission of Datalogic ADC, Inc. or its subsidiaries or affiliates ("Datalogic" or 'Datalogic ADC"). Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Should future revisions of this manual be published, you can acquire printed versions by contacting your Datalogic representative. Electronic versions may either be downloadable from the Datalogic website (www.datalogic.com) or provided on appropriate media. If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact Datalogic" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic reserves the right to change any specification at any time without prior notice.

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other brand and product names may be trademarks of their respective owners.

Cobalto is a trademark of Datalogic ADC S.r.l.

Patents

See www.patents.datalogic.com for patent list.



Table of Contents

Introduction	1
About the Scanner	1
Capacitive Touch Button	2
Bottom Button	2
About this Manual	3
Overview	3
Conventions	3
Technical Support	4
Datalogic Website Support	4
Reseller Technical Support	4
Telephone Technical Support	4
Setup	5
Unpacking	5
Setting Up the Scanner	5
Connect Host Interface	6
Interface Selection	8
Configuring the Interface	8
Customizing Configuration Settings	11
Using the Programming Bar Codes	11
Interface Settings	12
Configuring Other Features	12
Software Version Transmission	12
Configuration Using Bar Codes	15
Configuration Parameters	15
Global Interface Features	17
Host Commands — Obey/Ignore	17
USB Suspend Mode	18
RS-232 ONLY Interface	19
RS-232 Standard Factory Settings	19
Baud Rate	19
Stop Bits	20
Parity	21
Handshaking Control	22

RS-232/USB-COM Interfaces	23
Standard Factory Settings	23
Intercharacter Delay	23
Beep On ASCII BEL	24
Beep On Not on File	24
ACK NAK Options	25
ACK Character	26
NAK Character	26
ACK NAK Timeout Value	27
ACK NAK Retry Count	28
ACK NAK Error Handling	29
Indicate Transmission Failure	30
Disable Character	30
Enable Character	31
Keyboard Interface	33
Country Mode	33
Caps Lock State	36
Numlock	36
Keyboard Numeric Keypad	37
Keyboard Send Control Characters	38
Wedge Quiet Interval	39
Intercharacter Delay	40
Intercode Delay	41
USB Keyboard Speed	42
USB-OEM Interface	43
Introduction	43
Standard Factory Settings	43
USB-OEM Device Usage	44
USB-OEM Interface Options	44
Data Format	45
Global Prefix/Suffix	46
Global AIM ID	47
GS1-128 AIM ID	47
Label ID	48
Label ID: Pre-loaded Sets	48
Label ID: Set Individually Per Symbology	49
Label ID Control	49
Label ID Symbology Selection	50
Case Conversion	56
Character Conversion	56

Reading Parameters	57
Double Read Timeout	58
Label Gone Timeout	60
Timeout: Enter Low Power State	61
Timeout: Enter Standby State	63
Timeout: Laser Off After Single Line Scan	65
Touch Button Option	66
LED and Speaker Indicators	66
Power On Alert	66
Audio Jingle Enable	67
Select Audio Jingle for Power-up Event	68
Select Audio Jingle for Good Read Event	70
Good Read: When to Indicate	73
Good Read Beep Type	74
Good Read Beep Frequency	74
Good Read Speaker Volume	75
Good Read Beep Length	76
Good Read LED Duration	77
Scanning Features	78
Scan Modes	78
Symbologies	79
Introduction	79
Standard Factory Settings for Symbologies	79
Disable All Symbologies	80
Coupon Control	80
UPC-A	81
UPC-A Enable/Disable	81
UPC-A Check Character Transmission	81
Expand UPC-A to EAN-13	82
UPC-A Number System Character Transmission	82
In-Store Minimum Reads	83
UPC-E	84
UPC-E Enable/Disable	84
UPC-E Check Character Transmission	84
Expand UPC-E to EAN-13	85
Expand UPC-E to UPC-A	85
UPC-E Number System Character Transmission	86
UPC-E Minimum Read	86
EAN 13	87
EAN 13 Enable/Disable	87
EAN 13 Check Character Transmission	87
EAN-13 Flag 1 Character	88

Contents

EAN-13 ISBN Conversion	88
ISSN Enable/Disable	89
EAN 13 Minimum Reads	89
EAN 8	90
EAN 8 Enable/Disable	90
EAN 8 Check Character Transmission	90
Expand EAN 8 to EAN 13	91
EAN 8 Minimum Reads	91
UPC/EAN Global Settings	92
UPC/EAN Decoding Level	92
UPC/EAN Price Weight Check	93
UPC-A Minimum Reads	94
Add-Ons	95
Optional Add-ons	95
Optional Add-On Timer	96
P2 Add-Ons Minimum Reads	97
P5 Add-Ons Minimum Reads	98
GS1 DataBar™ Omnidirectional	99
GS1 DataBar Omnidirectional Enable/Disable	99
GS1 DataBar Omnidirectional GS1-128 Emulation	99
GS1 DataBar Omnidirectional Minimum Reads	100
GS1 DataBar™ Expanded	101
GS1 DataBar Expanded Enable/Disable	101
GS1 DataBar Expanded GS1-128 Emulation	101
GS1 DataBar Expanded Minimum Reads	102
GS1 DataBar Expanded Length Control	103
GS1 DataBar Expanded Set Length 1	103
GS1 DataBar Expanded Set Length 2	104
GS1 DataBar™ Limited	105
GS1 DataBar Limited Enable/Disable	105
GS1 DataBar Limited GS1-128 Emulation	105
GS1 DataBar Limited Minimum Reads	106
Code 39	107
Code 39 Enable/Disable	107
Code 39 Check Character Calculation	108
Code 39 Check Character Transmission	109
Code 39 Start/Stop Character Transmission	109
Code 39 Full ASCII	110
Code 39 Quiet Zones	111
Code 39 Minimum Reads	112
Code 39 Decoding Level	113
Code 39 Length Control	114
Code 39 Set Length 1	115

Code 39 Set Length 2	116
Code 39 Interdigit Ratio	117
Code 39 Stitching	119
Code 32 (Italian Pharmaceutical)	119
Code 32 Enable/Disable	119
Code 32 Feature Setting Exceptions	120
Code 32 Check Character Transmission	120
Code 32 Start/Stop Character Transmission	120
Code 39 CIP (French Pharmaceutical)	121
Code 39 CIP Enable/Disable	121
Code 128	121
Code 128 Enable/Disable	121
Expand Code 128 to Code 39	122
Code 128 Check Character Transmission	122
Code 128 Function Character Transmission	123
Code 128 Sub-Code Change Transmission	123
Code 128 Quiet Zones	124
Code 128 Minimum Reads	125
Code 128 Decoding Level	126
Code 128 Length Control	127
Code 128 Set Length 1	128
Code 128 Set Length 2	129
Code 128 Stitching	129
GS1-128	130
GS1-128 Enable	130
Interleaved 2 of 5 (I 2 of 5)	131
I 2 of 5 Enable/Disable	131
I 2 of 5 Check Character Calculation	132
I 2 of 5 Check Character Transmission	133
I 2 of 5 Minimum Reads	134
I 2 of 5 Decoding Level	135
I 2 of 5 Length Control	136
I 2 of 5 Set Length 1	137
I 2 of 5 Set Length 2	138
I 2 of 5 Zero Pattern	138
Interleaved 2 of 5 CIP HR	139
Interleaved 2 of 5 CIP HR Enable/Disable	139
Datalogic 2 of 5	140
Datalogic 2 of 5 Enable/Disable	140
Datalogic 2 of 5 Check Character Calculation	140
Datalogic 2 of 5 Check Character Transmission	141
Datalogic 2 of 5 Minimum Reads	141
Datalogic 2 of 5 Decoding Level	142

Contents

Datalogic 2 of 5 Length Control	142
Datalogic 2 of 5 Set Length 1	143
Datalogic 2 of 5 Set Length 2	144
Datalogic 2 of 5 Interdigit Ratio	145
Codabar	147
Codabar Enable/Disable	147
Codabar Check Character Calculation	147
Codabar Check Character Transmission	148
Codabar Start/Stop Character Transmission	148
Codabar Start/Stop Character Set	149
Codabar Start/Stop Character Match	149
Codabar Quiet Zones	150
Codabar Minimum Reads	151
Codabar Decoding Level	152
Codabar Length Control	153
Codabar Set Length 1	154
Codabar Set Length 2	155
Codabar Interdigit Ratio	156
ABC Codabar	158
ABC Codabar Enable/Disable	158
ABC Codabar Concatenation Mode	158
ABC Codabar Dynamic Concatenation Timeout	159
ABC Codabar Force Concatenation	159
Code 11	160
Code 11 Enable/Disable	160
Code 11 Check Character Calculation	161
Code 11 Check Character Transmission	161
Code 11 Minimum Reads	162
Code 11 Length Control	163
Code 11 Set Length 1	163
Code 11 Set Length 2	164
Code 11 Interdigit Ratio	165
Code 11 Decoding Level	167
Standard 2 of 5	168
Standard 2 of 5 Enable/Disable	168
Standard 2 of 5 Check Character Calculation	168
Standard 2 of 5 Check Character Transmission	169
Standard 2 of 5 Minimum Reads	169
Standard 2 of 5 Decoding Level	170
Standard 2 of 5 Length Control	170
Standard 2 of 5 Set Length 1	171
Standard 2 of 5 Set Length 2	172
Industrial 2 of 5	173

Industrial 2 of 5 Enable/Disable	173
Industrial 2 of 5 Check Character Calculation	173
Industrial 2 of 5 Check Character Transmission	174
Industrial 2 of 5 Length Control	174
Industrial 2 of 5 Set Length 1	175
Industrial 2 of 5 Set Length 2	176
Industrial 2 of 5 Minimum Reads	177
IATA	178
IATA Enable/Disable	178
IATA Check Character Transmission	178
ISBT 128	179
ISBT 128 Concatenation	179
ISBT 128 Concatenation Mode	179
ISBT 128 Dynamic Concatenation Timeout	180
ISBT 128 Force Concatenation	181
ISBT 128 Advanced Concatenation Options	181
MSI	182
MSI Enable/Disable	182
MSI Check Character Calculation	182
MSI Check Character Transmission	183
MSI Length Control	183
MSI Set Length 1	184
MSI Set Length 2	185
MSI Minimum Reads	186
MSI Decoding Level	187
Code 93	188
Code 93 Enable/Disable	188
Code 93 Check Character Calculation	188
Code 93 Check Character Transmission	189
Code 93 Length Control	189
Code 93 Set Length 1	190
Code 93 Set Length 2	191
Code 93 Minimum Reads	192
Code 93 Decoding Level	193
Code 93 Quiet Zones	194
Codablock F	195
Codablock F Enable/Disable	195
Codablock F EAN Enable/Disable	195
Codablock F AIM Check	196
Codablock F Length Control	196
Codablock F Set Length 1	197
Codablock F Set Length 2	198
Code 4	199

Contents

Code 4 Enable/Disable	199
Code 4 Check Character Transmission	199
Code 4 Hex to Decimal Conversion	200
Code 5	200
Code 5 Enable/Disable	200
Code 5 Check Character Transmission	201
Code 5 Hex to Decimal Conversion	201
Code 4 and Code 5 Common Configuration Items	202
Code 4 and 5 Decoding Level	202
Code 4 and Code 5 Minimum Reads	203
Follett 2 of 5	204
Follett 2 of 5 Enable/Disable	204
BC412	204
BC412 Enable/Disable	204
BC412 Check Character Calculation	205
BC412 Minimum Reads	205
BC412 Decoding Level	206
BC412 Length Control	207
BC412 Set Length 1	207
BC412 Set Length 2	208
Plessey	209
Plessey Enable/Disable	209
Plessey Check Character Calculation	210
Plessey Check Character Transmission	211
Plessey Length Control	211
Plessey Set Length 1	212
Plessey Set Length 2	213
Plessey Minimum Reads	214
Plessey Decoding Level	215
References	217
RS-232 Parameters	218
RS-232 Only	218
RS-232/USB COM Parameters	218
Keyboard Interface	226
Wedge Quiet Interval	226
Intercharacter Delay	227
Intercode Delay	228
Data Format	229
Data Editing	229
Global Prefix/Suffix	229
Global AIM ID	231
Label ID	232

Character Conversion	236
Reading Parameters	237
Label Gone Timeout	237
Good Read LED Duration	238
Symbologies	239
Decoding Levels	239
Set Length	239
Technical Specifications	243
Standard Cable Pinouts	245
LED and Speaker Indications	246
Error Codes	247
Standard Defaults	249
Default Exceptions	259
Sample Bar Codes	263
1D Bar Codes	263
GS1 DataBar (RSS)	265
GS1 DataBar-14	265
Keypad	267
Scancode Tables	271
Control Character Emulation	271
Interface Type PC AT PS/2 or USB-Keyboard	272
Interface type PC AT PS/2 Alt Mode or USB-Keyboard Alt Mode	274
Microsoft Windows Codepage 1252	276
Index	277
ASCII Chart	279

NOTES



Chapter 1

Introduction


About the Scanner

The Cobalto™ scanner (reader) delivers high performance in a small, fixed scanner that can also be used as a targeted handheld scanner. Its innovative design maximizes productivity and minimizes operator stress, strain and fatigue.

The scanner guarantees an excellent value for customers looking for outstanding performance in a stylish and full-featured product. An elegant blue 'Ring of Light' encircles the reading window, which turns a bright green to visually confirm a good read.

Additionally, a high quality polyphonic speaker can be configured to provide the preferred sound or 'jingle' for audio confirmation of a good read.

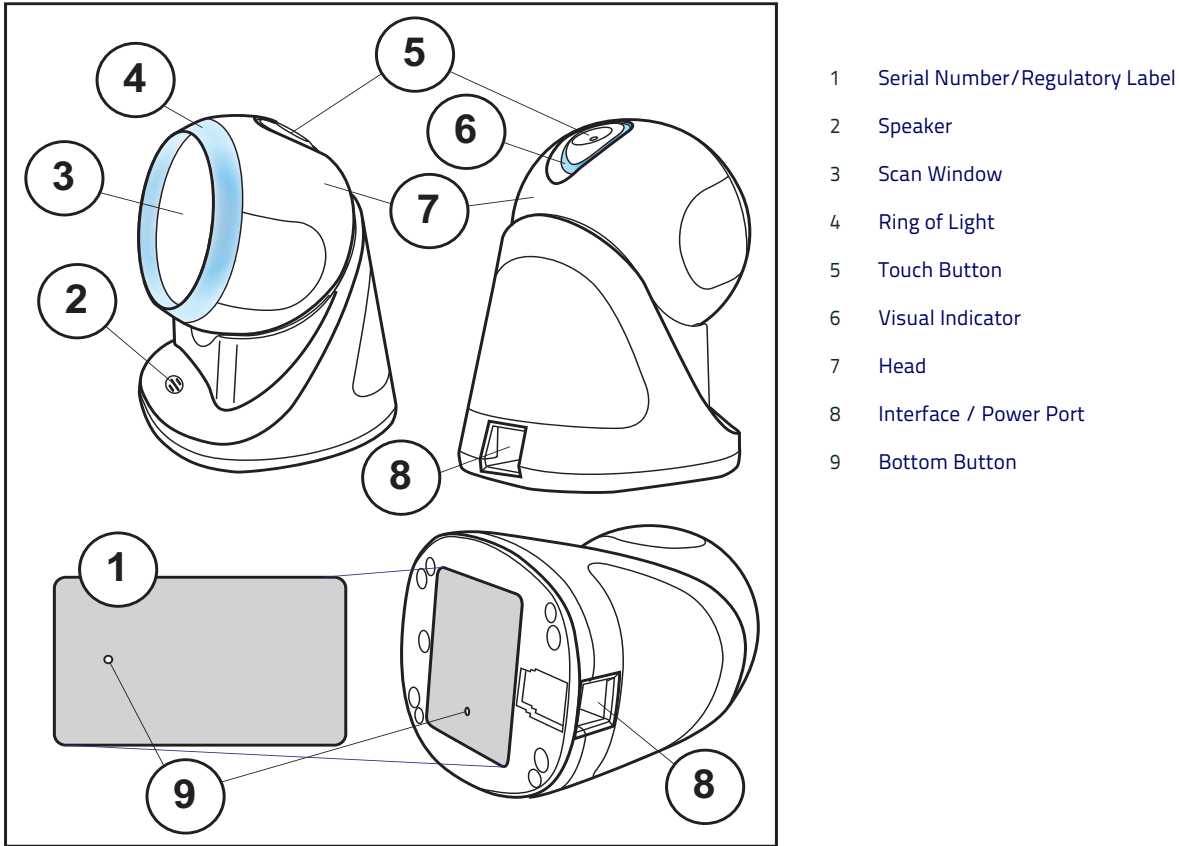Figure 1. Nomenclature and Labeling



Capacitive Touch Button

The Touch Button (also referred to as the trigger) located on the top of the scanner is actuated by the electrical impulses present in a human fingertip, and is thus a capacitive Touch Button.

Normally, the scanner operates in omnidirectional mode, simultaneously projecting 20 lines which form a scan pattern; highly useful for capturing bar codes presented from multiple directions and angles.

When the Touch Button is actuated, the scanner enters single scan line operation, allowing the scanner to more easily target and read truncated bar codes, or aim at a single label from amongst multiple bar codes as an ordinary handheld scanner would do. For example, it is recommended to use single line operation to read the programming bar codes presented in this manual.

This button can also be used to wake up the scanner when it has gone to sleep.

Bottom Button

The scanner is also equipped with a mechanical button located at the bottom side of its base. This Bottom Button is protected by a rubber seal and can perform two functions:

1. While using the Aladdin™ configuration utility, when a 'force device connect' request is made, the Bottom Button is used to activate this function.
2. This button is also used to activate the boot loader for firmware upgrade when this request is made using the Aladdin utility. This is the button used when the Aladdin utility asks to reset the product by powering up the product while keeping the button pressed.

About this Manual

This Product Reference Guide (PRG) is provided for users seeking advanced technical information, including connection, programming, maintenance and specifications. The Quick Reference Guide (QRG) and other publications associated with this product are downloadable free of charge from the website listed on the back cover of this manual.

Typically, units are factory-programmed for the most common terminal and communications settings. If you need to modify any programmable settings, custom configuration can be accomplished by scanning the programming bar codes within this guide.

Programming can alternatively be performed using the Datalogic Aladdin™ Configuration application which is available from the Datalogic website listed on the back cover of this manual. This multi-platform utility program allows device configuration using a PC. It communicates to the device using a serial or USB cable and can also create configuration bar codes to print.

Overview

[Chapter 1, Introduction](#) provides a product overview, unpacking instructions, and cable connection information.

[Chapter 2, Setup](#) presents information about unpacking and setting up the scanner, and interface configuration bar codes and details.

[Chapter 3, Configuration Using Bar Codes](#) provides instructions and bar code labels for customizing your scanner. There are different sections for interface types, general features, data formatting, symbology-specific and model-specific features.

[Chapter 4, References](#) provides details concerning programmable features.

[Appendix A, Appendix A, Technical Specifications](#) lists physical and performance characteristics, as well as environmental and regulatory specifications. It also provides standard cable pin-outs and descriptions of the functions and behaviors of the scanner's LED and Speaker indicators.

[Appendix B, Appendix B, Standard Defaults](#) references common factory default settings for scanner features and options.

[Appendix C, Appendix C, Sample Bar Codes](#) offers sample bar codes of several common symbologies.

[Appendix D, Appendix D, Keypad](#) includes numeric bar codes to be scanned for certain parameter settings.

[Appendix E, Appendix E, Scancode Tables](#) lists control character emulation information for Wedge and USB Keyboard interfaces.

Conventions

The symbols listed below are used in this manual to notify the scanner of key issues or procedures that must be observed when using the scanner:



NOTE

Notes contain information necessary for properly diagnosing, repairing and operating the scanner.



The **CAUTION** symbol advises you of actions that could damage equipment or property.

Technical Support

Datalogic Website Support

The Datalogic website (www.datalogic.com) is the complete source for technical support and information for Datalogic products. The site offers product support, warranty information, product manuals, product tech notes, software updates, demos, and instructions for returning products for repair.

Reseller Technical Support

An excellent source for technical assistance and information is an authorized Datalogic reseller. A reseller is acquainted with specific types of businesses, application software, and computer systems and can provide individualized assistance.

Telephone Technical Support

If you do not have internet or email access, you may contact Datalogic technical support at (541) 349-8283 or check the back cover of your manual for more contact information.

Current versions of the Product Reference Guide (PRG), Quick Reference Guide (QRG), the Datalogic Aladdin™ Configuration application, software/firmware and any additional manuals, instruction sheets and utilities for this product can be downloaded from the website listed on the back cover of this manual. Alternatively, printed copies or product support CDs can be purchased through your Datalogic reseller.



Chapter 2

Setup

Unpacking

Check carefully to ensure the scanner and any cables or accessories ordered are present and undamaged. If any damage occurred during shipment, contact [Technical Support on page 4](#).


KEEP THE PACKAGING. Should the unit ever require service, it should be returned in its original shipping container.

Setting Up the Scanner

Follow the steps provided in this section to connect and get your scanner up and communicating with its host:

1. Connect the Interface Cable at the scanner as shown in [Figure 1](#). To disconnect the cable, insert a paper clip or similar object into the opening shown (item #3).
2. Connect the other end to the Host (see the next section, [Connect Host Interface](#) and [Figure 2](#)).
3. Modify [Customizing Configuration Settings on page 11](#) (only if modifications are needed from factory settings).

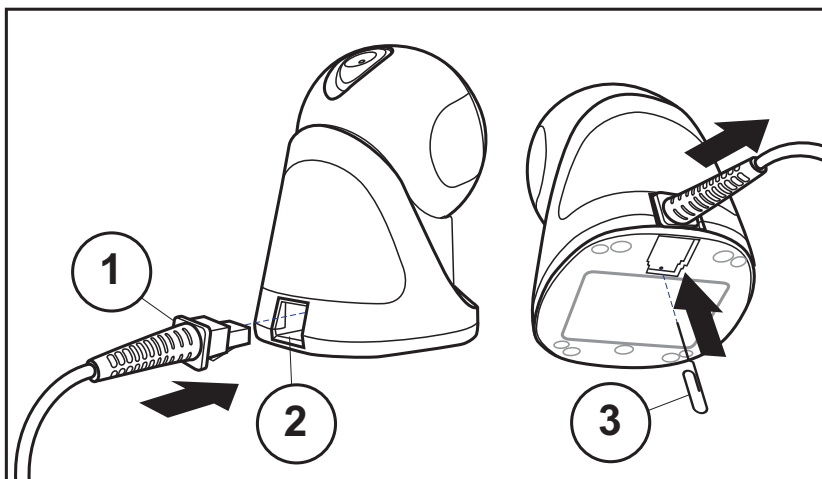Figure 1. Cable Connection/Disconnection at the Scanner



- 1 Cable Connector
- 2 Interface / Power Port
- 3 Paper clip

Connect Host Interface

The scanner kit you ordered to match your interface should provide a compatible cable for your installation. If this is not so, contact [Technical Support](#).

Depending on the model, the scanner can communicate using the following interfaces:

RS-232 Serial Connection

Turn off power to the terminal/PC and connect the scanner to the terminal/PC serial port via the RS-232 cable as shown in [Figure 2](#). If the terminal will not support POT (Power Off the Terminal) to supply scanner power, use the approved power supply (AC Adapter). Plug the AC Adapter barrel connector into the socket on the RS-232 cable connector and the AC Adapter plug into a standard power outlet.

RS-232 — The scanner can communicate with a standard or Wincor-Nixdorf (W-N) RS-232 host.

RS-232 OPOS — This interface is used for OPOS/UPOS/JavaPOS systems.

Keyboard Wedge Connection

The Keyboard Wedge cable has a 'Y' connection from the scanner. Connect the female to the male end from the keyboard and the remaining end at the keyboard port at the terminal/PC.


Keyboard Wedge (KBW) — When connected using this interface, the host interprets scanned data as keystrokes and supports several international keyboards (for the Windows® environment). See [Country Mode on page 35](#) for a full listing.

USB Connection

Connect the scanner to a USB port on the terminal/PC using the correct USB cable for the interface type you ordered.

USB — Select to communicate either by USB OEM, USB COM STD, or USB Keyboard interface types by scanning the appropriate interface type bar codes available in this manual. The default interface is USB-KBD, or RS-232-STD.

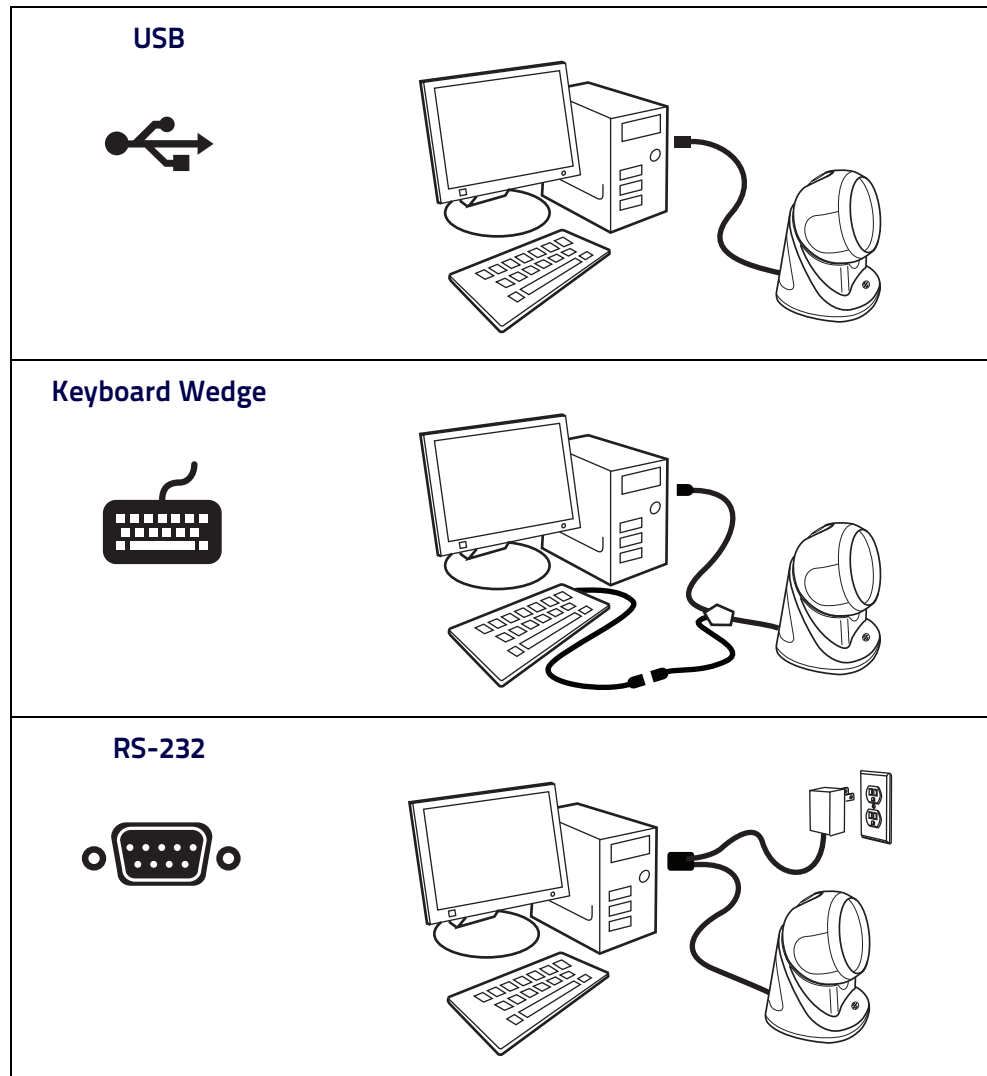Figure 2. Connection to the Host

**NOTE**

Specific cables are required for connection to different hosts. The connections illustrated in [Figure 2](#) are examples only. Actual connectors may vary from those illustrated, but the steps to connect the scanner remain the same.

Interface Selection

Upon completing the physical connection between the scanner and its host, proceed directly to [Configuring the Interface on page 8](#) for information and programming for the interface type the scanner is connected to (for example: RS-232, Keyboard Wedge, USB, etc.) and scan the appropriate bar code in the section to select your system's correct interface type.

The scanner, depending upon the model, will support one of the following sets of host interfaces:

USB Models (3.0 full speed)

- USB-KBD
- USB-COM STD
- USB-OEM
- USB-KBD-ALT
- USB-KBD + USB COM

RS-232 / Keyboard Wedge Models

- RS-232 (Standard, Wincor-Nixdorf, OPOS)
- Keyboard Wedge

Configuring the Interface

Scan the programming bar code from the following section which selects the appropriate interface type to match the system the scanner will be connected to. Next, proceed to the corresponding chapter in this manual (also listed in the table) to configure any desired settings and features associated with that interface.







NOTE

Unlike some other programming features and options, interface selections require that you scan only one programming bar code label. DO NOT scan an ENTER/EXIT bar code prior to scanning an interface selection bar code.

Some interfaces require the scanner to start in the disabled state when powered up. If additional scanner configuration is desired while in this state, pull the trigger and hold it for five seconds. The scanner will change to a state that allows programming with bar codes.

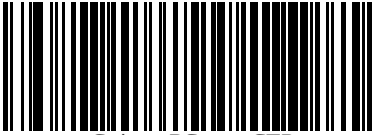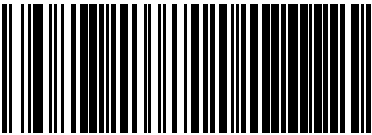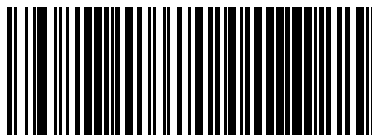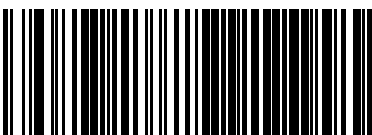Table 3. Available Interfaces

RS-232		FEATURES
RS-232 standard interface	 Select RS232-STD	Set RS-232 Interface Features starting on page 19
 Select RS232-WN	RS-232 Wincor-Nixdorf	
RS-232 for use with OPOS/UPOS/JavaPOS	 Select RS-232 OPOS	
 Select USB-COM-STD ^a	USB Com to simulate RS-232 standard interface	
USB-OEM		FEATURES
USB-OEM (can be used for OPOS/UPOS/JavaPOS)	 Select USB-OEM	Set USB-OEM Interface Features starting on page 43

a. Download the correct USB Com driver from www.datalogic.com

KEYBOARD	FEATURES
<p>AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 & 95 w/Standard Key Encoding</p>  <p>Select KBD-AT</p>	<p>Set KEYBOARD WEDGE Interface Features starting on page 33</p>
 <p>Select KBD-AT-NK</p> <p>Keyboard Wedge for IBM AT PS2 with standard key encoding but without external keyboard</p>	
<p>AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 & 95 w/Alternate Key</p>  <p>Select KBD-AT-ALT</p>	
 <p>Select KBD-AT-ALT-NK</p> <p>Keyboard Wedge for IBM AT PS2 with alternate key encoding but without external keyboard</p>	
<p>USB Keyboard with standard key encoding</p>  <p>Select USB Keyboard</p>	
 <p>Select USB Alternate Keyboard</p> <p>USB Keyboard with alternate key encoding</p>	
<p>USB Keyboard + USB COM</p>  <p>Select USB Keyboard + USB COM</p>	

Customizing Configuration Settings

Using the Programming Bar Codes

This manual contains feature descriptions and bar codes which allow you to reconfigure your scanner. Some programming bar code labels, like [Resetting the Product Configuration to Defaults on page 13](#), require only the scan of that single label to enact the change. Most of the programming labels in this manual, however, require the scanner to be placed in Programming Mode prior to scanning them. Scan an ENTER/EXIT bar code once to enter Programming Mode. Once the scanner is in Programming Mode, you can scan a number of parameter settings before scanning the ENTER/EXIT bar code a second time, which will then accept your changes, exit Programming Mode and return the scanner to normal operation.



NOTE

There are some exceptions to the typical programming sequence described above. Please read the description and setting instructions carefully when configuring each given programmable feature.

Datalogic Aladdin™ Utility

Programming can alternatively be performed using the Datalogic Aladdin™ Configuration application which is available for free download from the Datalogic website listed on the back cover of this manual. This multi-platform utility program allows device configuration using a PC. It communicates to the device using a serial or USB cable and can also create configuration bar codes to print.

Datalogic Aladdin™ is a multi-platform utility program providing a quick and user-friendly configuration method via the RS-232/USB-COM interface. The Aladdin utility is available on the CD-ROM provided with your product, and also from the Datalogic website. Aladdin allows you to program the scanner by selecting configuration commands through a user-friendly graphical interface running on a PC. These commands are sent to the scanner over the selected communication interface, or they can be printed as bar codes to be scanned.

Aladdin also provides the ability to perform a software upgrade for the connected device (see the Datalogic Aladdin™ Help On-Line for more details).

Interface Settings

The scanner is typically factory-configured with a set of default features standard to the interface type you ordered. See [Interface Selection on page 8](#).

[Global Interface Features, starting on page 17](#) provides settings configurable by all interface types. If your installation requires you to further customize your scanner, you can select other options through use of the instructions and programming bar codes available in the appropriate section for your interface.

- [RS-232 ONLY Interface, starting on page 19](#)
- [RS-232/USB-COM Interfaces, starting on page 23](#)
- [Keyboard Interface, starting on page 33](#)
- [USB-OEM Interface, starting on page 43](#)

Configuring Other Features

If your installation requires different programming than the standard factory default settings, the following sections of this manual allow configuration of non-interface-specific settings you might require:

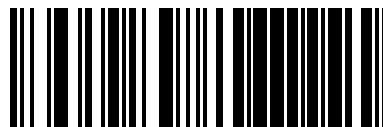
Configuration Using Bar Codes — General Features includes programming for scanning, speaker and LED indicators and other such universal settings.

Reading Parameters — Reading Parameters include programming for scanning, speaker and LED indicators and other universal settings.

Symbologies — Includes options concerning the bar code label types (symbologies). These settings allow you to enable/disable symbologies, set label lengths, require check digit, etc.

Software Version Transmission

The software version of the device can be transmitted over the RS-232, Keyboard and USB interfaces by scanning the following label.



Transmit Software Version


Resetting the Product Configuration to Defaults

If you aren't sure what programming options are in your scanner, or you've changed some options and want to restore the Custom Default Configuration that may have been saved in the scanner, scan the [Restore Custom Default Configuration](#) bar code below. This will restore the custom configuration for the currently active interface.



NOTE

Custom defaults are based on the interface type. Configure the scanner for the correct interface before scanning this label.



Restore Custom Default Configuration

If you aren't sure what programming options are in your scanner, or you've changed some options and want to restore the Factory Configuration, you have two options. You can scan the [Restore USA Factory Configuration](#) bar code or the [Restore EU Factory Configuration](#) bar code below. Both labels restore the scanner configuration to the factory settings including the interface type. The USA label restores Label IDs to those historically used in the USA. The EU label restores Label IDs to those historically used in Europe. The Label ID sets for USA and EU are shown in the Label ID section of this manual.



CAUTION

Scanning either of the "Restore Factory Configuration" commands below will result in the loss of any custom configuration settings for your device.



Restore USA Factory Configuration



Restore EU Factory Configuration

The programming section on the following pages lists the factory default settings for each of the menu commands (indicated by shaded blocks and bold text).

NOTES



Chapter 3

Configuration Using Bar Codes

This and following sections provide programming bar codes to configure your scanner by changing the default settings. For details about additional methods of programming, see ["Customizing Configuration Settings" on page 11](#).



NOTE

You must first enable your scanner to read bar codes in order to use this section. If you have not done this, go to [Setup, starting on page 5](#) and complete the appropriate procedure.

Configuration Parameters

Once the scanner is set up, you can change the default parameters to meet your application needs. Refer to ["Resetting the Product Configuration to Defaults" on page 13](#) for initial configuration in order to set the default values and select the interface for your application.

The following configuration parameters are divided into logical groups, making it easy to find the desired function based on its reference group.

Interface Configuration:


- ["RS-232 ONLY Interface" on page 19](#)
- ["RS-232/USB-COM Interfaces" on page 23](#)
- ["Keyboard Interface" on page 33](#)
- ["USB-OEM Interface" on page 43](#)

Parameters common to all interface applications:

- ["Global Prefix/Suffix" on page 46](#)
- ["Data Format" on page 45](#) offers advanced configuration options for customization of scanned data output.
- ["Reading Parameters" on page 57](#) control various operating modes and indicators status functioning.

Symbology-specific parameters:

["Symbologies" on page 79](#) defines options for all symbologies and provides the programming bar codes necessary for configuring these features.



NOTE

You must first enable your scanner to read bar codes in order to use this section. If you have not done this, go to [Setup, starting on page 5](#) and complete the appropriate procedure.

To program features:

1. Scan the ENTER/EXIT PROGRAMMING bar code, available at the top of each programming page, when applicable.
2. Scan the bar code to set the desired programming feature. You may need to cover unused bar codes on the page, and possibly the facing page, to ensure that the scanner reads only the bar code you intend to scan.
3. If additional input parameters are needed, go to [Appendix D, Keypad](#), and scan the appropriate characters from the keypad.



NOTE

Additional information about many features can be found in the "References" chapter.

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

4. Complete the programming sequence by scanning the ENTER/EXIT PROGRAMMING bar code to exit Programming Mode.

For more detailed descriptions, programming information and examples for setting selected configuration items, see [References, starting on page 217](#).

Global Interface Features

The following interface features are configurable by all interface types. To set features specific to your interface, turn to that section of this manual:

- "RS-232 ONLY Interface" on page 19
- "RS-232/USB-COM Interfaces" on page 23
- "Keyboard Interface" on page 33
- "USB-OEM Interface" on page 43

Host Commands — Obey/Ignore

This option specifies whether the scanner will obey or ignore host commands. When set to ignore, the scanner will ignore all host commands except for those necessary for:

- service mode
- flash programming mode
- keeping the interface active
- transmission of labels.

	 Host Commands = Obey
 Host Commands = Ignore	



USB Suspend Mode

This setting enables/disables the ability of the USB interface to enter suspend mode.

	 USB Suspend Mode = Disable
 USB Suspend Mode = Enable	

RS-232 ONLY Interface

Use the programming bar codes in this chapter if modifications to the standard RS-232 interface settings are necessary to meet your system's requirements. Additional settings which apply to both the RS-232 and USB interfaces are available in [Chapter 5, RS-232/USB-COM Interfaces](#).

RS-232 Standard Factory Settings

Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings.

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the scanner's baud rate to match the baud rate setting of the host device. With an improper baud rate setting, data may not reach the host correctly.

	 Baud Rate = 1200
 Baud Rate = 2400	
	 Baud Rate = 4800
 Baud Rate = 9600	




Baud Rate — continued

	 Baud Rate = 19,200
 Baud Rate = 38,400	
	 Baud Rate = 57,600
 Baud Rate = 115,200	

Stop Bits

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. The number of stop bits selected (one or two) depends on the number the receiving terminal is programmed to accommodate. Set the number of stop bits to match host device requirements.

	 1 Stop Bit
 2 Stop Bits	



Parity

This feature specifies parity required for sending and receiving data. A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements.

- Select None when no parity bit is required.
- Select Odd parity and the parity bit value is set to 0 or 1, based on data, to ensure that an odd number of 1 bits are contained in the coded character.
- Select Even parity and the parity bit value is set to 0 or 1, based on data, to ensure that an even number of 1 bits are contained in the coded character.

	 Parity = None
 Parity = Even	
	 Parity = Odd



Handshaking Control

The data interface consists of an RS-232 port designed to operate either with or without the hardware handshaking lines, Request to Send (RTS), and Clear to Send (CTS). Handshaking Control includes the following options:

- RTS — RTS is asserted during transmissions. CTS is ignored.
- RTS/CTS — RTS is asserted during transmissions. CTS gates transmissions.
- RTS/XON/XOFF — RTS is asserted during transmissions. CTS is ignored. XON and XOFF gate transmissions.
- RTS On/CTS — RTS is always asserted. CTS gates transmissions.
- RTS/CTS Scan Control — RTS is asserted during transmissions. CTS gates transmissions and controls enable and disable state of scanner.

	 <p>Handshaking Control = RTS</p>
 <p>Handshaking Control = RTS/CTS</p>	
 <p>Handshaking Control = RTS/XON/XOFF</p>	 <p>Handshaking Control = RTS/XON/XOFF</p>
 <p>Handshaking Control = RTS On/CTS</p>	
	 <p>Handshaking Control = RTS/CTS Scan Control</p>

RS-232/USB-COM Interfaces




The programming bar codes in this chapter allow modifications to the standard RS-232 and USB-Com interfaces.


Standard Factory Settings

Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings.

Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay. See "[Label ID: Pre-loaded Sets](#)" on [page 232](#) for more detailed programming instructions.

	 Intercharacter Delay = No Delay
 Select Intercharacter Delay Setting	To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.	 CANCEL

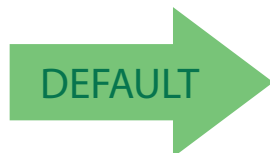

00 = No Intercharacter Delay

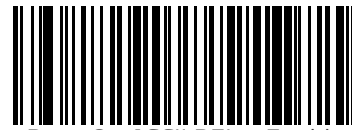


Beep On ASCII BEL

When this parameter is enabled, the scanner issues a beep when a <BEL> character is detected on the RS-232 serial line. <BEL> is issued to gain a user's attention to an illegal entry or other important event.




Beep On ASCII BEL = Disable





Beep On ASCII BEL = Enable

Beep On Not on File

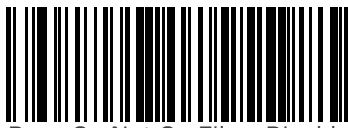This option enables/disables the action of the scanner to sound a three beep sequence upon receiving a Not-On-File (NOF) host command.



Beep On Not On File = Disable

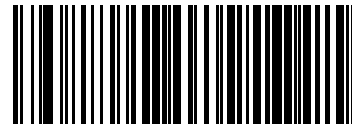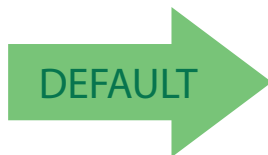

Beep On Not On File = Enable


ACK NAK Options

This enables/disables the ability of the scanner to support the RS-232 ACK/NAK protocol. When configured, the scanner and/or host sends an 'ACK' when it receives data properly, and sends 'NAK' when the data is in error.

Options are:

- Disable
- Enable for label transmission — The scanner expects an ACK/NAK response from the host when a label is sent.
- Enable for host-command acknowledge — The scanner will respond with ACK/NAK when the host sends a command.
- Enable for label transmission and host-command acknowledge

	 ACK/NAK Protocol = Disable ACK/NAK
 ACK/NAK Protocol = Enable for label transmission	
	 ACK/NAK Protocol = Enable for host-command acknowledge
 ACK/NAK Protocol = Enable for label transmission and host-command acknowledge	




ACK Character

This setting specifies an ASCII character or hex value to be used as the ACK character. ASCII characters or any hex value from 0 to 0xFF can be selected. See "ACK Character" on page 220 for more detailed programming instructions.




NOTE

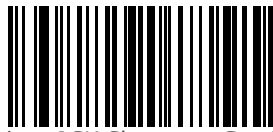Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Stop Bits has been set as 7 Data Bits.



Select ACK Character Setting

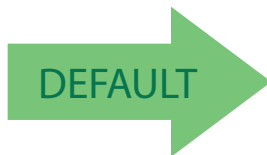

0x06 'ACK' Character

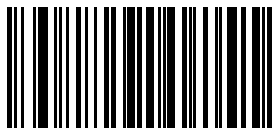
NAK Character

This setting specifies an ASCII character or hex value to be used as the NAK character. ASCII characters or any hex value from 0 to 0xFF can be selected. See "NAK Character" on page 221 for more detailed programming instructions.

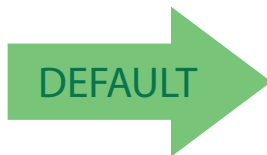


NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Stop Bits has been set as 7 Data Bits.




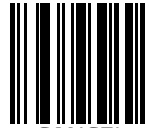
Select NAK Character Setting




0x15 'NAK' Character

ACK NAK Timeout Value

This option specifies the amount of time the scanner waits for an ACK character from the host following label transmission. The selectable timeout range is 200 milliseconds to 15,000ms (15 seconds) in 200ms increments. A selection of 0 disables the timeout. See "[ACK NAK Timeout Value](#)" on page 222 for more detailed programming instructions.

 Select ACK NAK Timeout Value Setting	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 CANCEL

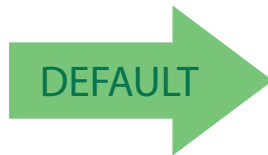


01 ACK NAK Timeout value is 200ms



ACK NAK Retry Count

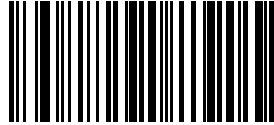
This feature specifies the number of times the scanner retries a label transmission due to a retry condition. The selectable range is from 1 to 254 retries. A selection of 0 disables the count, and a selection of 255 specifies unlimited retries. See ["ACK NAK Retry Count" on page 223](#) for more detailed programming instructions.




Select ACK NAK Retry Count Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

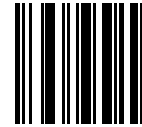Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

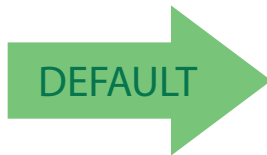


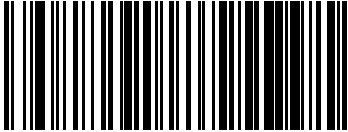
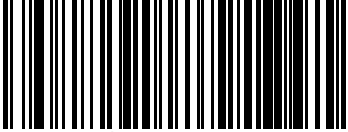
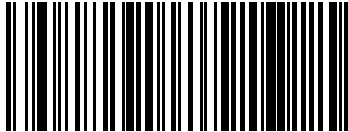
003 = 3 Retries

ACK NAK Error Handling

This feature specifies the method the scanner uses to handle receive errors detected while waiting for an ACK character from the host.

Options are:

- Ignore errors detected
- Process error as valid ACK character
- Process error as valid NAK character

	 ACK NAK Error Handling = Ignore Errors Detected
 ACK NAK Error Handling = Process Error as Valid ACK Character	
	 ACK NAK Error Handling = Process Error as Valid NAK Character



Indicate Transmission Failure

This option enables/disables the scanner's ability to sound an error beep to indicate a transmission failure while in ACK/NAK mode.

	 <p>Indicate Transmission Failure = Disable Indication</p>
 <p>Indicate Transmission Failure = Enable Indication</p>	

Disable Character

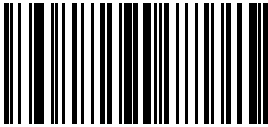
Specifies the value of the RS-232 host command used to disable the scanner.

ASCII characters or any hex value from 0 to 0xFF can be selected. See ["Disable Character" on page 224](#) for more detailed programming instructions.



NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters.

 <p>Select Disable Character Setting</p>	
---	--



0x44 = Disable Character is 'D'

Enable Character

Specifies the value of the RS-232 host command used to enable the scanner.

ASCII characters or any hex value from 0 to 0xFF can be selected. See ["Enable Character" on page 225](#) for more detailed programming instructions.

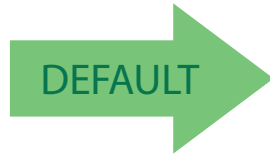


NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters.



Select Enable Character Setting



0x45 = Enable Character is 'E'



NOTES

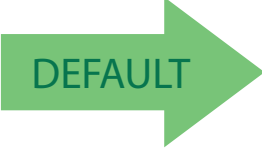
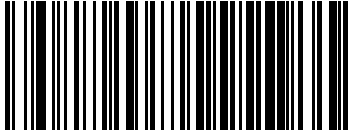
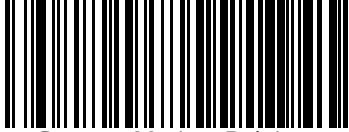
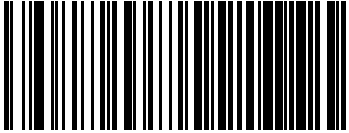
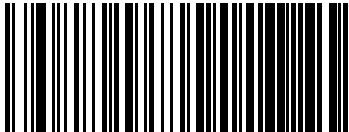
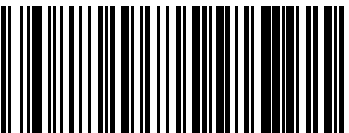
Keyboard Interface

Use the programming bar codes in this chapter to select options for USB Keyboard and Wedge Interfaces. Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings. Information about control character emulation which applies to keyboard interfaces is listed in [Appendix E, Scancode Tables](#).

Country Mode


This feature specifies the country/language supported by the keyboard.

The Country Mode setting is ignored if the interface uses alternate key encoding.


	 Country Mode = U.S.
 Country Mode = Belgium	
	 Country Mode = Britain
 Country Mode = Croatia	
	 Country Mode = Czech Republic



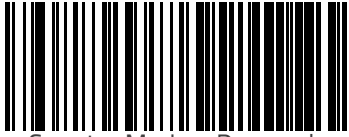
Country Mode — continued




Country Mode = Denmark

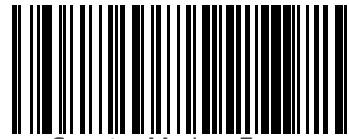


Country Mode = France

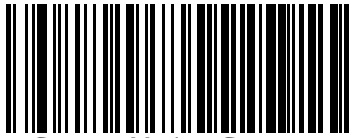


Country Mode = Germany

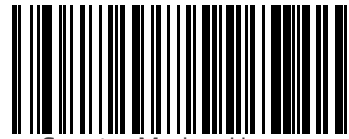


Country Mode = Hungary

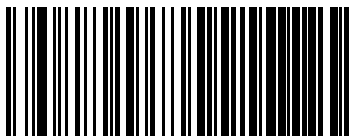


Country Mode = Italy

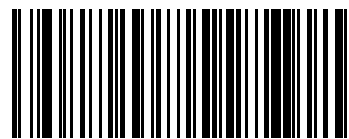

Country Mode = Japanese 106-key








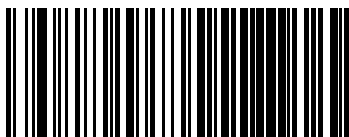


Country Mode = Norway

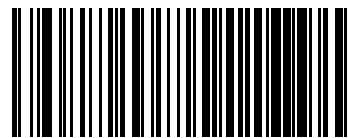

Country Mode = Poland

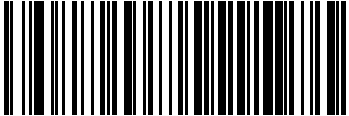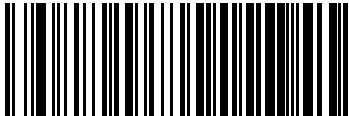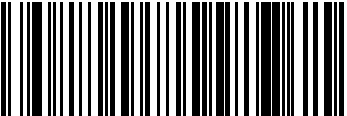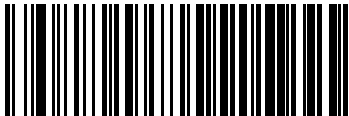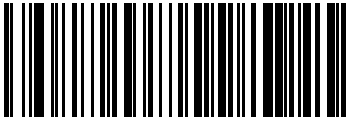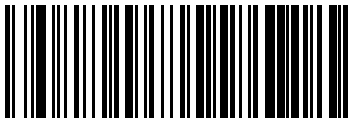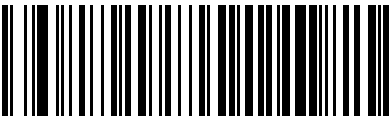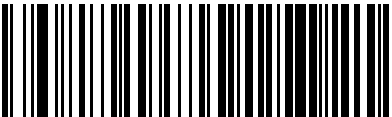Country Mode — continued

	 <p>Country Mode = Portugal</p>
 <p>Country Mode = Romania</p>	
	 <p>Country Mode = Slovakia</p>
 <p>Country Mode = Spain</p>	
	 <p>Country Mode = Sweden</p>
 <p>Country Mode = Switzerland</p>	
	 <p>Country Mode = French Canadian</p>
 <p>Country Mode = Lithuania</p>	



Caps Lock State

This option specifies the format in which the scanner sends character data. This applies to Keyboard Wedge interfaces. This does not apply when an alternate key encoding keyboard is selected. This does not apply to USB Keyboard.

	 <p>Caps Lock State = Caps Lock OFF</p>
 <p>Caps Lock State = Caps Lock ON</p>	
	 <p>Caps Lock State = AUTO Caps Lock Enable</p>


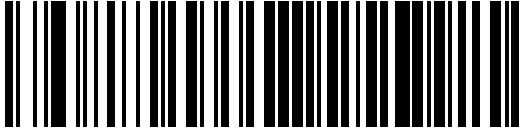
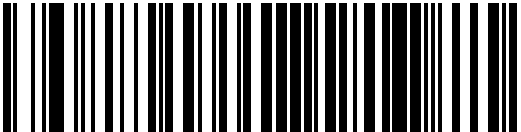
Numlock

This option specifies the setting of the Numbers Lock (Numlock) key while in Keyboard Wedge interface. This only applies to alternate key encoding interfaces. It does not apply to USB Keyboard.

	 <p>Numlock = Numlock key unchanged</p>
 <p>Numlock = Numlock key toggled</p>	

Keyboard Numeric Keypad

This feature specifies if numeric characters will be sent using the standard keys or the numeric keypad.

	 <p>Keyboard Numeric Keypad = Standard Keys</p>
 <p>Keyboard Numeric Keypad = Numeric Keypad</p>	



Keyboard Send Control Characters





This feature is used by the Keyboard Wedge and USB Keyboard interfaces. It specifies how the scanner transmits ASCII control characters to the host. Reference [Appendix E, Scancode Tables](#) for more information about control characters.

Options are as follows:

Send Ctrl+Key — ASCII characters from 00H to 0x1FH inclusive are transmitted in the format Ctrl+Key. Special keys are available in the range from 81H to A1.

Send Ctrl+Shift+Key — The behavior is the same as above, but control keys are sent in the format Ctrl+Shift+Keys.

Send Special Function Key — Send characters between 00H and 1FH according to the special function key mapping table (see Scancode [Table 28 on page 273](#)). This is used to send keys that are not in the normal ASCII set. A unique set is provided for each available scancode set.

	 <p>Keyboard Send Control Characters = Send Ctrl+Key</p>
 <p>Keyboard Send Control Characters = Send Ctrl+Shift+Key</p>	
	 <p>Keyboard Send Control Characters = Send Special Function Key :</p>

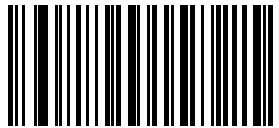

Wedge Quiet Interval


This option specifies the amount of time to look for keyboard activity before the scanner breaks the keyboard connection in order to transmit data to host. The selectable range for this feature is from 0 to 990ms in 10ms increments. See "[Wedge Quiet Interval](#)" on page 226 for more detailed programming instructions.



This feature applies ONLY to the Keyboard Wedge interface.

NOTE

 Select Wedge Quiet Interval Setting	To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.	 CANCEL

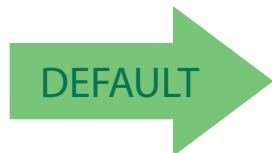
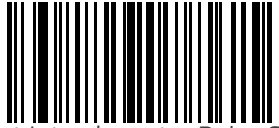



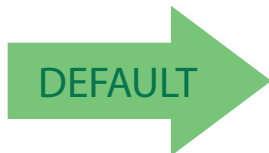
10 = Quiet Interval of 100 ms



Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay. See ["Intercharacter Delay" on page 227](#) for more detailed programming instructions.



	 Intercharacter Delay = No Delay
 Select Intercharacter Delay Setting	To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.	 CANCEL




00 = No Intercharacter Delay


Intercode Delay

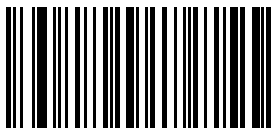Specifies the delay between labels transmitted to the host for this interface. The selectable range for this feature is from 0 to 99 seconds. See ["Intercode Delay" on page 228](#) for more detailed programming instructions.

 <p>Set Intercode Delay</p>	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 <p>CANCEL</p>

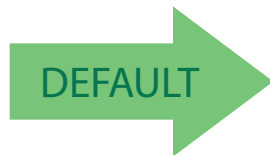

00 = No Wedge Intercode Delay




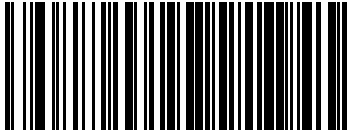
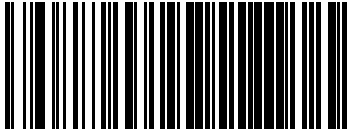
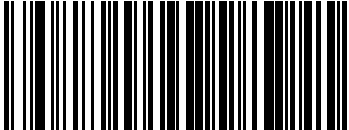
USB Keyboard Speed

This option specifies the USB poll rate for a USB Keyboard.



This feature applies **ONLY** to the USB Keyboard interface.

NOTE

	 USB Keyboard Speed = 1ms
 USB Keyboard Speed = 2ms	
	 USB Keyboard Speed = 3ms
 USB Keyboard Speed = 5ms	
	 USB Keyboard Speed = 7ms
 USB Keyboard Speed = 10ms	

USB-OEM Interface

Introduction

Feature settings for USB interfaces differ depending upon which host type the scanner will be connected with. Use the feature settings in this chapter to specifically configure for the USB-OEM interface. Other USB interfaces are included in the appropriate chapter for their host type.

Standard Factory Settings

Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings.



USB-OEM Device Usage

The USB-OEM protocol allows for the scanner to be identified as one of two different types of bar code scanners. Depending on what other scanners you may already have connected to a USB-OEM POS, you may need to change this setting to enable all devices to communicate.

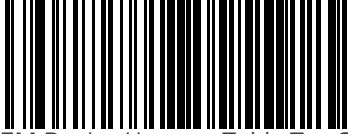

Options are:

- Table Top Scanner
- Handheld Scanner



NOTE

It may be necessary to switch device usage when connecting two scanners of the same type to a POS system.

	 USB-OEM Device Usage = Table Top Scanner
 USB-OEM Device Usage = Handheld Scanner	

USB-OEM Interface Options

This setting provides for an interface specific control mechanism.

Options are:


- Obey — Obey Scanner Configuration Host Commands
- Ignore — Ignore Scanner Configuration Host Commands

	 USB-OEM Interface Options = Obey
 USB-OEM Interface Options = Ignore	

Data Format



GLOBAL PREFIX/SUFFIX on page 46
GLOBAL AIM ID on page 47
LABEL ID starting on page 48 <ul style="list-style-type: none">▪ Label ID: Pre-loaded Sets▪ Label ID: Set Individually Per Symbology▪ Label ID Control▪ Label ID Symbology Selection
CASE CONVERSION on page 56
CASE CONVERSION on page 56
CHARACTER CONVERSION on page 56

The features in this chapter can be used to build specific user-defined data into a message string. See "[References](#)" starting on page 217 for more detailed instructions on setting these features.




Global Prefix/Suffix

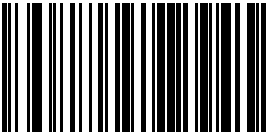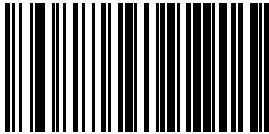Up to 20 ASCII characters may be added as a prefix (in a position before the bar code data) and/or as a suffix (in a position following the bar code data). See "Global Prefix/Suffix" on page 229 for more detailed programming instructions.

<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>	 <p>Set Global Prefix</p>
 <p>Set Global Suffix</p>	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>

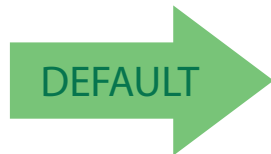Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



No Global Prefix
Global Suffix = 0x0D(CR)

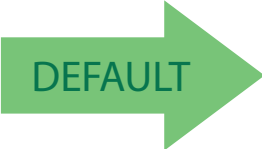


Global AIM ID



NOTE

This feature enables/disables addition of AIM IDs for all symbology types.

AIM label identifiers (as opposed to custom characters you select yourself as with label identifiers) can be included with scanned bar code data. See "Global AIM ID" on page 231 for more detailed programming instructions.

GS1-128 AIM ID

If Global AIM ID is disabled, the AIM ID for GS1-128 can be enabled/disabled independently. The AIM ID for GS1-128 is a]C1,]C2 or]C3.

AIM IDs for other symbologies can be enabled/disabled independently as well. Contact Customer Support for assistance.



Label ID




A Label ID is a customizable code of up to three ASCII characters (each can be one of hex 0x01-0xFF), used to identify a bar code (symbology) type. It can be appended previous to or following the transmitted bar code data depending upon how this option is enabled. This feature provides options for configuring custom Label IDs as a pre-loaded set (see "Label ID: Pre-loaded Sets" on page 48) or individually per symbology (see "Label ID: Set Individually Per Symbology" on page 49). If you wish to program the scanner to always include an industry standard label identifier for ALL symbology types, see the previous feature "Global AIM ID" on page 47.

Label ID: Pre-loaded Sets

The scanner supports two pre-loaded sets of Label IDs. shows the USA set and the EU set. See "Label ID: Pre-loaded Sets" on page 232 for more information concerning the pre-loaded sets that are provided.



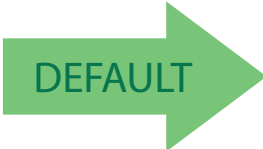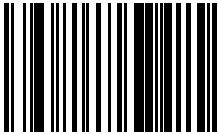When changing from one Label ID set to another, all other scanner configuration settings, including the host interface type, will be erased and set to the factory defaults. Any custom configuration or custom defaults will be lost.

	 Label ID Pre-loaded Set = USA Set
 Label ID Pre-loaded Set = EU Set	

Label ID: Set Individually Per Symbology

This feature configures a Label ID individually for a single symbology.

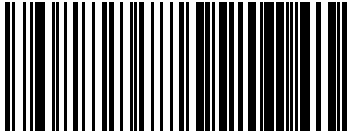



NOTE

This setting requires the scanning of bar codes from multiple sections. See "[Label ID: Set Individually Per Symbology](#)" on page 234 for more detailed programming instructions.

Label ID Control


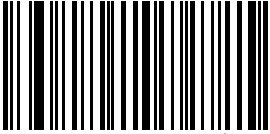
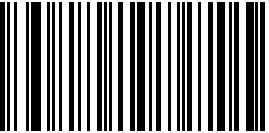
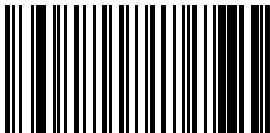
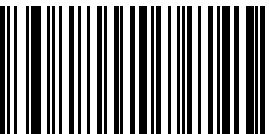
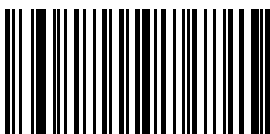
This option controls whether a Label ID is disabled, or sent as a prefix or suffix for a given symbology type.

	 <p>Label ID Transmission = Disable</p>
 <p>Label ID Transmission = Enable as Prefix</p>	
	 <p>Label ID Transmission = Enable as Suffix</p>
 <p>CANCEL</p>	<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>









Label ID Symbology Selection

This option selects the symbology for which a Label ID is to be configured. See "[Label ID: Set Individually Per Symbology](#)" on page 234 for full instructions.

	 Set UPC-A Label ID Character(s)
 Set UPC-A/P2 Label ID Character(s)	
	 Set UPC-A/P5 Label ID Character(s)
 Set UPC-E Label ID Character(s)	
	 Set UPC-E/P2 Label ID Character(s)
 Set UPC-E/P5 Label ID Character(s)	

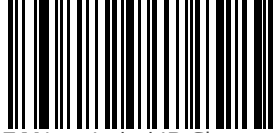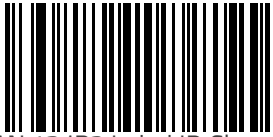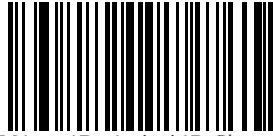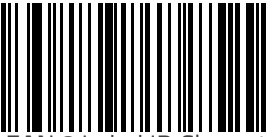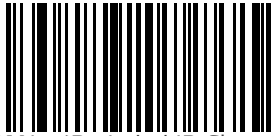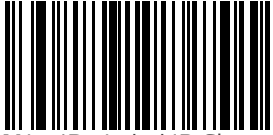Label ID Symbology Selection — continued

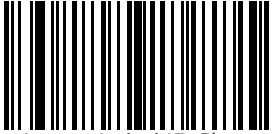
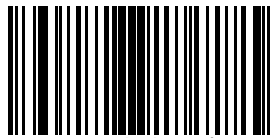

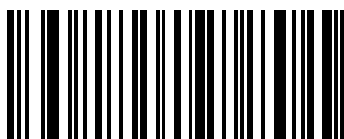
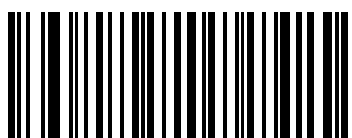
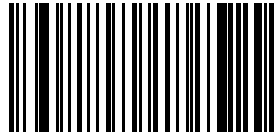
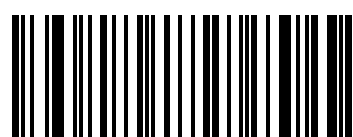
	 <p>Set EAN 13 Label ID Character(s)</p>
 <p>Set EAN 13/P2 Label ID Character(s)</p>	
	 <p>Set EAN 13/P5 Label ID Character(s)</p>
 <p>Set EAN 8 Label ID Character(s)</p>	
	 <p>Set EAN 8/P2 Label ID Character(s)</p>
 <p>Set EAN 8/P5 Label ID Character(s)</p>	




Label ID Symbology Selection — continued

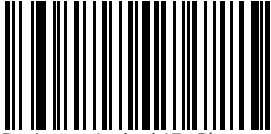
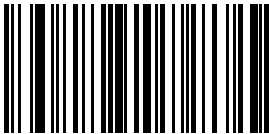
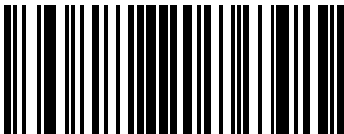

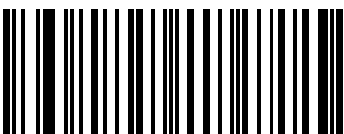
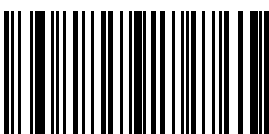
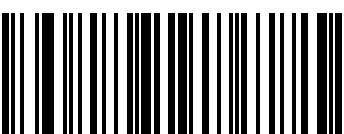
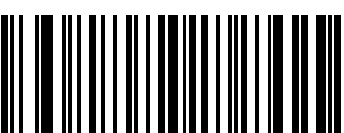
	 Set GS1 DataBar Omnidirectional Label ID Character(s)
 Set GS1 DataBar Expanded Label ID Character(s)	
	 Set GS1 DataBar Limited Label ID Character(s)
 Set Code 39 Label ID Character(s)	
	 Set Code 32 Label ID Character(s)
 Set Code 39 CIP Label ID Character(s)	

Label ID Symbology Selection — continued







 <p>Set Code 128 Label ID Character(s)</p>	
	 <p>Set GS1-128 Label ID Character(s)</p>
 <p>Set Interleaved 2 of 5 Label ID Character(s)</p>	
	 <p>Set Interleaved 2 of 5 CIP HR Label ID Character(s)</p>
 <p>Set Datalogic 2 of 5 CIP HR Label ID Character(s)</p>	
	 <p>Set Codabar Label ID Character(s)</p>
 <p>Set ABC Codabar Label ID Character(s)</p>	



Label ID Symbology Selection — continued

 <p>Set Code 11 Label ID Character(s)</p>	
	 <p>Set Standard 2 of 5 Label ID Character(s)</p>
 <p>Set Industrial 2 of 5 Label ID Character(s)</p>	
	 <p>Set ISSN Label ID Character(s)</p>
 <p>Set IATA Label ID Character(s)</p>	
	 <p>Set Concatenated ISBT 128 Label ID Character(s)</p>
 <p>Set MSI Label ID Character(s)</p>	
	 <p>Set Code 93 Label ID Character(s)</p>

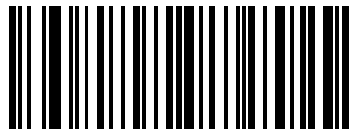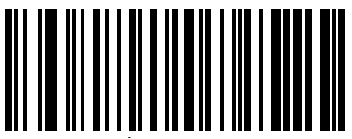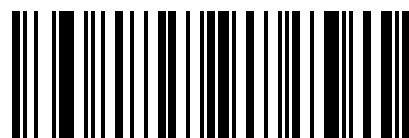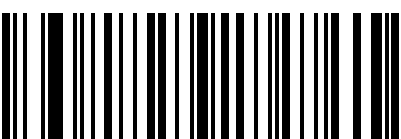Label ID Symbology Selection — continued

 <p>Set Codablock F Label ID Character(s)</p>	
	 <p>Set Code 4 Label ID Character(s)</p>
 <p>Set Code 5 Label ID Character(s)</p>	
	 <p>Set Follett 2 of 5 Label ID Character(s)</p>
 <p>Set ISBN Label ID Character(s)</p>	
	 <p>Set Concatenated ISBT Label ID Character(s)</p>



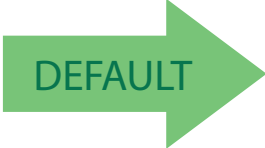
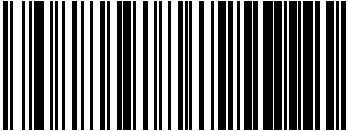
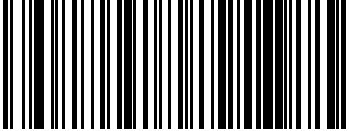
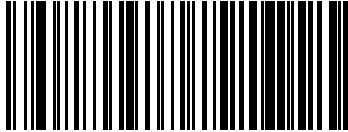
Case Conversion

This feature allows conversion of the case of all alphabetic characters to upper or lower case.



NOTE


Case conversion affects **ONLY** scanned bar code data, and does not affect Label ID, Prefix, Suffix, or other appended data.

	 Case Conversion = Disable (no case conversion)
 Case Conversion = Convert to upper case	
	 Case Conversion = Convert to lower case

Character Conversion

Character conversion is an eight byte configuration item. The eight bytes are 4 character pairs represented in hexadecimal ASCII values. The first character in the pair is the character that will be converted. The second character in the pair is the character to convert to. If the character to convert in a pair is FF, then no conversion is done. See "[Character Conversion](#)" on page 236 for more detailed programming instructions.

	 Configure Character Conversion
--	--

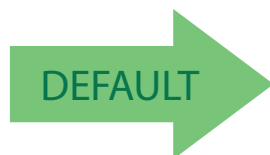

0xFFFFFFFFFFFFFF(N
o character conversion)

Reading Parameters

DOUBLE READ TIMEOUT on page 58	SELECT AUDIO JINGLE FOR POWER-UP EVENT on page 68
LABEL GONE TIMEOUT on page 60	SELECT AUDIO JINGLE FOR GOOD READ EVENT on page 70
TIMEOUT: ENTER LOW POWER STATE on page 61	GOOD READ: WHEN TO INDICATE on page 73
TIMEOUT: ENTER STANDBY STATE on page 63	GOOD READ BEEP TYPE on page 74
TIMEOUT: LASER OFF AFTER SINGLE LINE SCAN on page 65	GOOD READ BEEP FREQUENCY on page 74
TOUCH BUTTON OPTION on page 66	GOOD READ SPEAKER VOLUME on page 75
LED AND SPEAKER INDICATORS on page 66	GOOD READ BEEP LENGTH on page 76
POWER ON ALERT on page 66	GOOD READ LED DURATION on page 77
AUDIO JINGLE ENABLE on page 67	SCAN MODES on page 78

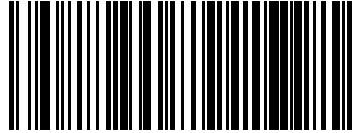
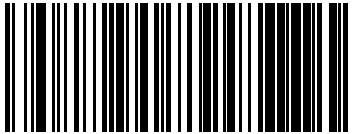

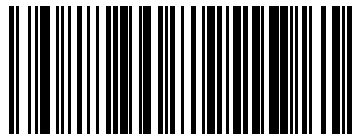
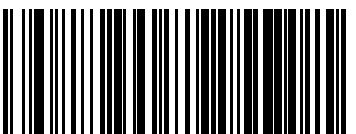

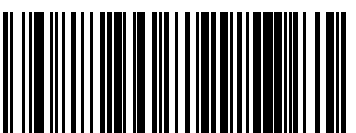


Double Read Timeout

To prevent a double read of the same label, the Double Read Timeout sets the minimum time allowed between reads of labels of the same symbology and data. If the unit reads a label and sees the same label again within the Double Read Timeout, the second read of the label will be ignored. Double Read Timeout does not apply to scan modes that require a trigger pull for each label that is read.

	 Double Read Timeout = 0.1 Second
 Double Read Timeout = 0.2 Second	
	 Double Read Timeout = 0.3 Second
 Double Read Timeout = 0.4 Second	


Double Read Timeout — continued

	 <p>Double Read Timeout = 0.5 Second</p>
 <p>Double Read Timeout = 0.6 Second</p>	
	 <p>Double Read Timeout = 0.7 Second</p>
 <p>Double Read Timeout = 0.8 Second</p>	
	 <p>Double Read Timeout = 0.9 Second</p>
 <p>Double Read Timeout = 1 Second</p>	



Label Gone Timeout

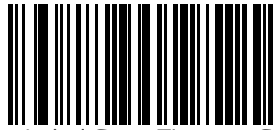
This feature sets the time after the last label segment is seen before the scanner prepares for a new label. The timeout can be set within a range of 10 milliseconds to 2,550 milliseconds (2.55 seconds) in 10ms increments. Label Gone Timeout does not apply to scan modes that require a trigger pull for each label that is read. See [Label Gone Timeout on page 237](#) for more detailed programming instructions.




Select Label Gone Timeout Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

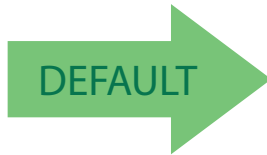Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



016 = Timeout of 160 ms



Timeout: Enter Low Power State

Specifies the Low Power timeout in minutes.

Upon having been inactive for this period of time, the scanner will enter a Low Power state where it is running at a limited speed, but is still able to decode.



NOTE

When this feature is set as Disabled, the scanner will never enter this state.

To exit this state, either press the button on the top of the scanner or read a label.




NOTE

If the feature [Touch Button Option](#) has been set to "Disabled," the button will not trigger single line scanning and the *scanner will never enter low power state and standby state.*


	 Enter Low Power Timeout = Disabled
 Enter Low Power Timeout = 1 Minute	
	 Enter Low Power Timeout = 2 Minutes
 Enter Low Power Timeout = 3 Minutes	
	 Enter Low Power Timeout = 5 Minutes



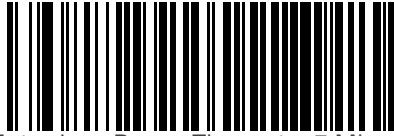
Timeout: Enter Low Power State — continued




Enter Low Power Timeout = 7 Minutes

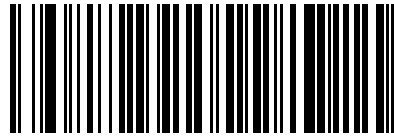


Enter Low Power Timeout = 10 Minutes

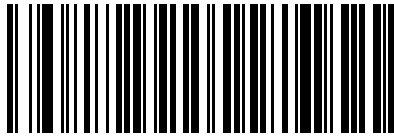


Enter Low Power Timeout = 15 Minutes

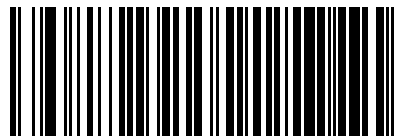

Enter Low Power Timeout = 20 Minutes

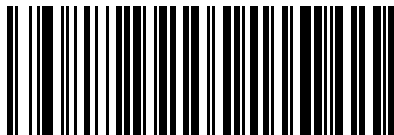


Enter Low Power Timeout = 30 Minutes

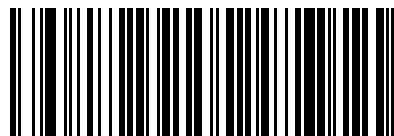

Enter Low Power Timeout = 60 Minutes



Enter Low Power Timeout = 90 Minutes



Timeout: Enter Standby State

Specifies the standby timeout in minutes.

Upon having been in Low Power state (see [page 61](#)) for this period of time, the scanner will enter a Standby state where the laser and motor are turned off and the scanner is not able to decode a label.



NOTE

When this feature is set as Disabled, the scanner will never enter this state.

The standby timer starts only after the low power timeout has elapsed.

If you wish the scanner motor and laser to completely power off after 10 minutes, you must be sure that the timeout periods for low power and standby total 10 minutes.

To exit this state, press the button on the top of the scanner.




NOTE

If the feature [Touch Button Option](#) has been set to "Disabled," the button will not trigger single line scanning and the *scanner will never enter low power state and standby state.*


	 Enter Standby Timeout = Disabled
 Enter Standby Timeout = 1 Minute	
	 Enter Standby Timeout = 2 Minutes
 Enter Standby Timeout = 3 Minutes	
	 Enter Standby Timeout = 5 Minutes



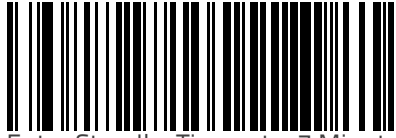
Timeout: Enter Standby State — continued




Enter Standby Timeout = 7 Minutes

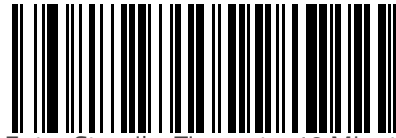


Enter Standby Timeout = 10 Minutes

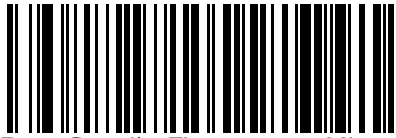


Enter Standby Timeout = 15 Minutes

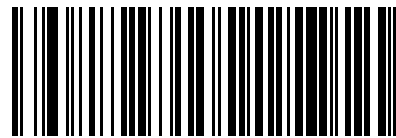


Enter Standby Timeout = 20 Minutes

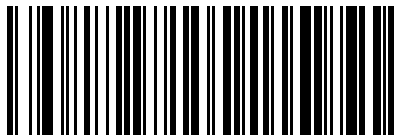

Enter Standby Timeout = 30 Minutes

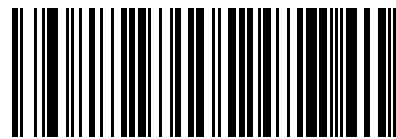

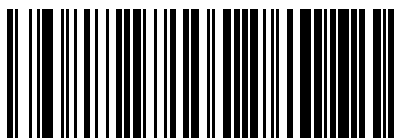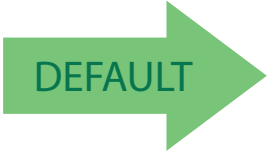
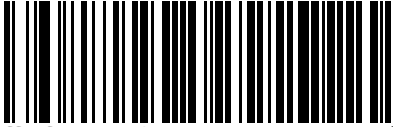
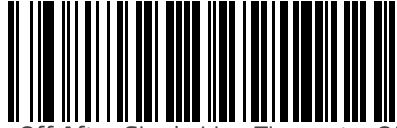

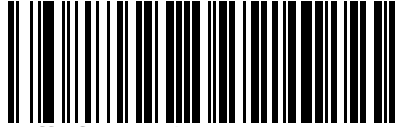

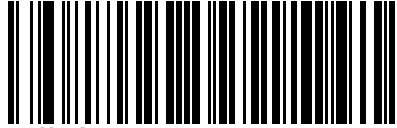
Enter Standby Timeout = 60 Minutes



Enter Standby Timeout = 90 Minutes

Timeout: Laser Off After Single Line Scan

As described earlier (see [Capacitive Touch Button on page 2](#)), pressing the top button can cause the scanner to enter single scan line operation, allowing the scanner to more easily target and read truncated bar codes, or aim at a single label from amongst multiple bar codes. This timeout defines the duration of time before the laser is turned off after the button (trigger) is released.




	 <p>Laser Off After Single Line Timeout = Don't turn off the Laser</p>
 <p>Laser Off After Single Line Timeout = Off after 1 Second</p>	
	 <p>Laser Off After Single Line Timeout = Off after 2 Seconds</p>
 <p>Laser Off After Single Line Timeout = Off after 3 Seconds</p>	
	 <p>Laser Off After Single Line Timeout = Off after 5 Seconds</p>
 <p>Laser Off After Single Line Timeout = Off after 8 Seconds</p>	



Touch Button Option

The capacitive touch button can optionally be disabled so that the scanner will not generate a single line when the button is pressed. With the button disabled, it is not possible to wake up the scanner, so low power state and standby state are automatically disabled. This means the scanner will not go to sleep.

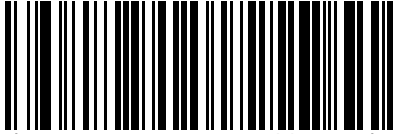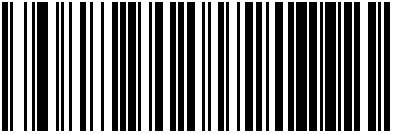When this option is enabled (this is the default choice) the scanner will behave normally. When the button is pressed, the scanner enters single scan line mode or wakes the scanner up if it is currently asleep.

	 <p>Touch Button Option = Disable Touch Button</p>
 <p>Touch Button Option = Enable Touch Button</p>	

LED and Speaker Indicators

Power On Alert

Disables or enables the indication (from the Speaker) that the scanner is receiving power.

	 <p>Power On Alert = Disable (No Audible Indication)</p>
 <p>Power On Alert = Power-up Beep</p>	

Audio Jingle Enable

This option determines whether the scanner will sound predefined 'Jingles'¹ or traditional beep sounds to indicate good read and power-up events.

See the following two parameters (starting on [page 68](#)) to select which preloaded Jingle to sound upon power-up or good read events.

	 Audio Jingle = Disable (Use traditional beep sounds)
 Audio Jingle = Enable Jingles	

1. A 'Jingle' is a short, user-defined tune uploaded via Datalogic Aladdin™ configuration software.



Select Audio Jingle for Power-up Event

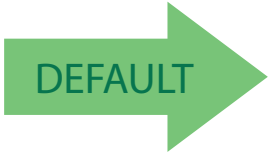
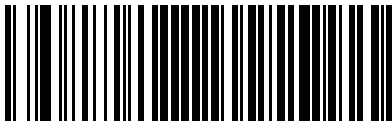

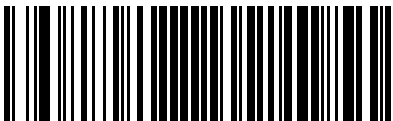
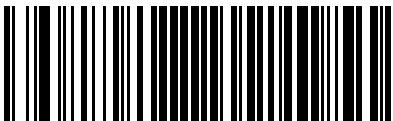

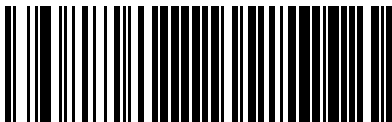
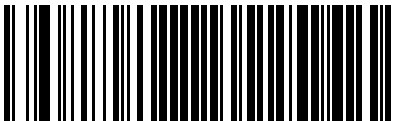
This parameter selects which preloaded Jingle¹ to use in indicating scanner power-up.



NOTE








The previous option, **Audio Jingle Enable**, must be enabled for this selection to take effect.

After uploading up to fifteen (15) Jingles to the scanner using the Aladdin™ configuration utility, use this setting to designate which of the Jingles (1-15) or the built-in Jingle will be sounded to indicate scanner power-up. The built-in Jingle for power-up is Dialtone.wav.

	 Audio Jingle on Power-up = Use built-in power-up Jingle
 Audio Jingle on Power-up = Jingle #1	
 Audio Jingle on Power-up = Jingle #2	 Audio Jingle on Power-up = Jingle #2
 Audio Jingle on Power-up = Jingle #3	
 Audio Jingle on Power-up = Jingle #4	 Audio Jingle on Power-up = Jingle #4
 Audio Jingle on Power-up = Jingle #5	


1. A 'Jingle' is a short, user-defined tune uploaded via Datalogic Aladdin™ configuration software.

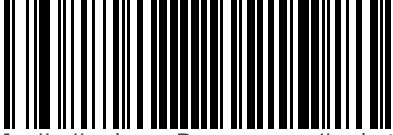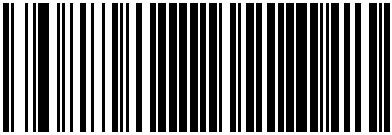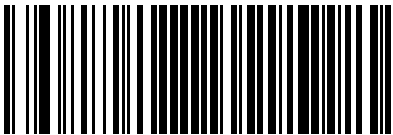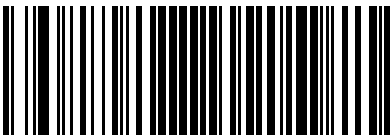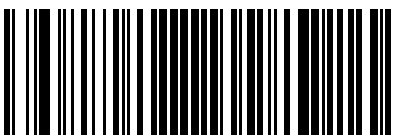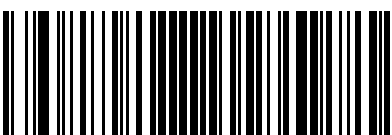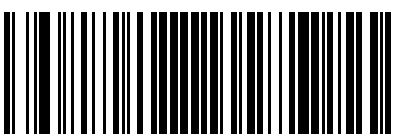Select Audio Jingle for Power-up Event — cont.


	 <p>Audio Jingle on Power-up = Jingle #6</p>
 <p>Audio Jingle on Power-up = Jingle #7</p>	
	 <p>Audio Jingle on Power-up = Jingle #8</p>
 <p>Audio Jingle on Power-up = Jingle #9</p>	
	 <p>Audio Jingle on Power-up = Jingle #10</p>
 <p>Audio Jingle on Power-up = Jingle #11</p>	
	 <p>Audio Jingle on Power-up = Jingle #12</p>



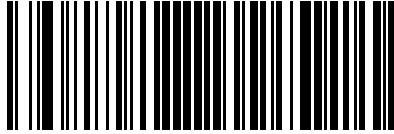
Select Audio Jingle for Power-up Event — cont.



Audio Jingle on Power-up = Jingle #13

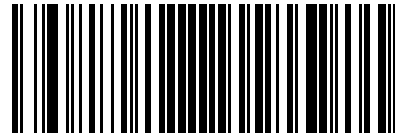

Audio Jingle on Power-up = Jingle #14

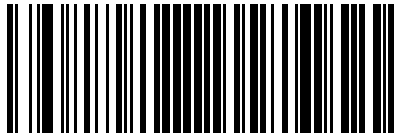

Audio Jingle on Power-up = Jingle #15

Select Audio Jingle for Good Read Event

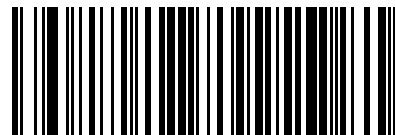
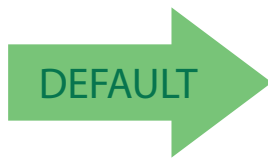
This parameter selects which preloaded Jingle¹ to use in indicating a good read event.



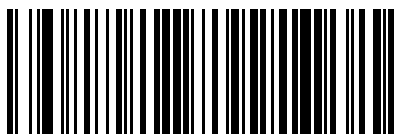
NOTE

The previous option, [Audio Jingle Enable on page 67](#), must be enabled for this selection to take effect.

After uploading up to fifteen (15) Jingles to the scanner using the Aladdin™ configuration utility, use this setting to designate which of the Jingles (1-15) will be sounded when the scanner performs a good read.





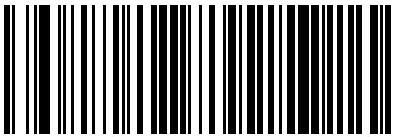
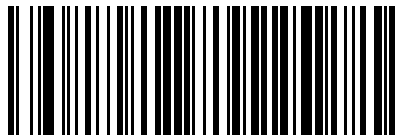

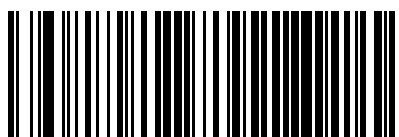
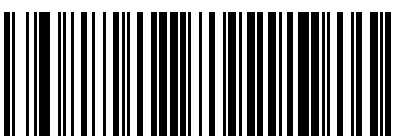
Audio Jingle on Good Read = Use built-in Good Read Jingle (Shutter.wav)



Audio Jingle on Good Read = Jingle #1

1. A 'Jingle' is a short, user-defined tune uploaded via Datalogic Aladdin™ configuration software.

Select Audio Jingle for Good Read Event — cont.

	 <p>Audio Jingle on Good Read = Jingle #2</p>
 <p>Audio Jingle on Good Read = Jingle #3</p>	
	 <p>Audio Jingle on Good Read = Jingle #4</p>
 <p>Audio Jingle on Good Read = Jingle #5</p>	
	 <p>Audio Jingle on Good Read = Jingle #6</p>
 <p>Audio Jingle on Good Read = Jingle #7</p>	
	 <p>Audio Jingle on Good Read = Jingle #8</p>



Select Audio Jingle for Good Read Event — cont.



Audio Jingle on Good Read = Jingle #9



Audio Jingle on Good Read = Jingle #10



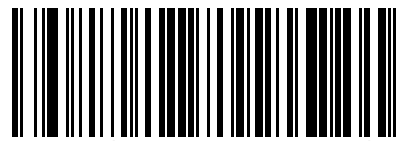
Audio Jingle on Good Read = Jingle #11




Audio Jingle on Good Read = Jingle #12



Audio Jingle on Good Read = Jingle #13



Audio Jingle on Good Read = Jingle #14

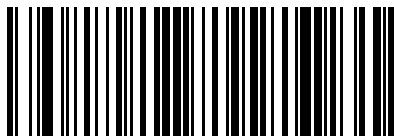

Audio Jingle on Good Read = Jingle #15

Good Read: When to Indicate

This feature specifies when the scanner will provide indication (beep or jingle and/or LED) upon successfully reading a bar code. Choices are:


- Good Read = Indicate after decode
- Good Read = Indicate after transmit
- Good Read = Indicate after CTS goes inactive, then active



This option, which uses CTS, is only valid for RS-232 interfaces.

NOTE

	 Indicate Good Read = After Decode
 Indicate Good Read = After Transmit	
	 Indicate Good Read = After CTS Goes Inactive, Then Active



Good Read Beep Type

Specifies whether the good read beep has a mono or bitonal beep sound.

	 <p>Good Read Beep Type = Mono</p>
 <p>Good Read Beep Type = Bitonal</p>	

Good Read Beep Frequency

Adjusts the good read beep to sound at a selectable low, medium or high frequency, selectable from the list below. (Controls the speaker's pitch/tone.)

	 <p>Good Read Beep Frequency = Low</p>
 <p>Good Read Beep Frequency = Medium</p>	
	 <p>Good Read Beep Frequency = High</p>

Good Read Speaker Volume

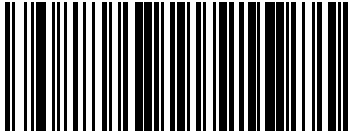
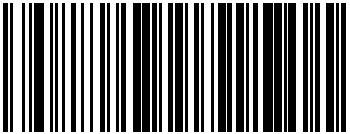

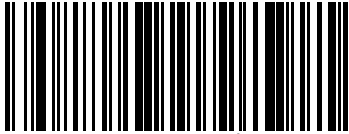
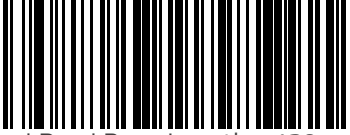


Selects the speaker volume (loudness) upon a good read Jingle or beep. There are three selectable volume levels.

	 Good Read Speaker Volume = Speaker Off
 Good Read Speaker Volume = Low	
	 Good Read Speaker Volume = Medium
 Good Read Speaker Volume = High	



Good Read Beep Length

Specifies the duration of a good read beep.



	 Good Read Beep Length = 60 msec
 Good Read Beep Length = 80 msec	
	 Good Read Beep Length = 100 msec
 Good Read Beep Length = 120 msec	
	 Good Read Beep Length = 140 msec
 Good Read Beep Length = 160 msec	


Good Read Beep Length — continued

	 Good Read Beep Length = 180 msec
 Good Read Beep Length = 200 msec	

Good Read LED Duration

This feature specifies the amount of time that the Good Read LED remains on following a good read. The good read LED on time can be set within a range of 0.1 to 25.5 seconds in 100ms increments. See [Good Read LED Duration on page 238](#) for more detailed programming instructions.

 Select Good Read LED Duration Setting	To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.	 CANCEL

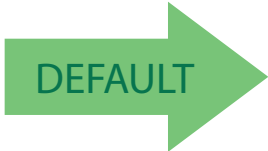

020 = Good Read LED stays on for 2 seconds.



NOTE

Indicators are dimmed during sleep.

Scanning Features

Scan Modes

Raster Mode

Normally, the scanner operates in an omnidirectional "raster" mode, simultaneously projecting 20 lines which form an omnidirectional scan pattern used for 1D reading functions.

Single Scan Line Mode

When the scanner's top Touch Button is actuated, the scanner enters single scan line operation, allowing the scanner to more easily target and read truncated bar codes, or aim at a single label from amongst multiple bar codes as an ordinary handheld scanner would do. The top green LED will change to red as the user touches the top green button. For example, it is recommended to use single line operation to read the programming bar codes presented in this manual.

Symbologies

Introduction

The scanner supports the following symbologies (bar code types). Options for each symbology are included in this chapter.

- UPC-A
- UPC-E
- EAN 13
- EAN 13 (JAN 13)
- EAN 8 (JAN 8)
- Add-Ons
- GS1 DataBar™ Omnidirectional
- GS1 DataBar™ Expanded
- GS1 DataBar™ Limited
- Code 39
- Code 32 (Italian Pharmaceutical)
- Code 39 CIP (French Pharmaceutical)
- Code 128
- GS1-128
- Interleaved 2 of 5 (I 2 of 5)
- Interleaved 2 of 5 CIP HR
- Datalogic 2 of 5
- Codabar
- ABC Codabar
- Code 11
- Standard 2 of 5
- Industrial 2 of 5
- IATA
- ISBT 128
- MSI
- Code 93
- Codablock F
- Code 4
- Code 5
- Follett 2 of 5
- BC412
- Plessey

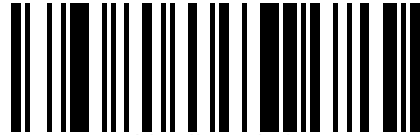
Standard Factory Settings for Symbologies

Default settings are indicated at each feature/option with a green arrow. Also reference [Appendix B, Standard Defaults](#) for a listing of the most widely used set of standard factory settings. That section also provides space to record any custom settings needed or implemented for your system.



Disable All Symbologies

Scan this label to disable all symbologies.



Disable all symbologies

Coupon Control

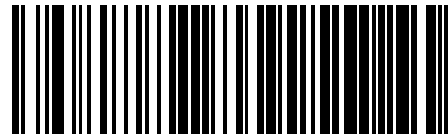
This feature is used to control the method of processing coupon labels.

Options are:


- Allow all — allow all coupon bar codes to be decoded
- Enable only UPC/EAN — enables only UPC/EAN coupon decoding
- Enable only GS1 DataBar — enables only GS1 DataBar coupon decoding

To set this feature:


1. Scan the Enter/Exit bar code.
2. Scan either the enable or disable bar code below. You'll need to cover any unused bar codes on this and the facing page to ensure that the scanner sees only the bar code you intend to scan.
3. Complete the programming sequence by scanning the Enter/Exit bar code.



Coupon Control = Allow all

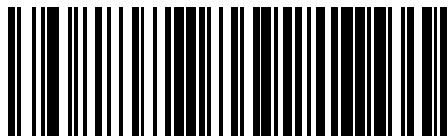

Coupon Control = Enable only UPC/EAN

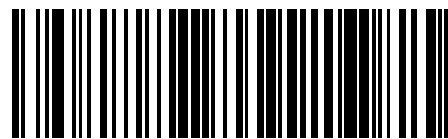


Coupon Control = Enable only GS1 DataBar

UPC-A

The following options apply to the UPC-A symbology.

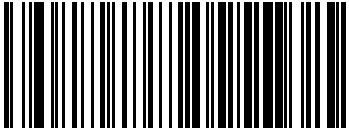
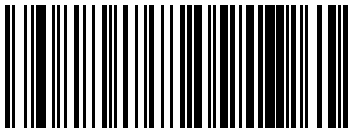

UPC-A Enable/Disable

When disabled, the scanner will not read UPC-A bar codes.

	 UPC-A = Disable
 UPC-A = Enable	

UPC-A Check Character Transmission

Enable this option to transmit the check character along with UPC-A bar code data.

	 UPC-A Check Character Transmission = Don't Send
 UPC-A Check Character Transmission = Send	



Expand UPC-A to EAN-13

Expands UPC-A data to the EAN-13 data format. Selecting this feature also changes the symbology ID to match those required for EAN-13.

	 UPC-A to EAN-13 = Don't Expand
 UPC-A to EAN-13 = Expand	

UPC-A Number System Character Transmission

This feature enables/disables transmission of the UPC-A number system character.

	 UPC-A Number System Character = Do not transmit
 UPC-A Number System Character = Transmit	

In-Store Minimum Reads

This feature specifies the minimum number of consecutive times an in-store label must be decoded before it is accepted as good read.

In-store labels are defined as UPC-A labels with a number-system character of 2 or 4 as well as EAN 8 and EAN 13 labels with a Flag1 character of 2 or an EAN 13 label starting with the three characters '980'.

	 In-Store Minimum Reads = 1
 In-Store Minimum Reads = 2	
	 In-Store Minimum Reads = 3
 In-Store Minimum Reads = 4	






UPC-E

The following options apply to the UPC-E symbology.

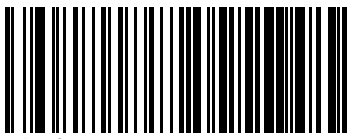
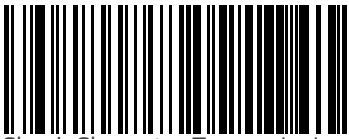

UPC-E Enable/Disable

When disabled, the scanner will not read UPC-E bar codes.

	 <p>UPC-E = Disable</p>
 <p>UPC-E = Enable</p>	


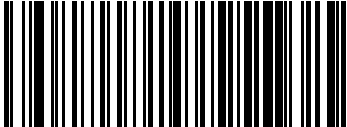

UPC-E Check Character Transmission

Enable this option to transmit the check character along with UPC-E bar code data.

	 <p>UPC-E Check Character Transmission = Don't Send</p>
 <p>UPC-E Check Character Transmission = Send</p>	


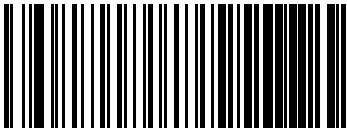

Expand UPC-E to EAN-13

Expands UPC-E data to the EAN-13 data format. Selecting this feature also changes the symbology ID to match those required for EAN-13.

	 UPC-E to EAN-13 = Don't Expand
 UPC-E to EAN-13 = Expand	

Expand UPC-E to UPC-A

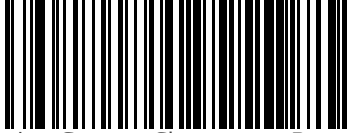
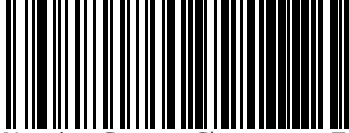

Expands UPC-E data to the UPC-A data format.

	 UPC-E to UPC-A = Don't Expand
 UPC-E to UPC-A = Expand	



UPC-E Number System Character Transmission

This feature enables/disables transmission of the UPC-E system number character.

	 UPC-E Number System Character = Do not transmit
 UPC-E Number System Character = Transmit	

UPC-E Minimum Read

This feature specifies the minimum number of consecutive times a UPC-E label must be decoded before it is accepted as good read.

	 UPC-E Minimum Reads = 1
 UPC-E Minimum Reads = 2	
	 UPC-E Minimum Reads = 3
 UPC-E Minimum Reads = 4	

EAN 13

The following options apply to the EAN 13 (Jan 13) symbology.

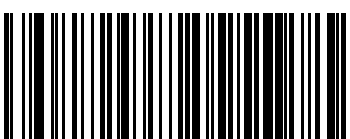

EAN 13 Enable/Disable

When disabled, the scanner will not read EAN 13/JAN 13 bar codes.

	 EAN 13 = Disable
 EAN 13 = Enable	

EAN 13 Check Character Transmission

Enable this option to transmit the check character along with EAN 13 bar code data.

	 EAN 13 Check Character Transmission = Don't Send
 EAN 13 Check Character Transmission = Send	



EAN-13 Flag 1 Character

Enables/disables transmission of an EAN/JAN13 Flag1 character. The Flag 1 character is the first character of the label.

	 EAN-13 Flag 1 Char= Don't transmit
 EAN-13 Flag 1 Char= Transmit	

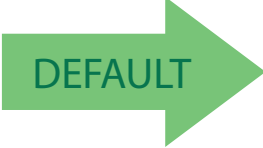


EAN-13 ISBN Conversion

This option enables/disables conversion of EAN 13/JAN 13 Bookland labels starting with 978 to ISBN labels.

	 EAN-13 ISBN Conversion = Disable
 EAN-13 ISBN Conversion = Convert to ISBN	


ISSN Enable/Disable

Enables/disables conversion of EAN/JAN13 Bookland labels starting with 977 to ISSN labels.

EAN 13 Minimum Reads

This feature specifies the minimum number of consecutive times an EAN 13 label must be decoded before it is accepted as good read.






EAN 8

The following options apply to the EAN 8 (Jan 8) symbology.

EAN 8 Enable/Disable

When disabled, the scanner will not read EAN 8/JAN 8 bar codes.

	 <p>EAN 8 = Disable</p>
 <p>EAN 8 = Enable</p>	

EAN 8 Check Character Transmission

Enable this option to transmit the check character along with EAN 8 bar code data.

	 <p>EAN 8 Check Character Transmission = Don't Send</p>
 <p>EAN 8 Check Character Transmission = Send</p>	

Expand EAN 8 to EAN 13

Enable this option to expand EAN 8/JAN 8 labels to EAN 13/JAN 13.

	 <p>Expand EAN 8 to EAN 13 = Disable</p>
 <p>Expand EAN 8 to EAN 13 = Enable</p>	

EAN 8 Minimum Reads

This feature specifies the minimum number of consecutive times an EAN 8 (Jan 8) label must be decoded before it is accepted as good read.

	 <p>EAN 8 Minimum Reads = 1</p>
 <p>EAN 8 Minimum Reads = 2</p>	
	 <p>EAN 8 Minimum Reads = 3</p>
 <p>EAN 8 Minimum Reads = 4</p>	



UPC/EAN Global Settings

This section provides configuration settings for UPC-A, UPC-E, EAN 13 and EAN 8 symbologies, and affects all of these unless otherwise marked for each feature description.

UPC/EAN Decoding Level

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more detailed programming instructions.



 <p>UPC/EAN Decoding Level = 1</p>	
	 <p>UPC/EAN Decoding Level = 2</p>
 <p>UPC/EAN Decoding Level = 3</p>	
	 <p>UPC/EAN Decoding Level = 4</p>
 <p>UPC/EAN Decoding Level = 5</p>	

UPC/EAN Price Weight Check

This feature enables/disables calculation and verification of price/weight check digits.

Options are

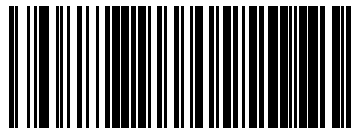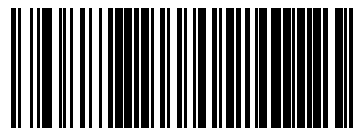- Disabled
- Enable 4-digit price-weight check-digit calculation
- Enable 5-digit price-weight check-digit calculation
- Enable European 4-digit price-weight check-digit calculation
- Enable European 5-digit price-weight check-digit calculation

	 Price Weight Check = Disabled
 Price Weight Check = 4-digit price-weight check	
	 Price Weight Check = 5-digit price-weight check
 Price Weight Check = European 4-digit price-weight check	
	 Price Weight Check = European 5-digit price-weight check



UPC-A Minimum Reads

This feature specifies the minimum number of consecutive times a UPC-A label must be decoded before it is accepted as good read.

	 UPC-A Minimum Reads = 1
 UPC-A Minimum Reads = 2	
	 UPC-A Minimum Reads = 3
 UPC-A Minimum Reads = 4	

Add-Ons

The following features apply to optional add-ons.



NOTE

Contact Customer Support for advanced programming of optional and conditional add-ons.

Optional Add-ons

The scanner can be enabled to optionally read the following add-ons (supplementals):

- P2
- P5



NOTE

If a UPC/EAN base label and a an add-on are both decoded, the scanner will transmit the base label and add-on. If a UPC/EAN base label is decoded without an add-on, the base label will be transmitted without an add-on.


Conditional add-on settings (if enabled) are considered by the scanner before optional add-on settings.

	 <p>Optional Add-Ons = Disable P2</p>
 <p>Optional Add-Ons = Enable P2</p>	
	 <p>Optional Add-Ons = Disable P5</p>
 <p>Optional Add-Ons = Enable P5</p>	




Optional Add-On Timer

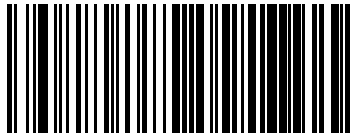
This option sets the time the scanner will look for an add-on when an add-on fragment has been seen and optional add-ons are enabled.




Optional Add-on Timer = 10ms

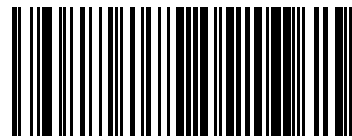


Optional Add-on Timer = 20ms

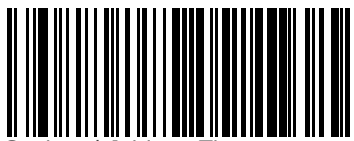


Optional Add-on Timer = 30ms

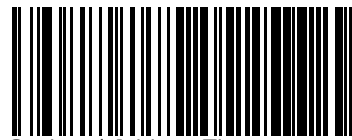


Optional Add-on Timer = 50ms

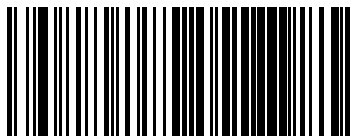

Optional Add-on Timer = 70ms

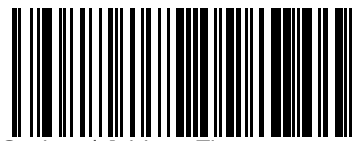

Optional Add-on Timer = 100ms

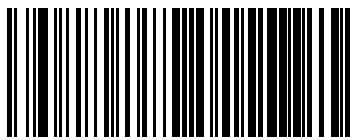

Optional Add-on Timer = 160ms

P2 Add-Ons Minimum Reads

This feature specifies the minimum number of times a P2 add-on must be read before it is marked as valid and then combined with a base label.

	 P2 Add-Ons Minimum Reads = 1
 P2 Add-Ons Minimum Reads = 2	
	 P2 Add-Ons Minimum Reads = 3
 P2 Add-Ons Minimum Reads = 4	



P5 Add-Ons Minimum Reads

This feature specifies the minimum number of times a P5 add-on must be read before it is marked as valid and then combined with a base label.

	 P5 Add-Ons Minimum Reads = 1
 P5 Add-Ons Minimum Reads = 2	
	 P5 Add-Ons Minimum Reads = 3
 P5 Add-Ons Minimum Reads = 4	

GS1 DataBar™ Omnidirectional

The following options apply to the GS1 DataBar Omnidirectional (formerly RSS-14) symbology.

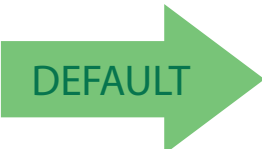

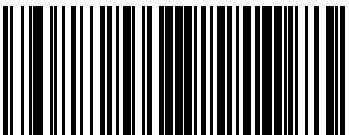
GS1 DataBar Omnidirectional Enable/Disable

When disabled, the scanner will not read GS1 DataBar Omnidirectional bar codes.

	 <p>GS1 DataBar Omnidirectional = Disable</p>
 <p>GS1 DataBar Omnidirectional = Enable</p>	

GS1 DataBar Omnidirectional GS1-128 Emulation

When enabled, GS1 DataBar Omnidirectional bar codes will be translated to the GS1-128 label data format.

	 <p>GS1 DataBar Omnidirectional GS1-128 Emulation = Disable</p>
 <p>GS1 DataBar Omnidirectional GS1-128 Emulation = Enable</p>	



GS1 DataBar Omnidirectional Minimum Reads

This feature specifies the minimum number of consecutive times a GS1 DataBar Omnidirectional label must be decoded before it is accepted as good read.

	 GS1 DataBar Omnidirectional Minimum Reads = 1
 GS1 DataBar Omnidirectional Minimum Reads = 2	
	 GS1 DataBar Omnidirectional Minimum Reads = 3
 GS1 DataBar Omnidirectional Minimum Reads = 4	

GS1 DataBar™ Expanded

The following options apply to the GS1 DataBar Expanded (formerly RSS Expanded) symbology.




GS1 DataBar Expanded Enable/Disable

When disabled, the scanner will not read GS1 DataBar Expanded bar codes.

 DEFAULT	 GS1 DataBar Expanded = Disable
 GS1 DataBar Expanded = Enable	

GS1 DataBar Expanded GS1-128 Emulation

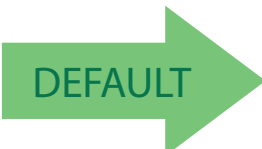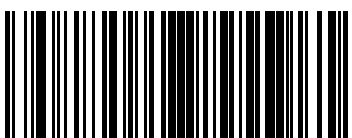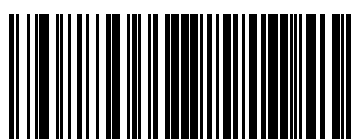When enabled, GS1 DataBar Expanded bar codes will be translated to the GS1-128 label data format.

 DEFAULT	 GS1 DataBar Expanded GS1-128 Emulation = Disable
 GS1 DataBar Expanded GS1-128 Emulation = Enable	



GS1 DataBar Expanded Minimum Reads

This feature specifies the minimum number of consecutive times a GS1 DataBar Expanded label must be decoded before it is accepted as good read.

	 GS1 DataBar Expanded Minimum Reads = 1
 GS1 DataBar Expanded Minimum Reads = 2	
	 GS1 DataBar Expanded Minimum Reads = 3
 GS1 DataBar Expanded Minimum Reads = 4	

GS1 DataBar Expanded Length Control

This feature specifies either variable length decoding or fixed length decoding for the GS1 DataBar Expanded symbology.

Variable Length — For variable-length decoding, a minimum length may be set.

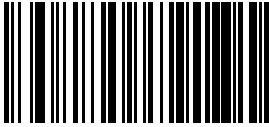
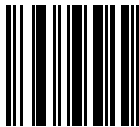
Fixed Length — For fixed-length decoding, two different lengths may be set.


	 GS1 DataBar Expanded Length Control = Variable Length
 GS1 DataBar Expanded Length Control = Fixed Length	

GS1 DataBar Expanded Set Length 1

This feature specifies one of the bar code lengths for [GS1 DataBar Expanded Length Control](#). Length 1 is the minimum label length if in [Variable Length Mode](#), or the first fixed length if in [Fixed Length Mode](#). Length includes the bar code's data characters only.

The length can be set from 1 to 74 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.

 Select GS1 DataBar Expanded Set Length 1 Setting	To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.	 CANCEL

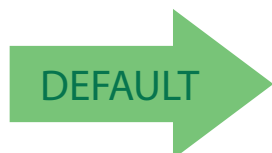


01 = Length 1 is 1 Character



GS1 DataBar Expanded Set Length 2

This feature specifies one of the bar code lengths for [GS1 DataBar Expanded Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the bar code's data characters only.

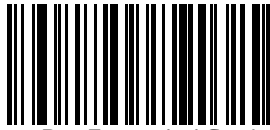
The length can be set from 1 to 74 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "[Set Length 2](#)" on page 241 for more detailed programming instructions.



Select GS1 DataBar Expanded Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

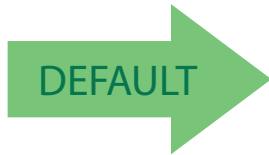Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



74 = Length 2 is 74 Characters

GS1 DataBar™ Limited

The following options apply to the GS1 DataBar Limited (formerly RSS Limited) symbology.


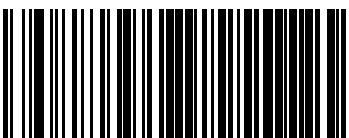
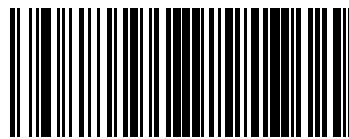
GS1 DataBar Limited Enable/Disable

When disabled, the scanner will not read GS1 DataBar Limited bar codes.

	 <p>GS1 DataBar Limited = Disable</p>
 <p>GS1 DataBar Limited = Enable</p>	

GS1 DataBar Limited GS1-128 Emulation

When enabled, GS1 DataBar Limited bar codes will be translated to the GS1-128 label data format.

	 <p>GS1 DataBar Limited GS1-128 Emulation = Disable</p>
 <p>GS1 DataBar Limited GS1-128 Emulation = Enable</p>	



GS1 DataBar Limited Minimum Reads

This feature specifies the minimum number of consecutive times a GS1 DataBar Limited label must be decoded before it is accepted as good read.

	 <p>GS1 DataBar Limited Minimum Reads = 1</p>
 <p>GS1 DataBar Limited Minimum Reads = 2</p>	
	 <p>GS1 DataBar Limited Minimum Reads = 3</p>
 <p>GS1 DataBar Limited Minimum Reads = 4</p>	

Code 39

The following options apply to the Code 39 symbology.

Code 39 Enable/Disable

When disabled, the scanner will not read Code 39 bar codes.

	 Code 39 = Disable
 Code 39 = Enable	



Code 39 Check Character Calculation

Enable this option to enable/disable calculation and verification of an optional Code 39 check character. When disabled, any check character in the label is treated as a data character.

	 Code 39 Check Character Calculation = Don't Calculate
 Code 39 Check Character Calculation = Calculate Std Check	
	 Code 39 Check Character Calculation = Calculate Mod 7 Check
 Code 39 Check Character Calculation = Enable Italian Post Check	
	 Code 39 Check Character Calculation = Enable Daimler Chrysler Check

Code 39 Check Character Transmission

Enable this option to transmit the check character along with Code 39 bar code data.

	 Code 39 Check Character Transmission = Don't Send
 Code 39 Check Character Transmission = Send	

Code 39 Start/Stop Character Transmission

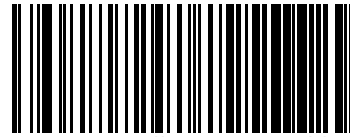
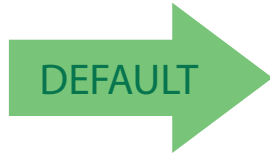
Enable this option to enable/disable transmission of Code 39 start and stop characters.

	 Code 39 Start/Stop Character Transmission = Don't Transmit
 Code 39 Start/Stop Character Transmission = Transmit	




Code 39 Full ASCII

In Code 39 decoding, this enables/disables the translation of Code 39 characters to Code 39 full-ASCII characters.



Code 39 Full ASCII = Disable

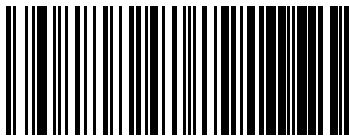

Code 39 Full ASCII = Enable

Code 39 Quiet Zones

This feature specifies the number of quiet zones for Code 39 labels. Quiet zones are blank areas at the ends of a bar code and are typically 10 times the width of the narrowest bar or space in the label.

 <p>Code 39 Quiet Zones = Quiet Zone on one side</p>	
	 <p>Code 39 Quiet Zones = Quiet Zones on two sides</p>
 <p>Code 39 Quiet Zones = Auto</p>	
	 <p>Code 39 Quiet Zones = Virtual Quiet Zones on two sides</p>
 <p>Code 39 Quiet Zones = Small Quiet Zones on two sides</p>	




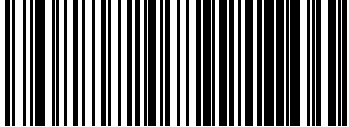
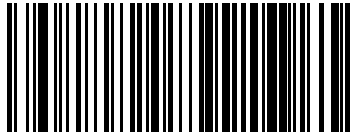
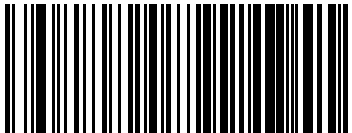

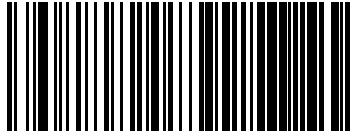

Code 39 Minimum Reads

This feature specifies the minimum number of consecutive times a Code 39 label must be decoded before it is accepted as good read.

	 Code 39 Minimum Reads = 1
 Code 39 Minimum Reads = 2	
	 Code 39 Minimum Reads = 3
 Code 39 Minimum Reads = 4	

Code 39 Decoding Level

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more detailed programming instructions.

	 Code 39 Decoding Level = Disabled
 Code 39 Decoding Level = 1	
	 Code 39 Decoding Level = 2
 Code 39 Decoding Level = 3	
	 Code 39 Decoding Level = 4
 Code 39 Decoding Level = 5	



Code 39 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 39 symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

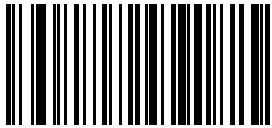

Fixed Length — For fixed length decoding, two different lengths may be set.


	 Code 39 Length Control = Variable Length
 Code 39 Length Control = Fixed Length	

Code 39 Set Length 1

This feature specifies one of the bar code lengths for [Code 39 Length Control](#). Length 1 is the minimum label length if in [Variable Length Mode](#), or the first fixed length if in [Fixed Length Mode](#). Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

The length can be set from 0 to 50 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.

 Select Code 39 Set Length 1 Setting	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 CANCEL

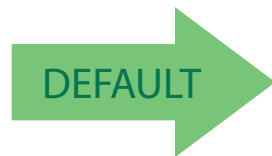


02 = Length 1 is 2 Characters



Code 39 Set Length 2

This feature specifies one of the bar code lengths for [Code 39 Length Control](#). Length 2 is the maximum label length if in [Variable Length Mode](#), or the second fixed length if in [Fixed Length Mode](#). Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

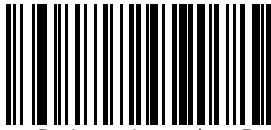
The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.



Select Code 39 Length 2 Setting

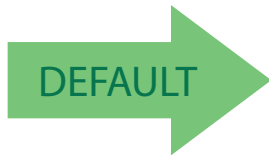To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

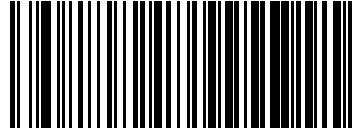

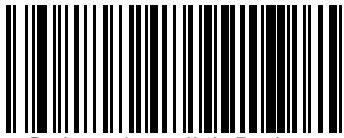
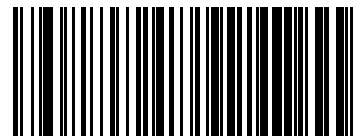
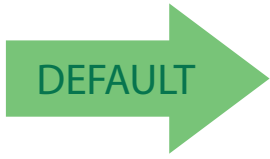
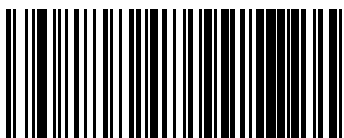
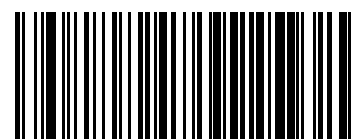
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



50 = Length 2 is 50 Characters






Code 39 Interdigit Ratio

This feature specifies the ratio between an intercharacter space and module for Code 39 labels.

	 <p>Code 39 Interdigit Ratio = Disable</p>
 <p>Code 39 Interdigit Ratio = 1</p>	
	 <p>Code 39 Interdigit Ratio = 2</p>
 <p>Code 39 Interdigit Ratio = 3</p>	
	 <p>Code 39 Interdigit Ratio = 4</p>
 <p>Code 39 Interdigit Ratio = 5</p>	



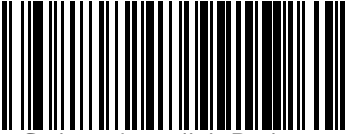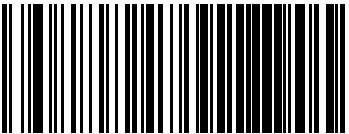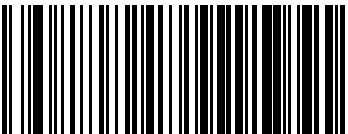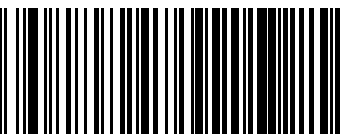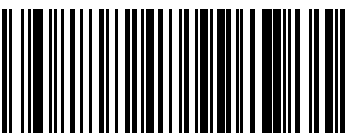Code 39 Interdigit Ratio — cont.

	 <p>Code 39 Interdigit Ratio = 6</p>
 <p>Code 39 Interdigit Ratio = 7</p>	
	 <p>Code 39 Interdigit Ratio = 8</p>
 <p>Code 39 Interdigit Ratio = 9</p>	
	 <p>Code 39 Interdigit Ratio = 10</p>

Code 39 Stitching

This option enables/disables stitching for Code 39 labels. When parts of a Code 39 bar code are presented to the scanner with this feature enabled, the bar code parts will be assembled by the scanner's software, and the data will be decoded if all bar code proofing requirements are met.

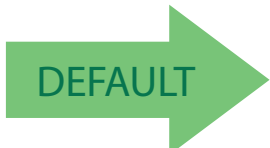
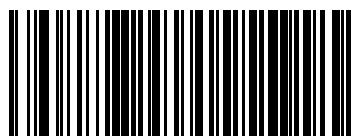
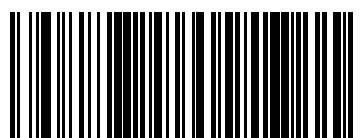
	 Code 39 Stitching = Disable
 Code 39 Stitching = Enable	

Code 32 (Italian Pharmaceutical)

The following options apply to the Code 32 symbology.

Code 32 Enable/Disable

When disabled, the scanner will not read Code 32 bar codes.

	 Code 32 = Disable
 Code 32 = Enable	



Code 32 Feature Setting Exceptions



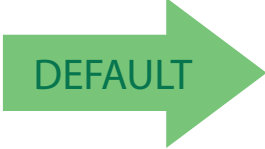
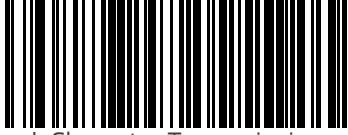
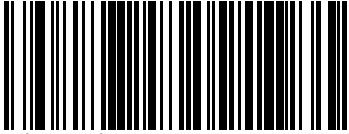
NOTE

The following features are set for Code 32 by using these Code 39 settings:

- "Code 39 Quiet Zones" on page 111
- "Code 39 Minimum Reads" on page 112
- "Code 39 Decoding Level" on page 113
- "Code 39 Interdigit Ratio" on page 117
- "Code 39 Stitching" on page 119

Code 32 Check Character Transmission

Enable this option to transmit the check character along with Code 32 bar code data.

	 <p>Code 32 Check Character Transmission = Don't Send</p>
 <p>Code 32 Check Character Transmission = Send</p>	

Code 32 Start/Stop Character Transmission

This option enables/disables transmission of Code 32 start and stop characters.

	 <p>Code 32 Start/Stop Character Transmission = Don't Transmit</p>
 <p>Code 32 Start/Stop Character Transmission = Transmit</p>	

Code 39 CIP (French Pharmaceutical)

The following options apply to the Code 39 CIP symbology.

Code 39 CIP Enable/Disable

Enables/Disables ability of the scanner to decode Code 39 CIP labels.



	 Code 39 CIP = Disable
 Code 39 CIP = Enable	

Code 128

The following options apply to the Code 128 symbology.

Code 128 Enable/Disable



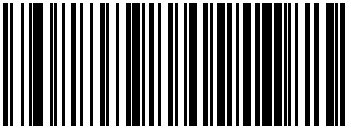
When disabled, the scanner will not read Code 128 bar codes.

	 Code 128 = Disable
 Code 128 = Enable	





Expand Code 128 to Code 39

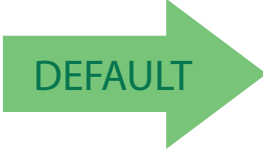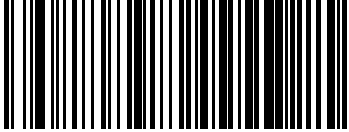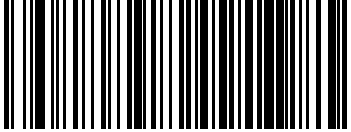This feature enables/disables expansion of Code 128 labels to Code 39 labels. When enabled, the label identifier for a Code 128 label shall be set to Code 39 and all Code 39 formatting control shall be applied to the label.

	 <p>Code 128 to Code 39 = Don't Expand</p>
 <p>Code 128 to Code 39 = Expand</p>	

Code 128 Check Character Transmission

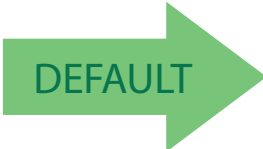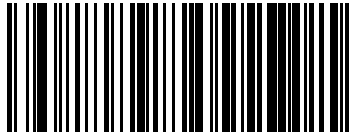Enable this option to transmit the check character along with Code 128 bar code data.

	 <p>Code 128 Check Character Transmission = Don't Send</p>
 <p>Code 128 Check Character Transmission = Send</p>	

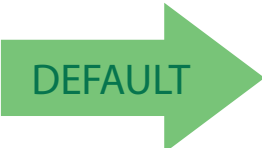

Code 128 Function Character Transmission

Enables/disables transmission of Code128 function characters 1, 2, 3, and 4.

	 Code 128 Function Character Transmission = Don't Send
 Code 128 Function Character Transmission = Send	

Code 128 Sub-Code Change Transmission

Enables/disables the transmission of 'Sub-Code exchange' characters (NOT transmitted by standard decoding).

	 Code 128 Sub-Code Change Transmission = Disable
 Code 128 Sub-Code Change Transmission = Enable	



Code 128 Quiet Zones

This feature specifies the number of quiet zones for Code 128 labels. Quiet zones are blank areas at the ends of a bar code and are typically 10 times the width of the narrowest bar or space in the label.

	 <p>Code 128 Quiet Zones = No Quiet Zones</p>
 <p>Code 128 Quiet Zones = Quiet Zone on one side</p>	
	 <p>Code 128 Quiet Zones = Quiet Zones on two sides</p>
 <p>Code 128 Quiet Zones = Auto</p>	
	 <p>Code 128 Quiet Zones = Virtual Quiet Zones on two sides</p>

Code 128 Minimum Reads

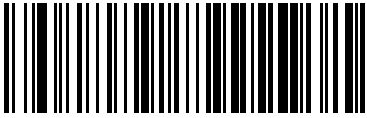
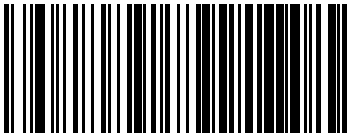
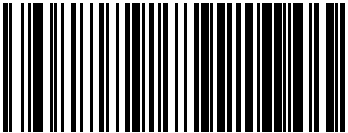
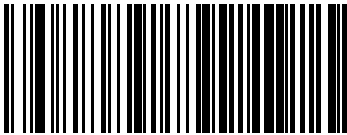

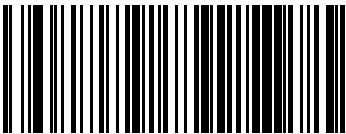
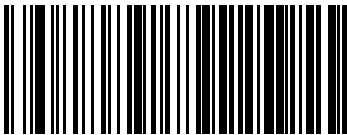
This feature specifies the minimum number of consecutive times a Code 128 label must be decoded before it is accepted as good read.

	 Code 128 Minimum Reads = 1
 Code 128 Minimum Reads = 2	
	 Code 128 Minimum Reads = 3
 Code 128 Minimum Reads = 4	



Code 128 Decoding Level

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more detailed programming instructions.

	 <p>Code 128 Decoding Level = Disabled</p>
 <p>Code 128 Decoding Level = 1</p>	
	 <p>Code 128 Decoding Level = 2</p>
 <p>Code 128 Decoding Level = 3</p>	
	 <p>Code 128 Decoding Level = 4</p>
 <p>Code 128 Decoding Level = 5</p>	

Code 128 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 128 symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

Fixed Length — For fixed length decoding, two different lengths may be set.

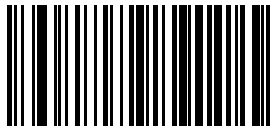
	 Code 128 Length Control = Variable Length
 Code 128 Length Control = Fixed Length	



Code 128 Set Length 1

This feature specifies one of the bar code lengths for [Code 128 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the bar code's data characters only.


The length can be set from 1 to 80 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.



Select Code 128 Set Length 1 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

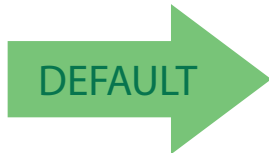Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.


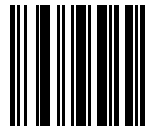



01 = Length 1 is 1 Character

Code 128 Set Length 2

This feature specifies one of the bar code lengths for [Code 128 Length Control](#). Length 2 is the maximum label length if in [Variable Length Mode](#), or the second fixed length if in [Fixed Length Mode](#). Length includes the bar code's data characters only.

The length can be set from 1 to 80 characters. A setting of 00 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.

 Select Code 128 Length 2 Setting	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 CANCEL

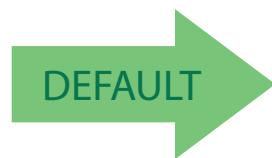

80 = Length 2 is 80 Characters

Code 128 Stitching

This option enables/disables stitching for Code 128 labels. When parts of a Code 128 bar code are presented to the scanner with this feature enabled, the bar code parts will be assembled by the scanner's software, and the data will be decoded if all bar code proofing requirements are met.

	 Code 128 Stitching = Disable
 Code 128 Stitching = Enable	







GS1-128

The following options apply to the GS1-128 symbology. (Also known as USS-128, GTIN-128, UCC-128.)

GS1-128 Enable

This option enables/disables the ability of the scanner to translate GS1-128 labels to the GS1-128 data format. Options are:

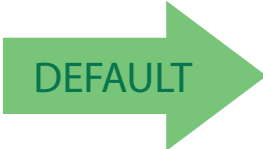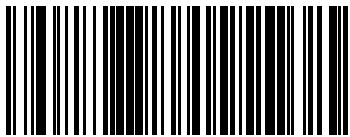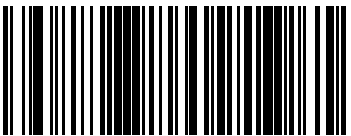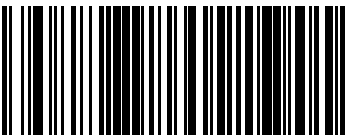- Transmit GS1-128 labels in Code 128 data format.
- Transmit GS1-128 labels in GS1-128 data format.
- Do not transmit GS1-128 labels.

	 <p>GS1-128 = Transmit in Code 128 data format</p>
 <p>GS1-128 = Transmit in GS1-128 data format</p>	
	 <p>GS1-128 = Do not transmit GS1-128 labels</p>

Interleaved 2 of 5 (I 2 of 5)

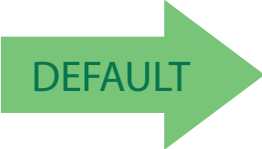
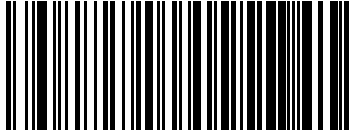
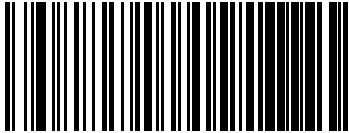
The following options apply to the I 2 of 5 symbology.



When reading this symbology, the settings for [I 2 of 5 Length Control](#) AND [I 2 of 5 Check Character Calculation](#) **MUST** be enabled to increase decoding safety.

I 2 of 5 Enable/Disable



When disabled, the scanner will not read I 2 of 5 bar codes.

	 I 2 of 5 = Disable
 I 2 of 5 = Enable	




I 2 of 5 Check Character Calculation

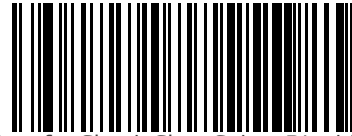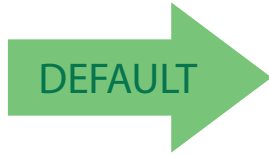
This option enables/disables calculation and verification of an optional I 2 of 5 check character.



I 2 of 5 Check Char Calc = Disable

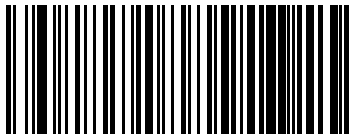

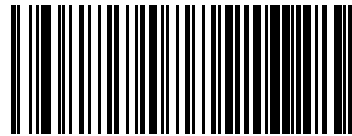
I 2 of 5 Check Char Calc = Check Standard
(Modulo 10)




I 2 of 5 Check Char Calc = Check German Parcel



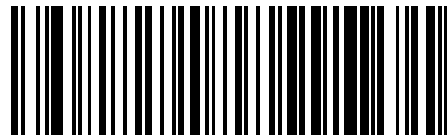
I 2 of 5 Check Char Calc = Check DHL



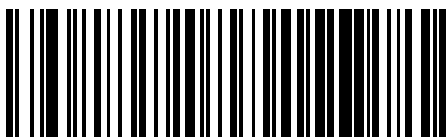I 2 of 5 Check Char Calc = Check Daimler Chrysler



I 2 of 5 Check Char Calc = Check Bosch

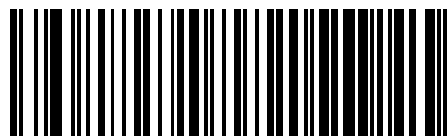

I 2 of 5 Check Character Calculation = Check Italian
Post

When disabled, any check character in label is treated as a data character.

I 2 of 5 Check Character Transmission

Enable this option to transmit the check character along with I 2 of 5 bar code data.



This feature is valid only when I 2 of 5 Check Character Calculation is enabled.

NOTE

	 <p>I 2 of 5 Check Character Transmission = Don't Send</p>
 <p>I 2 of 5 Check Character Transmission = Send</p>	



I 2 of 5 Minimum Reads

This feature specifies the minimum number of consecutive times an I 2 of 5 label must be decoded before it is accepted as good read.

	 I 2 of 5 Minimum Reads = 1
 I 2 of 5 Minimum Reads = 2	
	 I 2 of 5 Minimum Reads = 3
 I 2 of 5 Minimum Reads = 4	


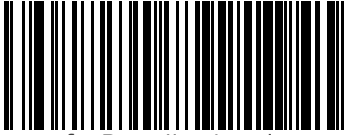
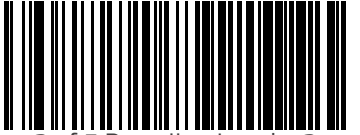
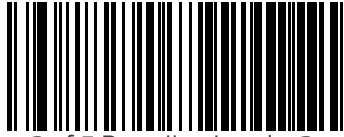

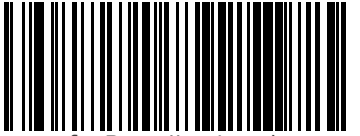
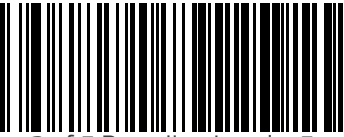
I 2 of 5 Decoding Level



This configuration item applies to Interleaved 2 of 5, Datalogic 2 of 5 and Standard 2 of 5.

NOTE

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more detailed programming instructions.

	 2 of 5 Decoding Level = Disabled
 2 of 5 Decoding Level = 1	
	 2 of 5 Decoding Level = 2
 2 of 5 Decoding Level = 3	
	 2 of 5 Decoding Level = 4
 2 of 5 Decoding Level = 5	



I 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the I 2 of 5 symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

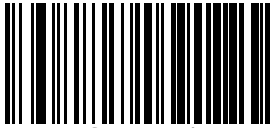

Fixed Length — For fixed length decoding, two different lengths may be set.


	 <p>I 2 of 5 Length Control = Variable Length</p>
 <p>I 2 of 5 Length Control = Fixed Length</p>	

I 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for [I 2 of 5 Length Control](#). Length 1 is the minimum label length if in [Variable Length Mode](#), or the first fixed length if in [Fixed Length Mode](#). The length includes the bar code's check and data characters.

The length can be set from 2 to 50 characters in increments of two. See ["Set Length 1"](#) on page 239 for more detailed programming instructions.

 Select I 2 of 5 Length 1 Setting	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 CANCEL

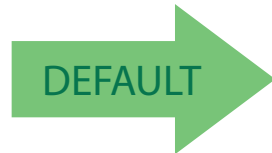


06 = Length 1 is 6 Characters



I 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for [I 2 of 5 Length Control](#). Length 2 is the maximum label length if in [Variable Length Mode](#), or the second fixed length if in [Fixed Length Mode](#). The length includes the bar code's check and data characters.

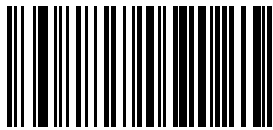The length can be set from 2 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.




Select I 2 of 5 Length 2 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.




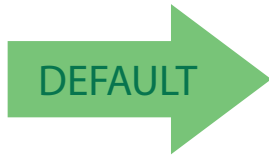
CANCEL




50 = Length 2 is 50 Characters

I 2 of 5 Zero Pattern

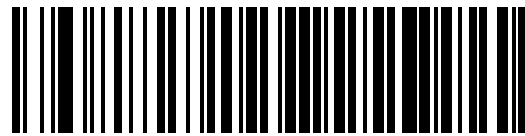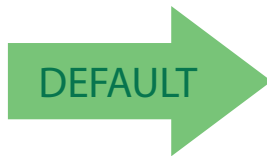Enables/disables ZERO-Digit decoding. This character does not represent any cipher. It allows encoding of an odd number of ciphers with Interleaved 2 of 5. It must be enabled to decode Code 2 of 5 CIP/HR.



I 2 of 5 Zero Pattern = Disable

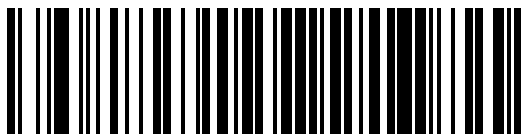

I 2 of 5 Zero Pattern = Enable

Interleaved 2 of 5 CIP HR

The following options apply to the Interleaved 2 of 5 CIP HR symbology.

Interleaved 2 of 5 CIP HR Enable/Disable

Enables/Disables ability of scanner to decode Interleaved 2 of 5 CIP HR labels.

	 <p>Interleaved 2 of 5 CIP HR = Disable</p>
 <p>Interleaved 2 of 5 CIP HR = Enable</p>	



Datalogic 2 of 5

The following options apply to the Datalogic 2 of 5 symbology.

Datalogic 2 of 5 Enable/Disable

When disabled, the scanner will not read Datalogic 2 of 5 bar codes.

	 Datalogic 2 of 5 = Disable
 Datalogic 2 of 5 = Enable	

Datalogic 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional Datalogic 2 of 5 check character.

	 Datalogic 2 of 5 Check Character Calculation = Disable
 Datalogic 2 of 5 Check Character Calculation = Enable	

Datalogic 2 of 5 Check Character Transmission

This option enables/disables transmission of an optional Datalogic 2 of 5 character.

	 Datalogic 2 of 5 Check Character Transmission = Don't Send
 Datalogic 2 of 5 Check Character Transmission = Send	

Datalogic 2 of 5 Minimum Reads

This feature specifies the minimum number of consecutive times an Datalogic 2 of 5 label must be decoded before it is accepted as good read.

	 1 2 of 5 Minimum Reads = 1
 1 2 of 5 Minimum Reads = 2	
	 1 2 of 5 Minimum Reads = 3
 1 2 of 5 Minimum Reads = 4	



Datalogic 2 of 5 Decoding Level



NOTE

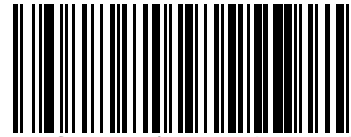
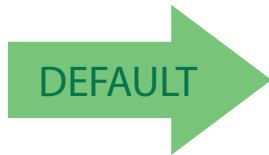
The Datalogic 2 of 5 Decoding Level feature is set using "I 2 of 5 Decoding Level" on page 135.

Datalogic 2 of 5 Length Control


This feature specifies either variable length decoding or fixed length decoding for the Datalogic 2 of 5 symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

Fixed Length — For fixed length decoding, two different lengths may be set.



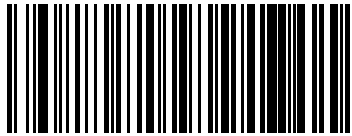Datalogic 2 of 5 Length Control = Variable Length

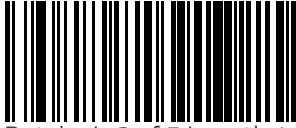



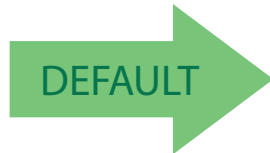
Datalogic 2 of 5 Length Control = Fixed Length

Datalogic 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for [Datalogic 2 of 5 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. The length includes the bar code's data characters only.

The length can be set from 2 to 50 characters in increments of two. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.

 Select Datalogic 2 of 5 Length 1 Setting	To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.	 CANCEL



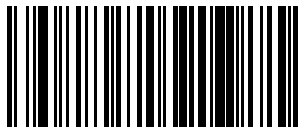
06 = Length 1 is 6 Characters



Datalogic 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for [Datalogic 2 of 5 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. The length includes the bar code's data characters only.


The length can be set from 2 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.



Select Datalogic 2 of 5 Length 2 Setting

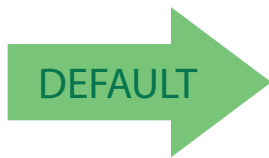To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.








Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



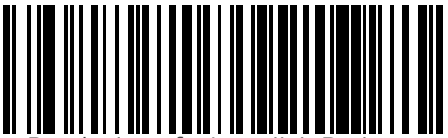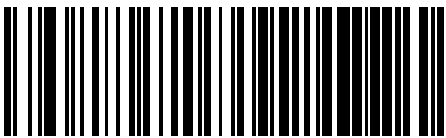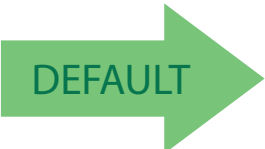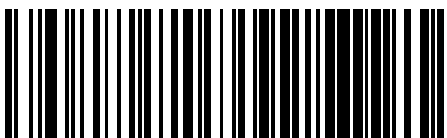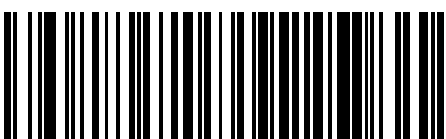50 = Length 2 is 50 Characters

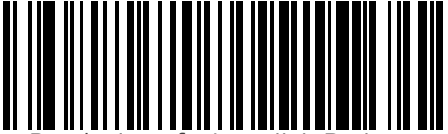
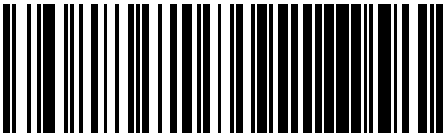

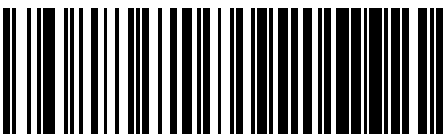

Datalogic 2 of 5 Interdigit Ratio

This feature specifies the maximum ratio between intercharacter space and module for Datalogic 2 of 5.

	 Datalogic 2 of 5 Interdigit Ratio = Disable
 Datalogic 2 of 5 Interdigit Ratio = 1	
	 Datalogic 2 of 5 Interdigit Ratio = 2
 Datalogic 2 of 5 Interdigit Ratio = 3	
	 Datalogic 2 of 5 Interdigit Ratio = 4
 Datalogic 2 of 5 Interdigit Ratio = 5	



Datalogic 2 of 5 Interdigit Maximum Ratio — cont.




	 <p>Datalogic 2 of 5 Interdigit Ratio = 6</p>
 <p>Datalogic 2 of 5 Interdigit Ratio = 7</p>	
	 <p>Datalogic 2 of 5 Interdigit Ratio = 8</p>
 <p>Datalogic 2 of 5 Interdigit Ratio = 9</p>	
	 <p>Datalogic 2 of 5 Interdigit Ratio = 10</p>

Codabar

The following options apply to the Codabar symbology.


Codabar Enable/Disable

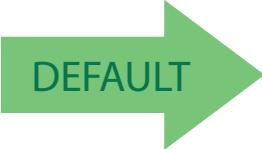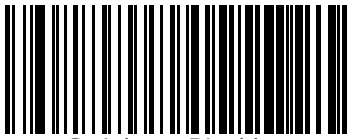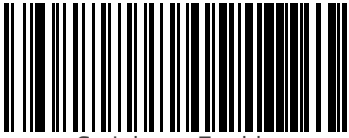When disabled, the scanner will not read Codabar bar codes.

	 <p>Codabar = Disable</p>
 <p>Codabar = Enable</p>	

Codabar Check Character Calculation

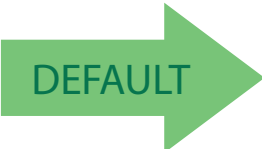Enable this option to enables/disables calculation and verification of an optional Codabar check character. When disabled, any check characters in the label are treated as data characters.

	 <p>Codabar Check Character Calculation = Don't Calculate</p>
 <p>Codabar Check Character Calculation = Enable AIM standard check char.</p>	
	 <p>Codabar Check Character Calculation = Enable Modulo 10 check char.</p>



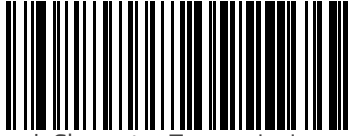
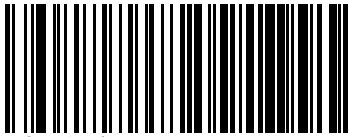

Codabar Check Character Transmission

Enable this option to transmit the check character along with Codabar bar code data.



This feature is valid only when Codabar Check Character Calculation is enabled.

NOTE

	 Codabar Check Character Transmission = Don't Send
 Codabar Check Character Transmission = Send	

Codabar Start/Stop Character Transmission

Enable this option to enable/disable transmission of Codabar start and stop characters.

	 Codabar Start/Stop Character Transmission = Don't Transmit
 Codabar Start/Stop Character Transmission = Transmit	


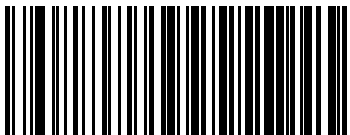
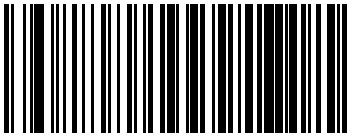
Codabar Start/Stop Character Set

This option specifies the format of transmitted Codabar start/stop characters.

	 <p>Codabar Check Character Set = ABCD/TN*E</p>
 <p>Codabar Check Character Set = ABCD/ABCD</p>	
	 <p>Codabar Check Character Set = abcd/tn*e</p>
 <p>Codabar Check Character Set = abcd/abcd</p>	

Codabar Start/Stop Character Match

When enabled, this option requires that start and stop characters match.

	 <p>Codabar Start/Stop Character Match = Don't Require Match</p>
 <p>Codabar Start/Stop Character Match = Require Match</p>	



Codabar Quiet Zones

This feature specifies the number of quiet zones for Codabar labels. Quiet zones are blank areas at the ends of a bar code and are typically 10 times the width of the narrowest bar or space in the label.

 <p>Codabar Quiet Zones = Quiet Zone on one side</p>	
	 <p>Codabar Quiet Zones = Quiet Zones on two sides</p>
 <p>Codabar Quiet Zones = Auto</p>	
	 <p>Codabar Quiet Zones = Virtual Quiet Zones on two sides</p>
 <p>Codabar Quiet Zones = Small Quiet Zones on two sides</p>	

Codabar Minimum Reads

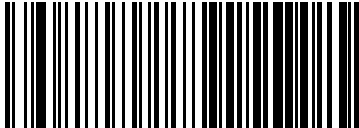
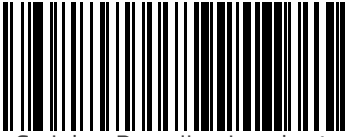
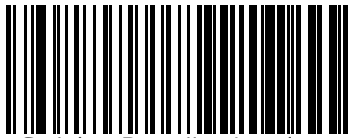
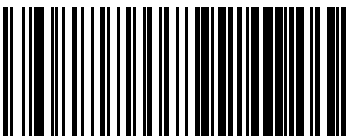

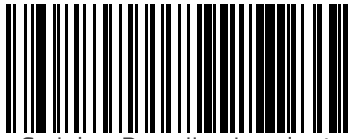
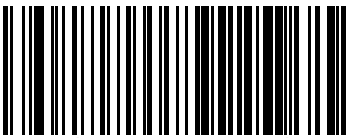
This feature specifies the minimum number of consecutive times a Codabar label must be decoded before it is accepted as good read.

	 Codabar Minimum Reads = 1
 Codabar Minimum Reads = 2	
	 Codabar Minimum Reads = 3
 Codabar Minimum Reads = 4	



Codabar Decoding Level

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more detailed programming instructions.




	 Codabar Decoding Level = Disabled
 Codabar Decoding Level = 1	
	 Codabar Decoding Level = 2
 Codabar Decoding Level = 3	
	 Codabar Decoding Level = 4
 Codabar Decoding Level = 5	

Codabar Length Control

This feature specifies either variable length decoding or fixed length decoding for the Codabar symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

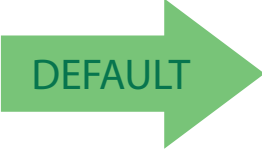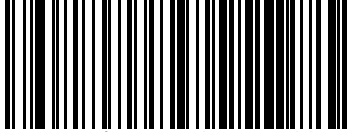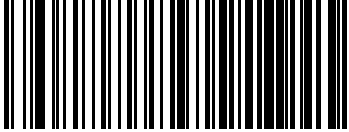Fixed Length — For fixed length decoding, two different lengths may be set.


	 <p>Codabar Length Control = Variable Length</p>
 <p>Codabar Length Control = Fixed Length</p>	



Codabar Set Length 1

This feature specifies one of the bar code lengths for [Codabar Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the bar code's start, stop, check and data characters. The length must include at least one data character.

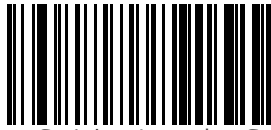
The length can be set from 3 to 50 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.



Select Codabar Length 1 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

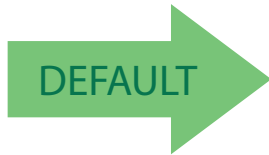Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

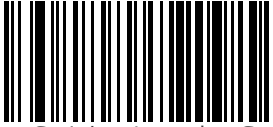



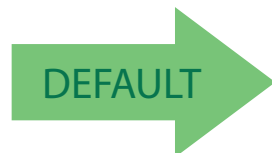
03 = Length 1 is 3 Characters

Codabar Set Length 2

This feature specifies one of the bar code lengths for [Codabar Length Control](#). Length 2 is the maximum label length if in [Variable Length Mode](#), or the second fixed length if in [Fixed Length Mode](#). The length includes the bar code's start, stop, check and data characters. The length must include at least one data character.

The length can be set from 3 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.

 Select Codabar Length 2 Setting	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 CANCEL

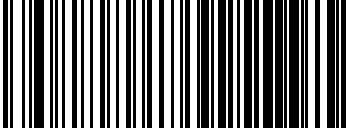
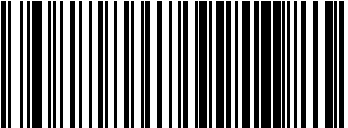
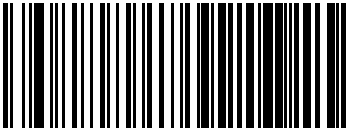
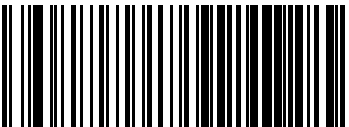

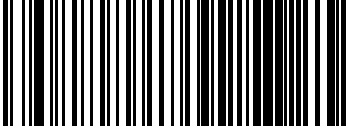
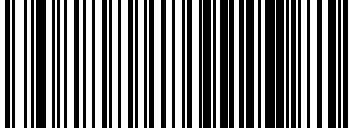


50 = Length 2 is 50 Characters








Codabar Interdigit Ratio

This feature specifies the maximum ratio between an intercharacter space and module for Codabar labels.

	 <p>Codabar Interdigit Ratio = Disable</p>
 <p>Codabar Interdigit Ratio = 1</p>	
	 <p>Codabar Interdigit Ratio = 2</p>
 <p>Codabar Interdigit Ratio = 3</p>	
	 <p>Codabar Interdigit Ratio = 4</p>
 <p>Codabar Interdigit Ratio = 5</p>	

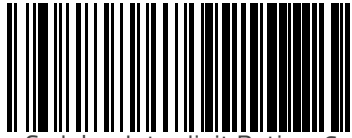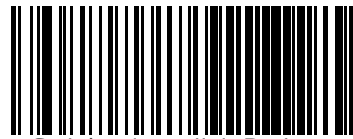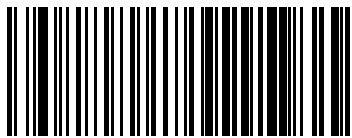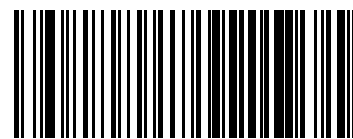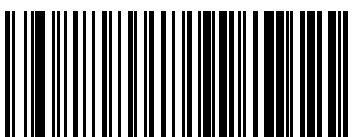Codabar Interdigit Ratio — cont.

	 <p>Codabar Interdigit Ratio = 6</p>
 <p>Codabar Interdigit Ratio = 7</p>	
	 <p>Codabar Interdigit Ratio = 8</p>
 <p>Codabar Interdigit Ratio = 9</p>	
	 <p>Codabar Interdigit Ratio = 10</p>



ABC Codabar

The following options apply to the ABC Codabar symbology.

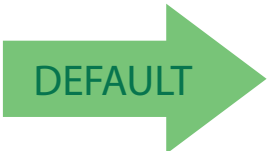


ABC Codabar Enable/Disable

Enables/Disables ability of scanner to decode ABC Codabar labels.


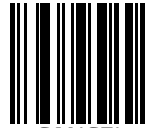
ABC Codabar Concatenation Mode


Specifies the concatenation mode between Static and Dynamic.

ABC Codabar Dynamic Concatenation Timeout

This parameter specifies the timeout in 10-millisecond ticks used by the ABC Codabar Dynamic Concatenation Mode. The timeout can be set within a range of 05 to 255 in 10ms increments. A setting of zero specifies no delay.



 <p>Select ABC Codabar Dynamic Concatenation Timeout Setting</p>	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 <p>CANCEL</p>

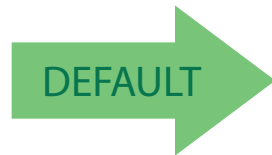

10 = Quiet Interval of 200 ms

ABC Codabar Force Concatenation

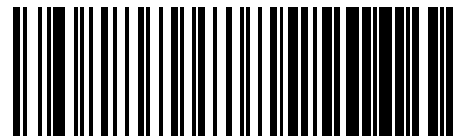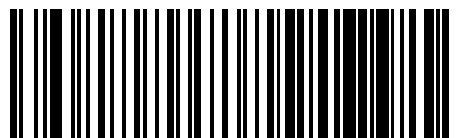Forces labels starting or ending with D to be concatenated.

	 <p>ABC Codabar Force Concatenation = Disable</p>
 <p>ABC Codabar Force Concatenation = Enable</p>	

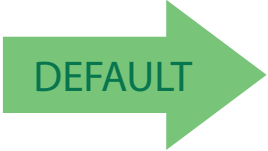

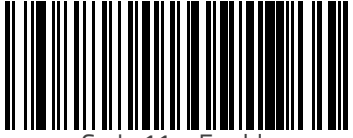


Code 11

The following options apply to the Code 11 symbology.

Code 11 Enable/Disable

When disabled, the scanner will not read Code 11 bar codes.

	 Code 11 = Disable
 Code 11 = Enable	


Code 11 Check Character Calculation

This option enables/disables calculation and verification of optional Code 11 check character.

	 Code 11 Check Character Calculation = Disable
 Code 11 Check Character Calculation = Check C	
	 Code 11 Check Character Calculation = Check K
 Code 11 Check Character Calculation = Check C and K	

Code 11 Check Character Transmission

This feature enables/disables transmission of an optional Code 11 check character.

	 Code 11 Check Character Transmission = Don't Send
 Code 11 Check Character Transmission = Send	



Code 11 Minimum Reads

This feature specifies the minimum number of consecutive times a Code 11 label must be decoded before it is accepted as good read.

	 Code 11 Minimum Reads = 1
 Code 11 Minimum Reads = 2	
	 Code 11 Minimum Reads = 3
 Code 11 Minimum Reads = 4	

Code 11 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 11 symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.



Fixed Length — For fixed length decoding, two different lengths may be set.


	 Code 11 Length Control = Variable Length
 Code 11 Length Control = Fixed Length	

Code 11 Set Length 1

This feature specifies one of the bar code lengths for [Code 11 Length Control](#). Length 1 is the minimum label length if in [Variable Length Mode](#), or the first fixed length if in [Fixed Length Mode](#). Length includes the bar code's check and data characters.

The length can be set from 2 to 50 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.

 Select Code 11 Set Length 1 Setting	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 CANCEL

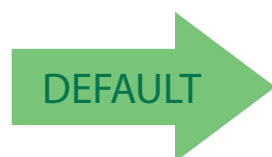


04 = Length 1 is 4 Characters



Code 11 Set Length 2

This feature specifies one of the bar code lengths for [Code 11 Length Control](#). Length 2 is the maximum label length if in [Variable Length Mode](#), or the second fixed length if in [Fixed Length Mode](#). Length includes the bar code's check and data characters.

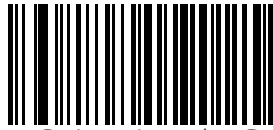
The length can be set from 2 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.



Select Code 11 Length 2 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.







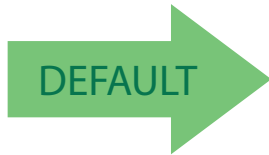
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



50 = Length 2 is 50 Characters

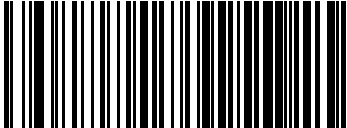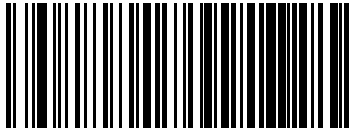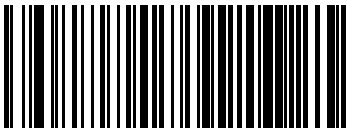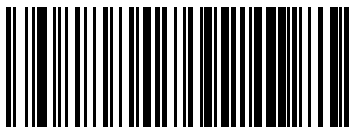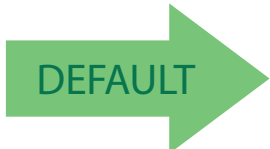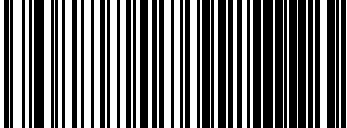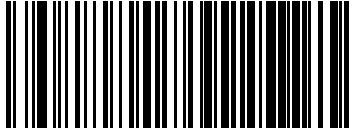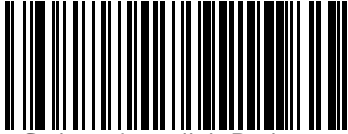
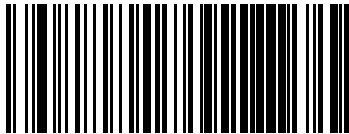
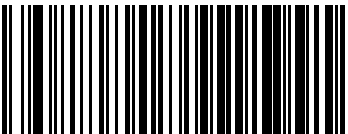

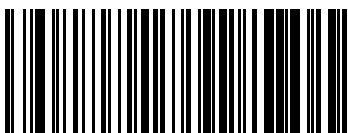
Code 11 Interdigit Ratio

This feature specifies the ratio between an intercharacter space and module for Code 11 labels.

	 <p>Code 11 Interdigit Ratio = Disable</p>
 <p>Code 11 Interdigit Ratio = 1</p>	
	 <p>Code 11 Interdigit Ratio = 2</p>
 <p>Code 11 Interdigit Ratio = 3</p>	
	 <p>Code 11 Interdigit Ratio = 4</p>
 <p>Code 11 Interdigit Ratio = 5</p>	

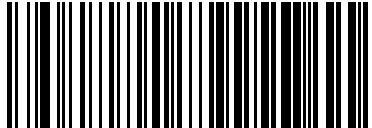
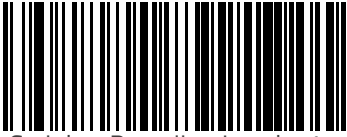
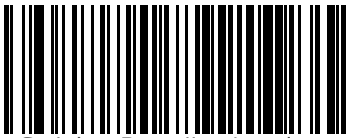
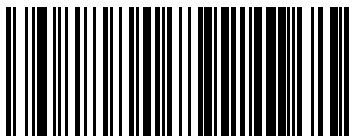

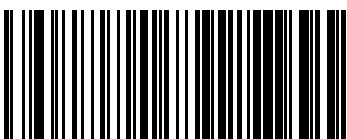



Code 11 Interdigit Ratio — cont.

	 Code 11 Interdigit Ratio = 6
 Code 11 Interdigit Ratio = 7	
	 Code 11 Interdigit Ratio = 8
 Code 11 Interdigit Ratio = 9	
	 Code 11 Interdigit Ratio = 10

Code 11 Decoding Level

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more detailed programming instructions.

	 Codabar Decoding Level = Disabled
 Codabar Decoding Level = 1	
	 Codabar Decoding Level = 2
 Codabar Decoding Level = 3	
	 Codabar Decoding Level = 4
 Codabar Decoding Level = 5	



Standard 2 of 5

The following options apply to the Standard 2 of 5 symbology.

Standard 2 of 5 Enable/Disable

When disabled, the scanner will not read Standard 2 of 5 bar codes.

	 Standard 2 of 5 = Disable
 Standard 2 of 5 = Enable	

Standard 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional Standard 2 of 5 check character.

	 Standard 2 of 5 Check Character Calculation = Disable
 Standard 2 of 5 Check Character Calculation = Enable	

Standard 2 of 5 Check Character Transmission

This feature enables/disables transmission of an optional Standard 2 of 5 check character.

	 Standard 2 of 5 Check Character Transmission = Don't Send
 Standard 2 of 5 Check Character Transmission = Send	

Standard 2 of 5 Minimum Reads

This feature specifies the minimum number of consecutive times a Standard 2 of 5 label must be decoded before it is accepted as good read.

	 Standard 2 of 5 Minimum Reads = 1
 Standard 2 of 5 Minimum Reads = 2	
	 Standard 2 of 5 Minimum Reads = 3
 Standard 2 of 5 Minimum Reads = 4	



Standard 2 of 5 Decoding Level



NOTE

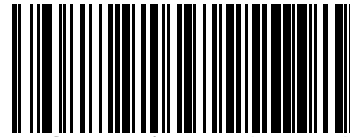
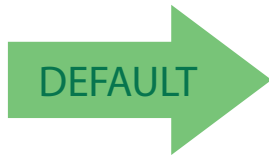
The Standard 2 of 5 Decoding Level feature is set using "I 2 of 5 Decoding Level" on page 135.

Standard 2 of 5 Length Control


This feature specifies either variable length decoding or fixed length decoding for the Standard 2 of 5 symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

Fixed Length — For fixed length decoding, two different lengths may be set.



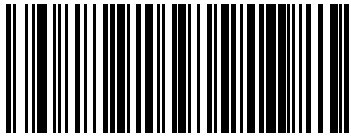Standard 2 of 5 Length Control = Variable Length






Standard 2 of 5 Length Control = Fixed Length

Standard 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for [Standard 2 of 5 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.

 Select Standard 2 of 5 Length 1 Setting	To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.	 CANCEL

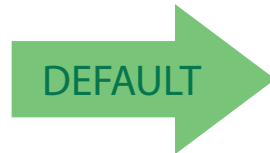


08 = Length 1 is 8 Characters



Standard 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for [Standard 2 of 5 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the bar code's check and data characters.

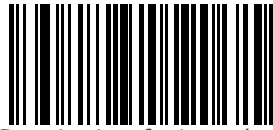
The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.



Select Standard 2 of 5 Length 2 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

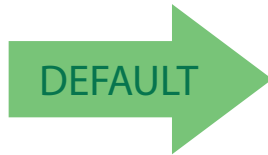Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



50 = Length 2 is 50 Characters

Industrial 2 of 5

The following options apply to the Industrial 2 of 5 symbology.

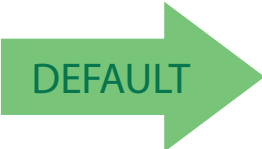
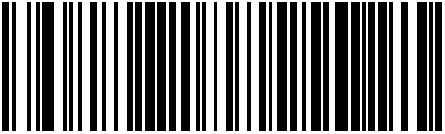
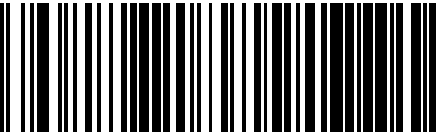
Industrial 2 of 5 Enable/Disable

Enables/Disables ability of scanner to decode Industrial 2 of 5 labels.

	 <p>Industrial 2 of 5 = Disable</p>
 <p>Industrial 2 of 5 = Enable</p>	

Industrial 2 of 5 Check Character Calculation

Enables/Disables calculation and verification of an optional Industrial 2 of 5 check character.

	 <p>Industrial 2 of 5 Check Character Calculation = Disable</p>
 <p>Industrial 2 of 5 Check Character Calculation = Enable</p>	



Industrial 2 of 5 Check Character Transmission

Enables/disables transmission of an Industrial 2 of 5 check character.

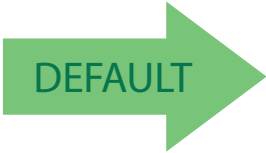
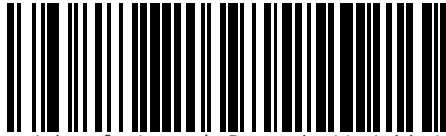
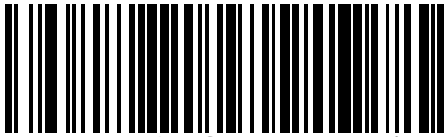
	 <p>Industrial 2 of 5 Check Character Transmission = Disable</p>
 <p>Industrial 2 of 5 Check Character Transmission = Enable</p>	

Industrial 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Industrial 2 of 5 symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.



Fixed Length — For fixed length decoding, two different lengths may be set.


	 <p>Industrial 2 of 5 Length Control = Variable Length</p>
 <p>Industrial 2 of 5 = Fixed Length</p>	

Industrial 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for [Industrial 2 of 5 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the bar code's data characters only.

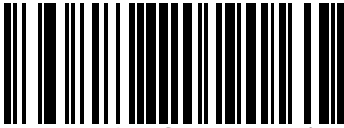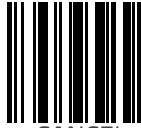The length can be set from 1 to 50 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.

 <p>Select Industrial 2 of 5 Set Length 1 Setting</p>	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 <p>CANCEL</p>

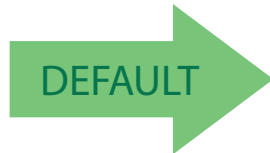


01 = Length 1 is 1 Character



Industrial 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for [Industrial 2 of 5 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

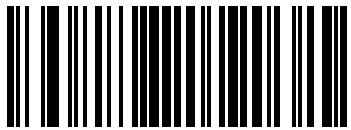
The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.



Select Industrial 2 of 5 Length 2 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

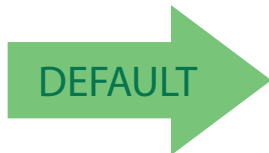Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



50 = Length 2 is 50 Characters

Industrial 2 of 5 Minimum Reads

This feature specifies the minimum number of consecutive times an Industrial 2 of 5 label must be decoded before it is accepted as good read.

	 Industrial 2 of 5 Minimum Reads = 1
 Industrial 2 of 5 Minimum Reads = 2	
	 Industrial 2 of 5 Minimum Reads = 3
 Industrial 2 of 5 Minimum Reads = 4	

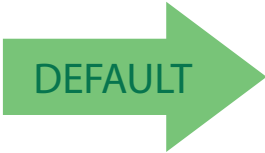



IATA

The following options apply to the IATA symbology.

IATA Enable/Disable

Enables/Disables the ability of the scanner to decode IATA labels.

IATA Check Character Transmission

Enables/Disables calculation and verification of an optional Industrial 2 of 5 check character.

ISBT 128

The following options apply to the ISBT 128 symbology.

ISBT 128 Concatenation

Enables/disables ISBT128 concatenation of 2 labels.

	 ISBN 128 Concatenation = Disable
 ISBN 128 Concatenation = Enable	

ISBT 128 Concatenation Mode

Specifies the concatenation mode between Static and Dynamic.



NOTE

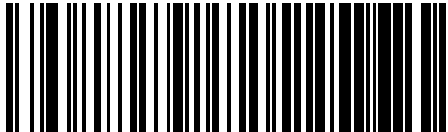
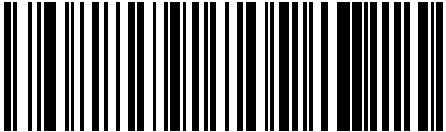
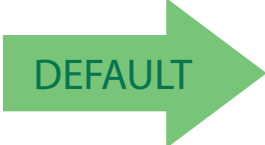

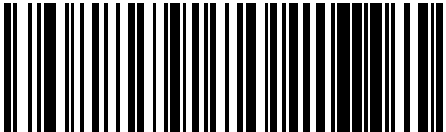
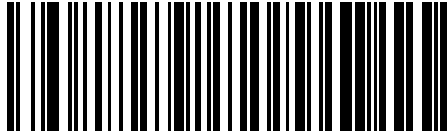
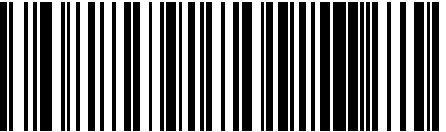
This option is only valid when [ISBT 128 Concatenation](#) is enabled (see page 179).

	 ISBT 128 Concatenation Mode = Static
 ISBT 128 Concatenation Mode = Dynamic	



ISBT 128 Dynamic Concatenation Timeout

Specifies the timeout used by the ISBT 128 Dynamic Concatenation Mode.

	 ISBT 128 Dynamic Concatenation Timeout = 50 msec
 ISBT 128 Dynamic Concatenation Timeout = 100 msec	
	 ISBT 128 Dynamic Concatenation Timeout = 200 msec
 ISBT 128 Dynamic Concatenation Timeout = 500 msec	
	 ISBT 128 Dynamic Concatenation Timeout = 750 msec
 ISBT 128 Dynamic Concatenation Timeout = 1 second	

ISBT 128 Force Concatenation

When enabled, this feature forces all ISBT 128 labels to be concatenated.



NOTE

This option is only valid when [ISBT 128 Concatenation](#) is enabled. (see page 179).

	 ISBT 128 Force Concatenation = Disable
 ISBT 128 Force Concatenation = Enable	

ISBT 128 Advanced Concatenation Options



NOTE

Use the Datalogic Aladdin configuration application or Contact Customer Support to set up pairs of label types for concatenation.

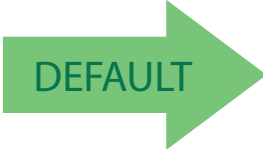




MSI

The following options apply to the MSI symbology.


MSI Enable/Disable

Enables/Disables ability of scanner to decode MSI labels.

MSI Check Character Calculation

Enables/Disables calculation and verification of an optional MSI check character.

MSI Check Character Transmission

Enables/disables transmission of an MSI check character.



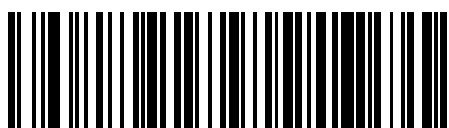
	 MSI Check Character Transmission = Disable
 MSI Check Character Transmission = Enable	

MSI Length Control

This feature specifies either variable length decoding or fixed length decoding for the MSI symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

Fixed Length — For fixed length decoding, two different lengths may be set.


	 MSI Length Control = Variable Length
 MSI = Fixed Length	



MSI Set Length 1

This feature specifies one of the bar code lengths for [MSI Length Control](#). Length 1 is the minimum label length if in [Variable Length Mode](#), or the first fixed length if in [Fixed Length Mode](#). Length includes the bar code's data characters only.

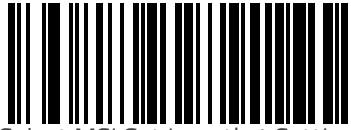
The length can be set from 01 to 50 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.



Select MSI Set Length 1 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

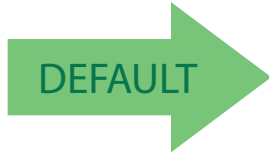Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.




01 = Length 1 is 1 Character

MSI Set Length 2

This feature specifies one of the bar code lengths for [MSI Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

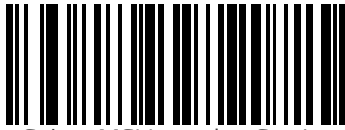The length can be set from 1 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length). See "[Set Length 2](#)" on page 241 for more detailed programming instructions.



Select MSI Length 2 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.




DEFAULT

50 = Length 2 is 50 Characters



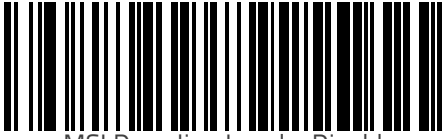
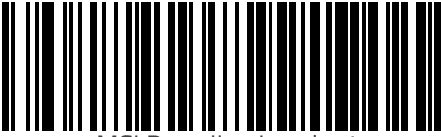
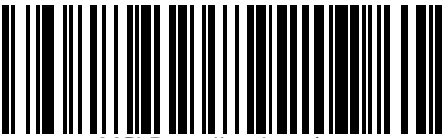
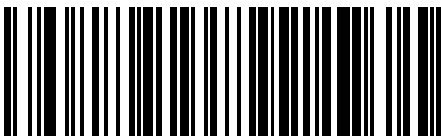

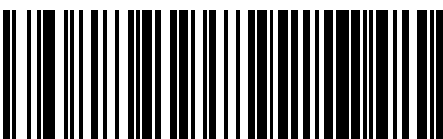
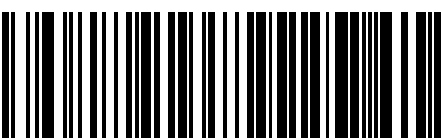
MSI Minimum Reads

This feature specifies the minimum number of consecutive times an MSI label must be decoded before it is accepted as good read.

	 MSI Minimum Reads = 1
 MSI Minimum Reads = 2	
	 MSI Minimum Reads = 3
 MSI Minimum Reads = 4	

MSI Decoding Level

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more detailed programming instructions.

	 <p>MSI Decoding Level = Disable</p>
 <p>MSI Decoding Level = 1</p>	
	 <p>MSI Decoding Level = 2</p>
 <p>MSI Decoding Level = 3</p>	
	 <p>MSI Decoding Level = 4</p>
 <p>MSI Decoding Level = 5</p>	



Code 93

The following options apply to the Code 93 symbology.

Code 93 Enable/Disable

Enables/Disables ability of scanner to decode Code 93 labels.

	 Code 93 = Disable
 Code 93 = Enable	

Code 93 Check Character Calculation

Enables/disables calculation and verification of an optional Code 93 check character.

	 Code 93 Check Character Calculation = Disable
 Code 93 Check Character Calculation = Enable Check C	
	 Code 93 Check Character Calculation = Enable Check K
 Code 93 Check Character Calculation = Enable Check C and K	

Code 93 Check Character Transmission

Enables/disables transmission of an optional Code 93 check character.

	 Code 93 Check Character Transmission = Disable
 Code 93 Check Character Transmission = Enable	

Code 93 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 93 symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

Fixed Length — For fixed length decoding, two different lengths may be set.

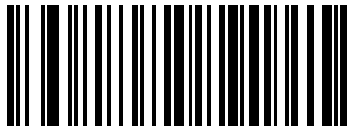
	 Code 93 Length Control = Variable Length
 Code 93 = Fixed Length	



Code 93 Set Length 1

This feature specifies one of the bar code lengths for [Code 93 Length Control](#). Length 1 is the minimum label length if in [Variable Length Mode](#), or the first fixed length if in [Fixed Length Mode](#). Length includes the bar code's data characters only.


The length can be set from 01 to 50 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.



Select Code 93 Set Length 1 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

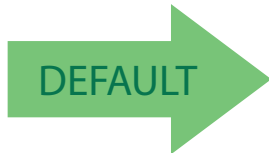Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.




01 = Length 1 is 1 Character

Code 93 Set Length 2

This feature specifies one of the bar code lengths for [Code 93 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

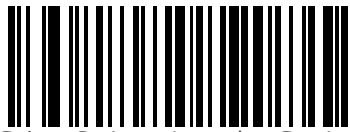The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "[Set Length 2](#)" on page 241 for more detailed programming instructions.



Select Code 93 Length 2 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.




DEFAULT

50 = Length 2 is 50 Characters



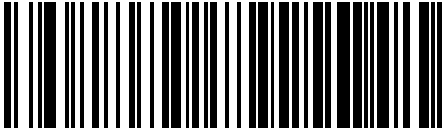
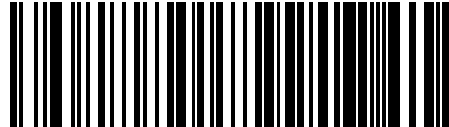
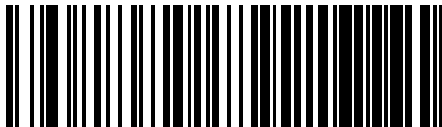
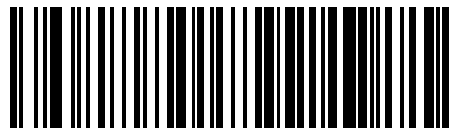

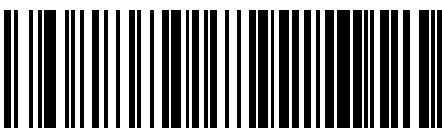
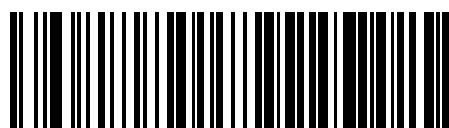
Code 93 Minimum Reads

This feature specifies the minimum number of consecutive times a Code 93 label must be decoded before it is accepted as good read.

	 Code 93 Minimum Reads = 1
 Code 93 Minimum Reads = 2	
	 Code 93 Minimum Reads = 3
 Code 93 Minimum Reads = 4	

Code 93 Decoding Level

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more detailed programming instructions.

	 <p>Code 93 Decoding Level = Disable</p>
 <p>Code 93 Decoding Level = 1</p>	
	 <p>Code 93 Decoding Level = 2</p>
 <p>Code 93 Decoding Level = 3</p>	
	 <p>Code 93 Decoding Level = 4</p>
 <p>Code 93 Decoding Level = 5</p>	



Code 93 Quiet Zones

Enables/disables fixed length stitching for Code 93.



NOTE

This feature is available only on the TD1130 model.




	 <p>Code 93 Quiet Zones = No Quiet Zones</p>
 <p>Code 93 Quiet Zones = Quiet Zone on one side</p>	
	 <p>Code 93 Quiet Zones = Quiet Zones on two sides</p>
 <p>Code 93 Quiet Zones = Auto</p>	
	 <p>Code 93 Quiet Zones = Virtual Quiet Zones on two sides</p>

Codablock F

The following options apply to the Codablock F symbology.




Codablock F Enable/Disable

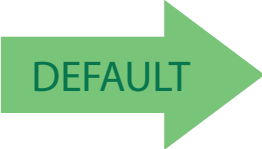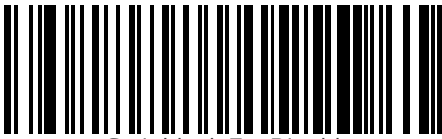Enables/Disables the ability of the scanner to decode Codablock F labels.

	 Codablock F = Disable
 Codablock F = Enable	

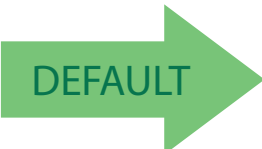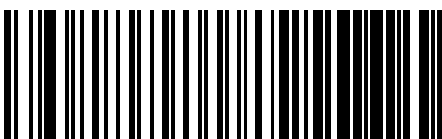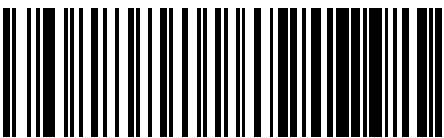Codablock F EAN Enable/Disable




Enables/Disables the Codablock F EAN subtype (code with FNC1 in the first position).

	 Codablock F EAN = Disable
 Codablock F EAN = Enable	



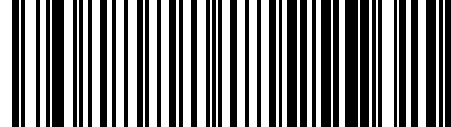Codablock F AIM Check

Specifies if Check Digit calculation algorithm is AIM compliant or not.


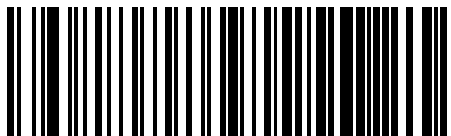

	 Codablock F AIM Check = Not AIM compliant
 Codablock F AIM Check = AIM compliant	

Codablock F Length Control

This feature specifies either variable length decoding or fixed length decoding for the Codablock F symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

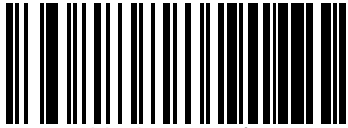

Fixed Length — For fixed length decoding, two different lengths may be set.


	 Codablock F Length Control = Variable Length
 Codablock F = Fixed Length	

Codablock F Set Length 1

This feature specifies one of the bar code lengths for [Codablock F Length Control](#). Length 1 is the minimum label length if in [Variable Length Mode](#), or the first fixed length if in [Fixed Length Mode](#). Length includes the bar code's data characters only.

The length can be set from 003 to 255 characters. See "[Set Length 1](#)" on page 239 for more detailed programming instructions.

 Select Codablock F Length 1 Setting	<p>To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.</p>
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 CANCEL

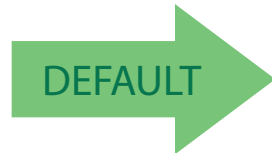


003 = Length 1 is 3 Characters



Codablock F Set Length 2

This feature specifies one of the bar code lengths for [Codablock F Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

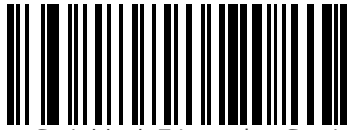
The length can be set from 3 to 255 characters. A setting of 00 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.



Select Codablock F Length 2 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

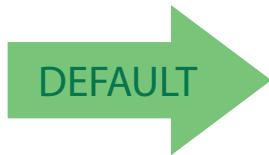Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



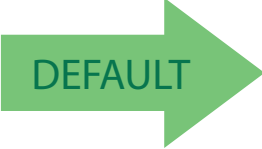

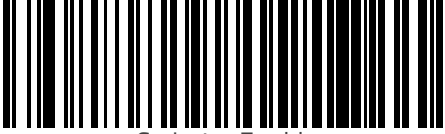
100 = Length 2 is 100 Characters

Code 4

The following options apply to the Code 4 symbology.

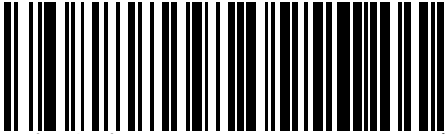
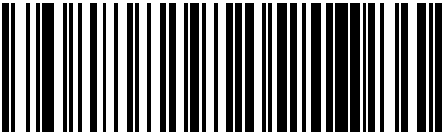

Code 4 Enable/Disable

Enables/Disables ability of scanner to decode Code 4 labels.

	 Code 4 = Disable
 Code 4 = Enable	

Code 4 Check Character Transmission




This feature enables/disables transmission of an optional Code 4 check character.

	 Code 4 Check Character Transmission = Don't Send
 Code 4 Check Character Transmission = Send	



Code 4 Hex to Decimal Conversion

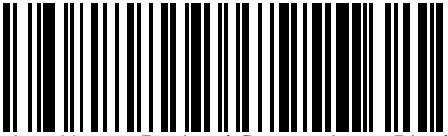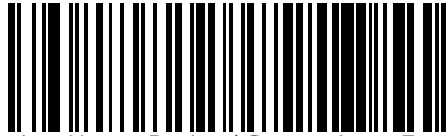This feature enables/disables the conversion of hexadecimal label data to decimal label data.




	 <p>Code 4 Hex to Decimal Conversion = Disable</p>
 <p>Code 4 Hex to Decimal Conversion = Enable</p>	

Code 5

The following options apply to the Code 5 symbology.


Code 5 Enable/Disable

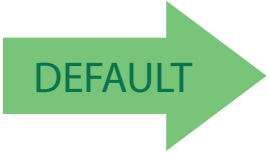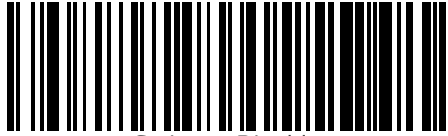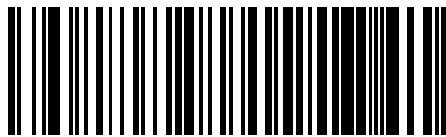Enables/Disables ability of scanner to decode Code 5 labels.

	 <p>Code 5 = Disable</p>
 <p>Code 5 = Enable</p>	

Code 5 Check Character Transmission

This feature enables/disables transmission of an optional Code 5 check character.

	 <p>Code 5 Check Character Transmission = Don't Send</p>
 <p>Code 5 Check Character Transmission = Send</p>	

Code 5 Hex to Decimal Conversion

This feature enables/disables the conversion of hexadecimal label data to decimal label data.

	 <p>Code 5 Hex to Decimal Conversion = Disable</p>
 <p>Code 5 Hex to Decimal Conversion = Enable</p>	



Code 4 and Code 5 Common Configuration Items

The following options apply to both Code 4 and Code 5 symbologies.

Code 4 and 5 Decoding Level

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "Decoding Levels" on page 239 for more detailed programming instructions.



This configuration item applies to Code 4 and Code 5.

NOTE

 Code 4 and Code 5 Decoding Level = 1	
	 Code 4 and Code 5 Decoding Level = 2
 Code 4 and Code 5 Decoding Level = 3	
	 Code 4 and Code 5 Decoding Level = 4
 Code 4 and Code 5 Decoding Level = 5	

Code 4 and Code 5 Minimum Reads

This feature specifies the minimum number of consecutive times a Code 4 or Code 5 label must be decoded before it is accepted as good read.

	 Code 4 or Code 5 Minimum Reads = 1
 Code 4 or Code 5 Minimum Reads = 2	
	 Code 4 or Code 5 Minimum Reads = 3
 Code 4 or Code 5 Minimum Reads = 4	

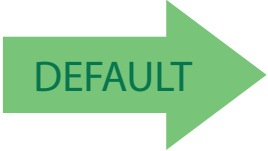
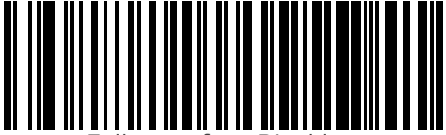



Follett 2 of 5

The following options apply to the Follett 2 of 5 symbology.

Follett 2 of 5 Enable/Disable

Enables/Disables ability of scanner to decode Follett 2 of 5 labels.


	 <p>Follett 2 of 5 = Disable</p>
 <p>Follett 2 of 5 = Enable</p>	

BC412

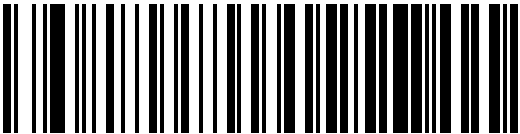The following options apply to the BC412 symbology.


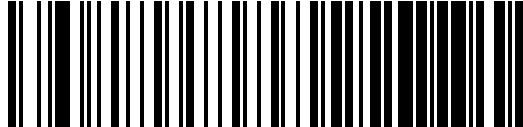
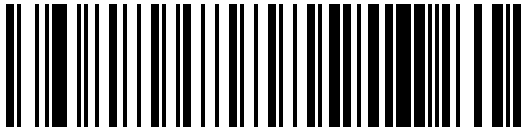
BC412 Enable/Disable

Enables/Disables ability of scanner to decode BC412 labels.

	 <p>BC412 = Disable</p>
 <p>BC412 = Enable</p>	

BC412 Check Character Calculation

Enable this option to enable/disable calculation and verification of an optional BC412 check character. When disabled, any check character in the label is treated as a data character.

	 BC412 Check Character Calculation = Don't Calculate
 BC412 Check Character Calculation = Calculate Check Character	

BC412 Minimum Reads

This feature specifies the minimum number of consecutive times a BC412 label must be decoded before it is accepted as good read.

	 BC412 Minimum Reads = 1
 BC412 Minimum Reads = 2	
	 BC412 Minimum Reads = 3
 BC412 Minimum Reads = 4	



BC412 Decoding Level

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more detailed programming instructions.

 <p>BC412 Decoding Level = 1</p>	
	 <p>BC412 Decoding Level = 2</p>
 <p>BC412 Decoding Level = 3</p>	
	 <p>BC412 Decoding Level = 4</p>
 <p>BC412 Decoding Level = 5</p>	

BC412 Length Control

This feature specifies either variable length decoding or fixed length decoding for the BC412 symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

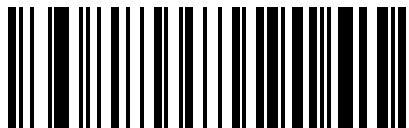

Fixed Length — For fixed length decoding, two different lengths may be set.


	 BC412 Length Control = Variable Length
 BC412 Length Control = Fixed Length	

BC412 Set Length 1

This feature specifies one of the bar code lengths for **BC412 Length Control**. Length 1 is the minimum label length if in **Variable Length Mode**, or the first fixed length if in **Fixed Length Mode**. Length includes the bar code's data characters only.

The length can be set from 0 to 50 characters. See "**Set Length 1**" on page 239 for more detailed programming instructions.

 Select BC412 Set Length 1 Setting	To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.
Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.	 CANCEL

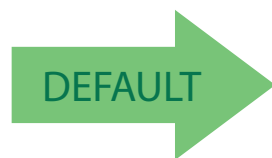

01 = Length 1 is 1 Character



BC412 Set Length 2

This feature specifies one of the bar code lengths for [BC412 Length Control](#). Length 2 is the maximum label length if in [Variable Length Mode](#), or the second fixed length if in [Fixed Length Mode](#). Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

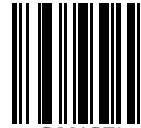
The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See ["Set Length 2"](#) on page 241 for more detailed programming instructions.




Select BC412 Length 2 Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

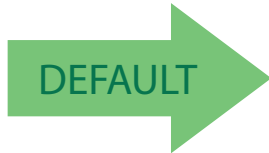




50 = Length 2 is 50 Characters

Plessey

The following options apply to the Plessey symbology.

Plessey Enable/Disable

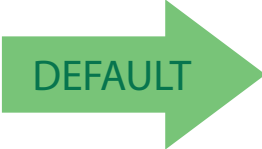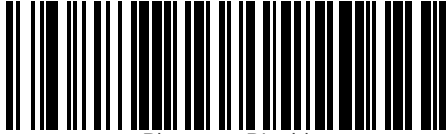Enables/Disables ability of scanner to decode Plessey labels.

	 <p>Plessey = Disable</p>
 <p>Plessey = Enable</p>	



Plessey Check Character Calculation

Enables/Disables calculation and verification of an optional Plessey check character.

	 <p>Plessey Check Character Calculation = Disable</p>
 <p>Plessey Check Character Calculation = Enable Plessey std. check char. verification</p>	
	 <p>Plessey Check Character Calculation = Enable Anker check char. verification</p>
 <p>Plessey Check Character Calculation = Enable Plessey std. and Anker check char verification</p>	

Plessey Check Character Transmission

Enables/disables transmission of an MSI check character.

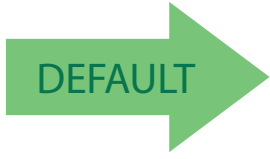
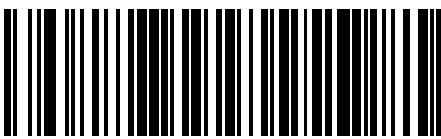
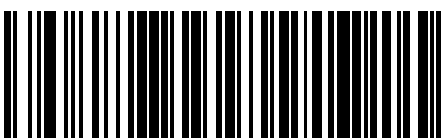
	 Plessey Check Character Transmission = Disable
 Plessey Check Character Transmission = Enable	

Plessey Length Control

This feature specifies either variable length decoding or fixed length decoding for the Plessey symbology.

Variable Length. For variable length decoding, a minimum and maximum length may be set.

Fixed Length. For fixed length decoding, two different lengths may be set.

	 Plessey Length Control = Variable Length
 Plessey = Fixed Length	




Plessey Set Length 1

This feature specifies one of the bar code lengths for [Plessey Length Control](#). Length 1 is the minimum label length if in [Variable Length Mode](#), or the first fixed length if in [Fixed Length Mode](#). Length includes the bar code's data characters only. The length can be set from 01 to 50 characters.

[Table 4](#) provides some examples for setting Length 1. See "[Set Length 1](#)" on page 239 for detailed instructions on setting this feature.


Table 4. Plessey Length 1 Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	01 Character	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT Plessey LENGTH 1 SETTING				
4	Scan Two Characters From Appendix D, Keypad	'0' and '1'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

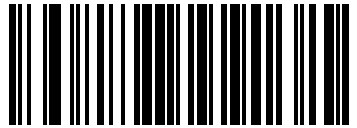


Select Plessey Set Length 1 Setting

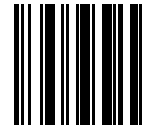Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

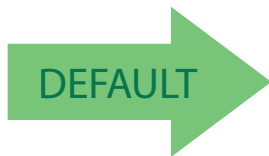

01 = Length 1 is 1 Character

Plessey Set Length 2



This feature specifies one of the bar code lengths for [Plessey Length Control](#). Length 2 is the maximum label length if in [Variable Length Mode](#), or the second fixed length if in [Fixed Length Mode](#). Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.


The length can be set from 1 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

[Table 5](#) provides examples for setting Length 2. See "[Set Length 2](#)" on page 241 for detailed instructions on setting this feature.

Table 5. Plessey Length 2 Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 (Ignore This Length)	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT PLESSEY LENGTH 2 SETTING				
4	Scan Two Characters From Appendix D, Keypad	'0' and '0'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

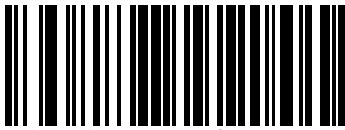 <p>Select Plessey Length 2 Setting</p>	
<p>Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.</p>	 <p>CANCEL</p>

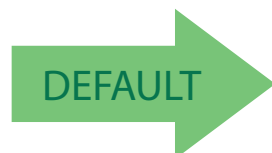

50 = Length 2 is 50 Characters










Plessey Minimum Reads

This feature specifies the minimum number of consecutive times a Plessey label must be decoded before it is accepted as good read.

	 Plessey Minimum Reads = 1
 Plessey Minimum Reads = 2	
	 Plessey Minimum Reads = 3
 Plessey Minimum Reads = 4	

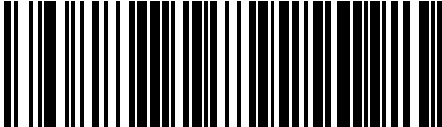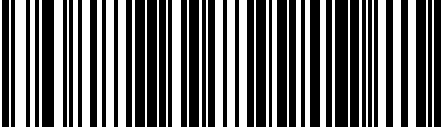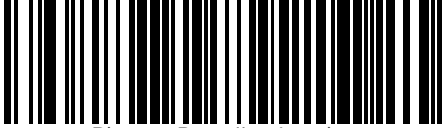Plessey Decoding Level

Specifies the decoding level for Plessey. Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs. See "[Decoding Levels](#)" on page 239 for more information on this feature.

	 <p>Plessey Decoding Level = Disable</p>
 <p>Plessey Decoding Level = 1 (conservative)</p>	
	 <p>Plessey Decoding Level = 2</p>
 <p>Plessey Decoding Level = 3</p>	
	 <p>Plessey Decoding Level = 4</p>
 <p>Plessey Decoding Level = 5 (aggressive)</p>	



NOTES



Chapter 4 References

This section contains explanations and examples of selected bar code features. See ["Configuration Using Bar Codes"](#) starting on page 15 for the actual bar code labels used to configure the scanner.

RS-232 Parameters.....	244
RS-232 Only	244
Baud Rate.....	244
Stop Bits	244
Parity.....	244
Handshaking Control	244
RS-232/USB COM Parameters	245
Intercharacter Delay.....	245
ACK NAK Options.....	246
ACK Character	246
NAK Character.....	247
ACK NAK Timeout Value	248
ACK NAK Retry Count.....	249
Disable Character	250
Enable Character	251
Keyboard Interface	252
Wedge Quiet Interval	252
Intercharacter Delay.....	253
Intercode Delay	254
Data Format.....	255
Data Editing.....	255
Global Prefix/Suffix	256
Global AIM ID.....	257
Label ID	258
Character Conversion.....	262
Reading Parameters	264
Label Gone Timeout	264
Good Read LED Duration	265
Symbologies	270
Decoding Levels.....	270
Set Length	270

RS-232 Parameters

RS-232 Only

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the scanner's baud rate to match the baud rate setting of the host device. With an improper baud rate setting, data may not reach the host correctly.

Stop Bits

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. The number of stop bits selected (one or two) depends on the number the receiving terminal is programmed to accommodate. Set the number of stop bits to match host device requirements.

Parity

This feature specifies parity required for sending and receiving data. A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements.

- Select None when no parity bit is required.
- Select Odd parity and the parity bit value is set to 0 or 1, based on data, to ensure that an odd number of 1 bits are contained in the coded character.
- Select Even parity and the parity bit value is set to 0 or 1, based on data, to ensure that an even number of 1 bits are contained in the coded character.

Handshaking Control

The data interface consists of an RS-232 port designed to operate either with or without the hardware handshaking lines, Request to Send (RTS), and Clear to Send (CTS). Handshaking Control includes the following options:

- RTS — RTS is asserted during transmissions. CTS is ignored.
- RTS/CTS — RTS is asserted during transmissions. CTS gates transmissions.
- RTS/XON/XOFF — RTS is asserted during transmissions. CTS is ignored. XON and XOFF gate transmissions.
- RTS On/CTS — RTS is always asserted. CTS gates transmissions.
- RTS/CTS Scan Control — RTS is asserted during transmissions. CTS gates transmissions and controls enable and disable state of scanner.

RS-232/USB COM Parameters

Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay.

To set the delay:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Go to [page 23](#) and scan the bar code: SELECT INTERCHARACTER DELAY SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix D, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

NOTE

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit.
- This completes the procedure. See the following table for examples of how to set this feature.

Table 6. Intercharacter Delay Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	50ms	150ms	600ms	850ms
2	Divide by 10 (pad with leading zeroes to yield two-digits)	05	15	60	85
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT INTERCHARACTER DELAY SETTING				
5	Scan Two Characters From Appendix D, Keypad	'0' and '5'	'5' and '0'	'6' and '0'	'8' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

ACK NAK Options

This enables/disables the ability of the scanner to support the RS-232 ACK/NAK protocol. When configured, the scanner and/or host sends an 'ACK' when it receives data properly, and sends 'NAK' when the data is in error.

Options are:

- Disable
- Enable for label transmission — The scanner expects an ACK/NAK response from the host when a label is sent
- Enable for host-command acknowledge — The scanner will respond with ACK/NAK when the host sends a command
- Enable for label transmission and host-command acknowledge

ACK Character

This setting specifies an ASCII character or hex value to be used as the ACK character. ASCII characters or any hex value from 0 to 0xFF can be selected.



Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option [Stop Bits](#) has been set as 7 Data Bits.

NOTE

1. Determine the desired character or value.
2. Use the [ASCII Chart](#) on the inside back cover of this manual to find the hex equivalent for the desired character/value.
3. Go to [page 26](#) and scan ENTER/EXIT PROGRAMMING MODE to enter Programming Mode.
4. Scan the bar code: SELECT ACK CHARACTER SETTING.
5. Scan the appropriate two alphanumeric characters from the keypad in [Appendix D, Keypad](#), that represent the desired character/value determined above. The second character will cause a two-beep indication.
6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit.

See the table below for examples of how to set this feature.

Table 7. ACK Character Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Character/Value	ACK	\$	@	>
2	Hex equivalent from ASCII Chart	0x06	0x24	0x40	0x3E
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT ACK CHARACTER SETTING				
5	Scan Two Characters from Appendix D, Keypad	'0' and '6'	'2' and '4'	'4' and '0'	'3' AND 'E'
6	Scan ENTER/EXIT PROGRAMMING MODE				

NAK Character

This setting specifies an ASCII character or hex value to be used as the NAK character. ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option [Stop Bits](#) has been set as 7 Data Bits.

To set this feature:

1. Determine the desired character or value.
2. Use the [ASCII Chart](#) on the inside back cover of this manual to find the hex equivalent for the desired character/value.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT NAK CHARACTER SETTING.
5. Scan the appropriate two alpha-numeric characters from the keypad in [Appendix D, Keypad](#), that represent the desired character/value determined above. The second character will cause a two-beep indication.
6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 8. NAK Character Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Character/Value	NAK	\$	@	>
2	Hex equivalent	0x15	0x24	0x40	0x3E
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT NAK CHARACTER SETTING				
5	Scan Two Characters From Appendix D, Keypad	'1' and '5'	'2' and '4'	'4' and '0'	'3' AND 'E'
6	Scan ENTER/EXIT PROGRAMMING MODE				

ACK NAK Timeout Value

This option specifies the amount of time the scanner waits for an ACK character from the host following label transmission. The selectable timeout range is 200 milliseconds to 15,000ms (15 seconds) in 200ms increments. A selection of 0 disables the timeout.

To set this value:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 200 (setting is in 200ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Go to [page 27](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT ACK NAK TIMEOUT VALUE SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix D, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 9. ACK NAK Timeout Value Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	200ms	1,000ms (1 sec.)	5200ms (5.2 sec.)	15,000ms (15 sec.)
2	Divide by 200	01	05	26	75
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT ACK NAK TIMEOUT VALUE SETTING				
5	Scan Two Characters From Appendix D, Keypad	'0' and '1'	'0' and '5'	'2' and '6'	'7' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

ACK NAK Retry Count

This feature specifies the number of times the scanner retries a label transmission due to a retry condition. The selectable range is from 1 to 254 retries. A selection of 0 disables the count, and a selection of 255 specifies unlimited retries.

To set this feature:

1. Determine the desired setting.
2. Pad the number with leading zeroes to yield three digits. For example: 0 = 000, 5 = 005, 20 = 020, etc.
3. Go to [page 28](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT ACK NAK RETRY COUNT SETTING.
5. Scan the appropriate three digits from the keypad in [Appendix D, Keypad](#), that represent the number which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode. This completes the procedure. See the table below for examples of how to set this feature.

Table 10. ACK NAK Retry Count Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	Disable Retry Count	3 Retries	54 Retries	Unlimited Retries
2	Pad with leading zero(es)	000	003	054	255
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT ACK NAK RETRY COUNT SETTING				
5	Scan Three Characters From Appendix D, Keypad	'0', '0' and '0'	'0', '0' and '3'	'0', '5' and '4'	'2', '5' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Disable Character

Specifies the value of the RS-232 host command used to disable the scanner.

ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option [Stop Bits](#) has been set as 7 Data Bits.

To set the value:

1. Determine the desired character or value. A setting of 0xFF indicates the Disable Character is not used (not available).
2. Use the [ASCII Chart](#) on the inside back cover of this manual to find the hex equivalent for the desired character/value.
3. Go to [page 30](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT DISABLE CHARACTER SETTING.
5. Scan the appropriate two alphanumeric characters from the keypad in [Appendix D, Keypad](#), that represent the desired character/value determined above. The second character will cause a two-beep indication.
6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 11. Disable Character Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired character/value	'd'	'}'	'D'	Disable Command Not Used
2	Hex equivalent from ASCII Chart	0x64	0x7D	0x44	0xFF
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT DISABLE CHARACTER VALUE SETTING				
5	Scan Two Characters From Appendix D, Keypad	'6' and '4'	'7' and 'D'	'4' and '4'	'F' AND 'F'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Enable Character

Specifies the value of the RS-232 host command used to enable the scanner.

ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option [Stop Bits](#) has been set as 7 Data Bits.

To set this feature:

Determine the desired character or value. A setting of 0xFF indicates the Enable Character is not used (not available).

1. Determine the desired character or value.
2. Use the [ASCII Chart](#) on the inside back cover of this manual to find the hex equivalent for the desired character/value.
3. Go to [page 31](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT ENABLE CHARACTER SETTING.
5. Scan the appropriate two alphanumeric characters from the keypad in [Appendix D, Keypad](#), that represent the desired character/value determined above. The second character will cause a two-beep indication.
6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 12. Enable Character Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired character/value	'e'	'j'	'E'	Enable Command Not Used
2	Hex equivalent from ASCII Chart	0x65	0x7D	0x45	0xFF
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT ENABLE CHARACTER VALUE SETTING				
5	Scan Two Characters From Appendix D, Keypad	'6' and '5'	'7' and 'D'	'4' and '5'	'F' AND 'F'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Keyboard Interface

Wedge Quiet Interval

Specifies the amount of time the scanner looks for keyboard activity before it breaks the keyboard connection in order to transmit data to host. The range is from 0 to 990ms in 10ms increments.



This feature applies **ONLY** to the Keyboard Wedge interface.

NOTE

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Go to [page 39](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Prog. Mode.
4. Scan the bar code: SELECT WEDGE QUIET INTERVAL SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix D, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

NOTE

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit.

This completes the procedure to set the Wedge Quiet Interval. See the table below for examples of how to set this feature.

Table 13. Wedge Quiet Interval Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	10ms	150ms	600ms	850ms
2	Divide by 10 (and pad with leading zeroes)	01	15	60	85
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT WEDGE QUIET INTERVAL SETTING				
5	Scan Two Characters From Appendix D, Keypad	'0' and '1'	'1' and '5'	'6' and '0'	'8' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay.



This feature applies ONLY to the Keyboard Wedge interface.

NOTE

To set the delay:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Go to [page 40](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT INTERCHARACTER DELAY SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix D, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

NOTE

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 14. Intercharacter Delay Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	50ms	150ms	600ms	850ms
2	Divide by 10 (and pad with leading zeroes to yield two-digits)	05	15	60	85
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT INTERCHARACTER DELAY SETTING				
5	Scan Two Characters From Appendix D, Keypad	'0' and '5'	'1' and '5'	'6' and '0'	'8' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Intercode Delay

Specifies the delay between labels transmitted to the host for this interface. The selectable range for this feature is from 0 to 99 seconds.

Follow these instructions to set this feature:

1. Determine the desired setting.
2. Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc
3. Go to [page 41](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT INTERCODE DELAY SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix D, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.
- This completes the procedure. See the table below for examples of how to set this feature.

Table 15. Wedge Intercode Delay Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	No Delay	5 Seconds	60 Seconds	99 Seconds
2	Pad with leading zero(es)	00	05	60	99
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT INTERCODE DELAY SETTING				
5	Scan Two Characters From Appendix D, Keypad	'0' and '0'	'0' and '5'	'6' and '0'	'9' AND '9'
6	Scan ENTER/EXIT PROGRAMMING MODE				


Data Format

Data Editing

When a bar code is scanned, additional information can be sent to the host computer along with the bar code data. This combination of bar code data and supplementary user-defined data is called a 'message string.' The Data Editing features can be used to build specific user-defined data into a message string.

There are several types of selectable data characters that can be sent before and after scanned data. You can specify if they should be sent with all symbologies, or only with specific symbologies. The following shows the available elements you can add to a message string:

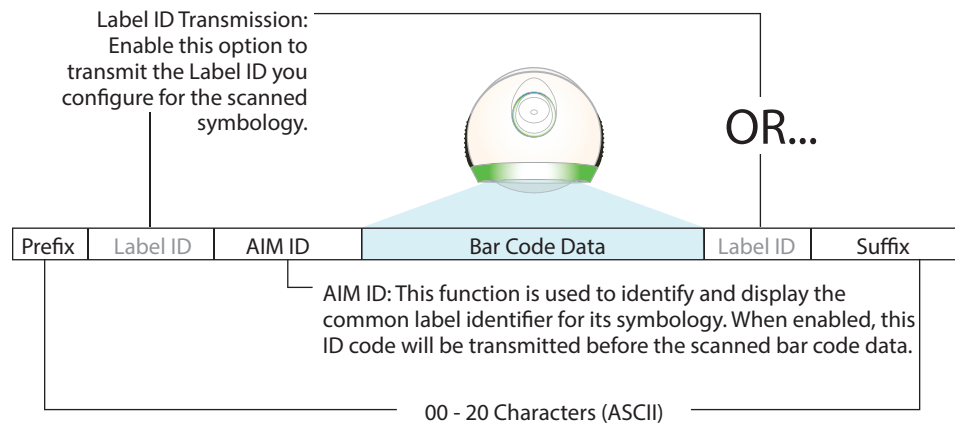Figure 3. Breakdown of a Message String



NOTE

Additional advanced editing is available. See the Advanced formatting features in the Datalogic Aladdin configuration software, or contact Technical Support (as described on [page 4](#)) for more information.


Please Keep In Mind...

- Modifying a message string is not a mandatory requirement. Data editing is a sophisticated feature allowing highly customizable output for advanced users. Factory default settings for data editing is typically set to NONE.
- A prefix or suffix may be applied only to a specified symbology (reference [Symbologies, starting on page 79](#)) or across all symbologies (set via the Global features in [Configuration Using Bar Codes, starting on page 15](#)).
- You can add any character from the [ASCII Chart](#) (from 00-FF) on the inside back cover of this manual as a prefix, suffix or Label ID.
- Enter prefixes and suffixes in the order in which you want them to appear on the output.

Global Prefix/Suffix

Up to 20 ASCII characters may be added as a prefix (in a position before the bar code data) and/or as a suffix (in a position following the bar code data) as indicated.

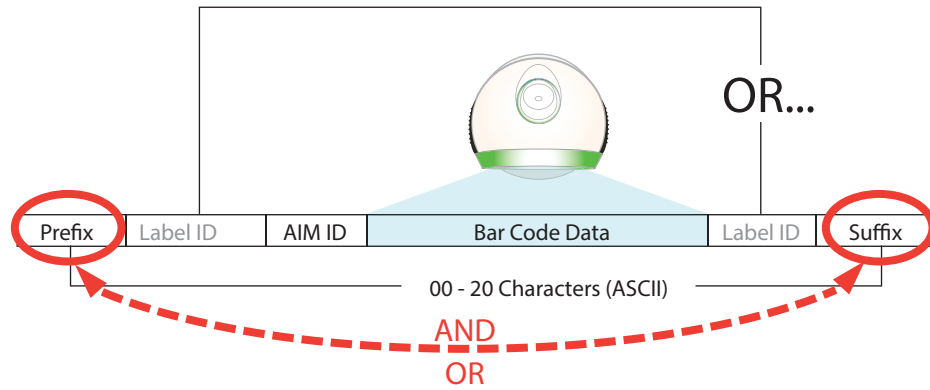Figure 4. Prefix and Suffix Positions



Example: Setting a Prefix

In this example, we'll set a prefix for all symbologies.

1. Determine which ASCII character(s) are to be added to scanned bar code data. In this example, we'll add a dollar sign ('\$') as a prefix.
2. Go to [page 46](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code, then scan the SET GLOBAL PREFIX bar code.
3. Reference the [ASCII Chart](#) on the inside back cover of this manual to find the hex value assigned to the desired character. The corresponding hex number for the '\$' character is 24.
4. To enter this selection code, scan the '2' and '4' bar codes from [Appendix D, Keypad](#).



NOTE

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

4. If less than the expected string of 20 characters are selected, scan the ENTER/EXIT bar code to terminate the string.
5. Scan the ENTER/EXIT bar code once again to exit Programming Mode.
6. The resulting message string would appear as follows:
Scanned bar code data: **12345**
Resulting message string output: **\$12345**

Global AIM ID



This feature enables/disables addition of AIM IDs for all symbology types.

NOTE


AIM label identifiers (as opposed to custom characters you select yourself as with label identifiers) can be included with scanned bar code data. AIM label identifiers consist of three characters as follows:

- A close brace character (ASCII '['), followed by...
- A code character (see the table below), followed by...
- A modifier character (the modifier character is symbol dependent).

SYMBOLGY	CHAR	SYMBOLGY	CHAR
UPC/EAN	E ^a	Code 128/GS1-128	C
Code 39 and Code 32	A	DataBar Omnidirectional, DataBar Expanded	e
Codabar	F	Standard 2 of 5	S
Interleaved 2 of 5	I	ISBN	X ^b
Code 93	G	Code 11	H

- a. UPC-A and UPC-E labels are converted to EAN 13 when adding AIM IDs.
- b. ISBN (X with a 0 modifier character)

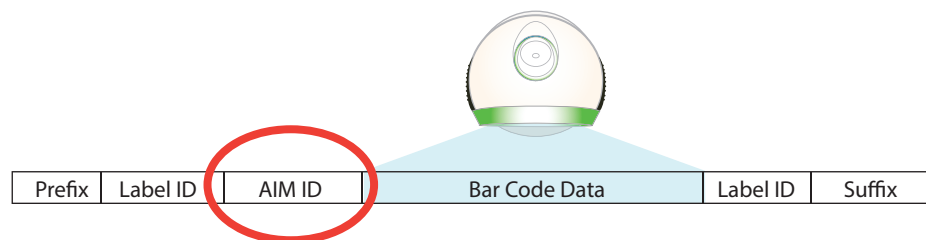Figure 5. AIM ID



Label ID

A Label ID is a customizable code of up to three ASCII characters (each can be one of hex 0x01-0xFF), used to identify a bar code (symbology) type. It can be appended previous to or following the transmitted bar code data depending upon how this option is enabled. This feature provides options for configuring custom Label IDs as a pre-loaded set or individually per symbology (see "[Label ID: Set Individually Per Symbology](#)" on page 49). If you wish to program the scanner to always include an industry standard label identifier for ALL symbology types, see "[Global AIM ID](#)" on page 47.

Label ID: Pre-loaded Sets

The following table lists the pre-loaded label ID sets for the USA and Europe.

Table 16. Label ID Pre-loaded Sets

Symbology	USA Label ID set		EU Label ID set	
	ASCII character	Hex value	ASCII character	Hexadecimal value
ABC Codabar	S	530000	S	530000
CODABAR	%	250000	R	520000
Codablock F	l	6C0000	m	6D0000
Code 39 CIP	Y	590000	Y	590000
Code 93	&	260000	U	550000
CODE11	CE	434500	b	620000
CODE128	#	230000	T	540000
CODE32	A	410000	X	580000
CODE39	*	2A0000	V	560000
CODE4	4	340000	4	340000
CODE5	j	6A0000	j	6A0000
CODE93	&	260000	U	550000
DATALOGIC 20F5	s	730000	s	730000
EAN13	F	460000	B	420000
EAN13 P2	F	460000	L	4C0000
EAN13 P5	F	460000	M	4D0000
EAN8	FF	464600	A	410000
EAN8 P2	FF	464600	J	4A0000
EAN8 P5	FF	464600	K	4B0000
FOLLETT 20F5	O	4F0000	O	4F0000
GS1 DATABAR EXPANDED	RX	525800	t	740000
GS1 DATABAR LIMITED	RL	524C00	v	760000

Symbology	USA Label ID set		EU Label ID set	
GS1 DATABAR OMNIDIRECTIONAL	R4	523400	u	750000
GS1-128		000000	k	6B0000
I2OF5	i	690000	N	4E0000
IATA	IA	494100	&	260000
Industrial 2 of 5	W	570000	W	570000
Interleaved 2 of 5 CIP HR	e	650000	e	650000
ISBN	l	490000	@	400000
ISBT128	f	660000	f	660000
ISSN	n	6E0000	n	6E0000
MSI	@	400000	Z	5A0000
S25	s	730000	P	500000
UPCA	A	410000	C	430000
UPCA P2	A	410000	F	460000
UPCA P5	A	410000	G	470000
UPCE	E	450000	D	440000
UPCE P2	E	450000	H	480000
UPCE P5	E	450000	I	490000

Label ID: Set Individually Per Symbology

To configure a Label ID individually for a single symbology:

1. Scan the ENTER/EXIT bar code.
2. Select Label ID position as either BEFORE (Enable as Prefix) or AFTER (Enable as suffix) by scanning the appropriate bar code in the section ["Label ID Control" on page 49](#). Reference [Figure 6](#) for Label ID positioning options if multiple identification features are enabled.
3. Scan a bar code to select the symbology for which you wish to configure a custom Label ID from the section [Label ID Symbology Selection, starting on page 50](#).
4. Determine the desired character(s) (you may choose up to three) which will represent the Label ID for the selected symbology.
5. Turn to the [ASCII Chart](#) on the inside back cover of this manual and find the equivalent hex digits associated with your choice of Label ID. For example, if you wish to select an equal sign (=) as a Label ID, the chart indicates its associated hex characters as 3D. Turn to [Keypad, starting on page 267](#) and scan the bar codes representing the hex characters determined. For the example given, the characters '3' and 'D' would be scanned. More examples of Label ID settings are provided in [Table 17](#).




NOTE

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT bar code to exit Label ID entry.
7. Scan the ENTER/EXIT bar code once again to exit Programming Mode.

This completes the steps to configure a Label ID for a given symbology.

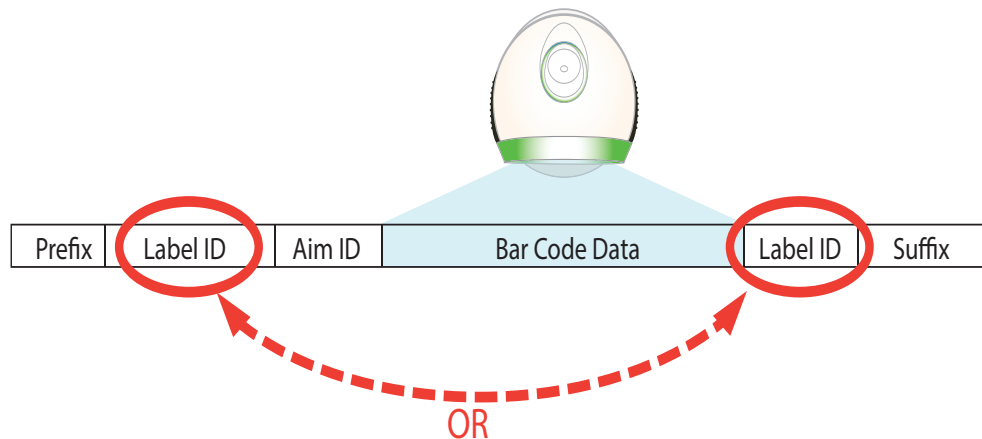Figure 6. Label ID Position Options



Label ID: Set Individually Per Symbology — continued

Table 17. Label ID Examples

STEP	ACTION	EXAMPLES			
1.	Scan the ENTER/EXIT bar code	(Scanner enters Programming Mode)			
2.	Determine placement of the Label ID characters BEFORE or AFTER with regard to scanned data using "Label ID Control" on page 49	Enable as Prefix	Enable as Suffix	Enable as Prefix	Enable as Suffix
3.	Scan the bar code selecting the symbology type you wish to designate label ID characters for using Label ID Symbology Selection, starting on page 50.	GS1 DataBar Omnidirectional	Code 39	Interleaved 2 of 5	Code 32
4.	Custom Label ID example (desired characters):	D B *	= C 3	+	P H
5.	Find hex equivalents from the ASCII table (inside back cover), then scan in these digits/characters using the bar codes in the section: Keypad, starting on page 267. If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.	44 42 2A	3D 43 33	2B	50 48
6.	Scan the ENTER/EXIT bar code	(Scanner exits Label ID entry)			
7.	Scan the ENTER/EXIT bar code once again	(Scanner exits Programming Mode)			
Result:		DB*[bar code data]	[bar code data]=C3	+ [bar code data]	[bar code data]PH

Character Conversion

Character conversion is an eight byte configuration item. The eight bytes are 4 character pairs represented in hexadecimal ASCII values. The first character in the pair is the character that will be converted. The second character in the pair is the character to convert to. If the character to convert in a pair is FF, then no conversion is done.

For example, if you have the character conversion configuration item set to the following: 41423132FFFFFFFF

The first pair is 4142 or AB (41 hex is an ASCII capital A, 42 hex is an ASCII capital B) and the second pair is 3132 or 12 (31 hex is an ASCII 1, 32 is an ASCII 2). The other two pairs are FFFF and FFFF.

With the label, AB12BA21, it would look as follows after the character conversion: BB22BB22.

The A characters were converted to B characters and the 1 characters were converted to 2 characters. Nothing is done with the last two character pairs, since they are all FF.

To set Character Conversion:

1. Scan the ENTER/EXIT bar code.
2. Scan the bar code for ["Character Conversion" on page 56](#)
3. Determine the desired string. Sixteen positions must be determined as in the above example. Next, turn to the [ASCII Chart](#) on the inside back cover of this manual and find the equivalent hex digits needed to fulfill the string.
4. Turn to [Appendix D, Keypad](#) and scan the bar codes representing the hex characters determined in the previous step.
5. Scan the ENTER/EXIT bar code to exit Programming Mode.



NOTE

If less than the expected string of 16 characters are selected, scan the ENTER/EXIT bar code twice to accept the selections and exit Programming Mode.

Reading Parameters

Label Gone Timeout

This feature sets the time after the last label segment is seen before the scanner prepares for a new label. The timeout can be set within a range of 10 milliseconds to 2,550 milliseconds (2.55 seconds) in 10ms increments. Label Gone Timeout does not apply to scan modes that require a trigger pull for each label that is read

Follow these instructions to set this feature:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield three digits. For example: 0 = 000, 5 = 005, 20 = 020, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT LABEL GONE TIMEOUT SETTING.
5. Scan the appropriate three alpha-numeric characters from the keypad in [Appendix D, Keypad](#) representing the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 18. Timeout Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	50ms	150ms	1800ms (1.8 sec.)	2550ms (2.55 sec.)
2	Divide by 10 (and pad with leading zeroes)	005	015	180	255
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT LABEL GONE TIMEOUT SETTING				
5	Scan Three Characters From Appendix D, Keypad	'0', '0' and '5'	'0', '1' and '5'	'1', '8' and '0'	"2', '5' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Good Read LED Duration

This feature specifies the amount of time that the Good Read LED remains on following a good read. The good read LED on time can be set within a range of 0.1 to 25.5 seconds in 100ms increments.

Follow these instructions to set this feature:

1. Determine the desired setting in milliseconds. A setting of 0 means that the good read LED stays on until the next time the trigger is pulled.
2. Divide the desired setting by 100 (setting is in 100ms increments). Pad the result with leading zeroes to yield three digits. For example: 0 = 000, 5 = 000, 20 = 020, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT GOOD READ LED DURATION SETTING.
5. Scan the appropriate three digits from the keypad in [Appendix D, Keypad](#) representing the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 19. Good Read LED Duration Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	Good Read LED stays on until next trigger pull (00)	200ms	1500ms (1.5 sec.)	2500ms (2.5 sec.)
2	Divide by 100 (and pad with leading zeroes)	000	002	015	025
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT GOOD READ LED DURATION SETTING				
5	Scan Three Characters From Appendix D, Keypad	'0', '0' and '0'	'0', '0' and '2'	'0', '1' and '5'	'0', '2' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Symbologies

Decoding Levels

Decoding Levels are used to configure a bar code symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.

- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some bar code labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.

Set Length

Length Control allows you to select either variable length decoding or fixed length decoding for the specified symbology.

Variable Length — For variable length decoding, a minimum and maximum length may be set.

Fixed Length — For fixed length decoding, two different lengths may be set.

Set Length 1

This feature specifies one of the bar code lengths for a given symbology. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode.

Reference the [Symbologies](#) section to view the selectable range (number of characters) for the symbology being set.

Follow these instructions to set this feature:

1. Determine the desired character length. Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
3. Scan the 'Select Length 1 Setting' for the symbology being set.
4. Scan the appropriate two digits from the keypad in [Appendix D, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

5. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode. This completes the procedure. See the table below for examples of how to set this feature.

Table 20. Length 1 Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	01 Character	07 Characters	52 Characters	74 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT LENGTH 1SETTING for the desired symbology				
4	Scan Two Characters From Appendix D, Keypad	'0' and '1'	'0' and '7'	'5' and '2'	'7' AND '4'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Set Length 2

This feature specifies one of the bar code lengths for a given symbology. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode.

Reference the [Symbologies](#) section to view the selectable range (number of characters) for the symbology being set. A setting of 00 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length. Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
3. Scan the 'Select Length 2 Setting' for the symbology being set.
4. Scan the appropriate two digits from the keypad in [Appendix D, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

5. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.
- This completes the procedure. See the table below for examples of how to set this feature.

Table 21. Length 2 Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 (ignore second length)	07 Characters	52 Characters	74 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT LENGTH 2 SETTING				
4	Scan Two Characters From Appendix D, Keypad	'0' and '0'	'0' and '7'	'5' and '2'	'7' and '4'
5	Scan ENTER/EXIT PROGRAMMING MODE				

NOTES



Appendix A

Technical Specifications

The table below contains Physical and Performance Characteristics, User Environment and Regulatory information. [Table 23](#) provides Standard Cable Pinouts.

Table 22. Technical Specifications


Item	Description
Electrical Features	
Power Supply RS-232 interface	5 Vdc \pm 5%
Consumption:	Max operating current @ 5V: <500 mA Typical operating (changing colors) current @ 5V < 430 mA Standby mode/USB suspend < 2,5 mA
Max. Scan Rate	1500 lines/sec.
Reading Indicators	Ring of light and top indicator Illumination, Beep or jingle
Optical and Read Performance	
Ambient Light Immunity	Fluorescent, incandescent, mercury vapor and sodium vapor: 450 ft-candles (4,844 lux) Sunlight: 8,000 ft-candles (86,111 lux)
Motion Tolerance	On 100% EAN13 @ 10cm from nose: > 4 m/sec.
Scan Technology	Laser
Wavelength	650 nm
Laser Safety Class	Class 1 IEC 60825-1:2007
Reading Field	5 mils: 5 - 55 mm 100% EAN13: 0 to 275 mm
Max. Resolution	5 mils
PCS (Datalogic Test Chart)	35%
Environmental Features	
Working Temperature	0 °C to +40 °C (+32° to +104° F)
Storage Temperature	-40 °C to +70 °C (-40° to +158° F)
Humidity	90% non-condensing
Drop Resistance	1.2 m

Item	Description
ESD Protection	16 KV
Protection Class	IP30
Mechanical Features	
Weight (without cable)	445 g (15.7 oz)
Cable Length	2 m (6 ft 6 in)
Decode Capability	UPC/EAN, P2 / P5 add-ons; ISBN; ISSN; GTIN, add on 2/5/8; Codabar; Interleaved 2/5; Code 93; Code 128; Code 39; Code 32; Code 11; Industrial 2/5; IATA Industrial 2/5; EAN 128; Code 4; Code 5; Datalogic 2 of 5; Standard 2 of 5; MSI; Concatenated ISBT 128
Interfaces Supported	USB (see page 6) RS-232 (see page 6) Keyboard Wedge (KBW) (see page 6)

Standard Cable Pinouts

Figure 7 and Table 23 provide standard pinout information for the scanner's cable.

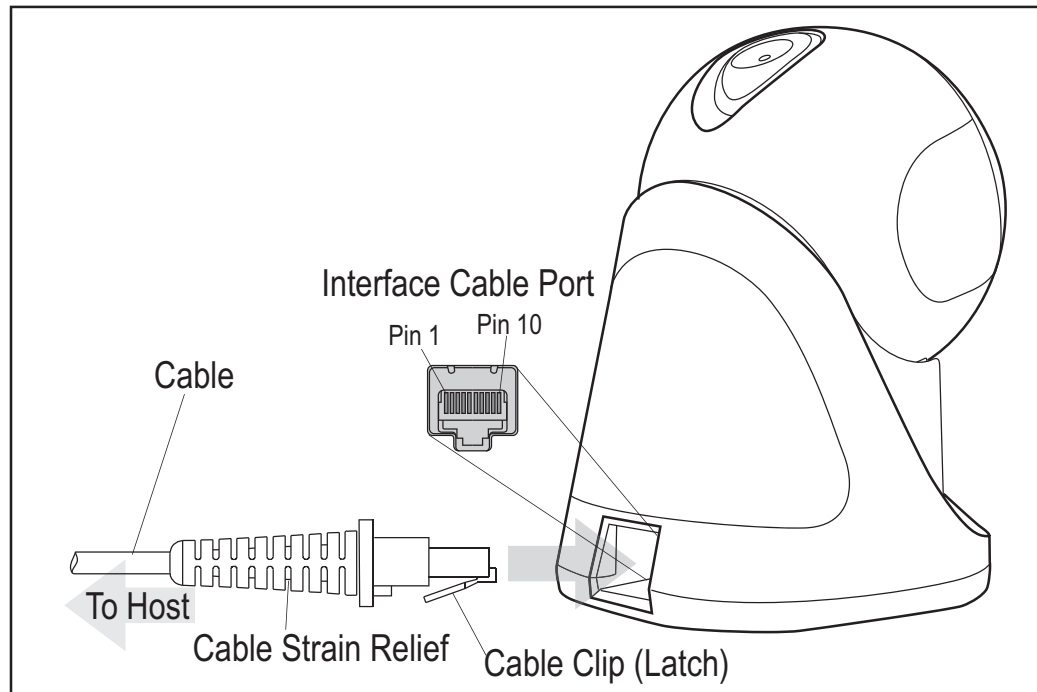Figure 7. Standard Cable Pinouts



The signal descriptions in Table 23 apply to the connector on the scanner and are for reference only.

Table 23. Standard Cable Pinouts — Scanner Side

Pin	RS-232	USB	Keyboard Wedge
1	RTS (out)		
2		D+	CLKIN (KBD side)
3		D-	DATAIN (KBD side)
4	GND	GND	GND
5	RX		
6	TX		
7	VCC	VCC	VCC
8			CLKOUT (PC side)
9			DATAOUT (PC side)
10	CTS (in)		

LED and Speaker Indications

The scanner's speaker sounds and its LED illuminates to indicate various functions or errors on the scanner. The tables below list these indications. One exception to the behaviors listed in the tables is that the scanner's functions are programmable, and may or may not be turned on. For example, certain indications such as the power-up beep can be disabled using programming bar code labels.

Table 24. LED and Speaker Indications

INDICATION	DESCRIPTION	LED	SPEAKER
Power-up Beep	The scanner is in the process of powering-up.	Top green LED flashes/ blinks on power-up but this may be too rapid to view. With a USB interface, the LED blinks until enumeration with the host is completed.	Scanner beeps four times at highest frequency and volume upon power-up.
Good Read Beep	A label has been successfully scanned by the scanner.	LED behavior for this indication is configurable via the feature ' Good Read: When to Indicate '	The scanner will beep once at current frequency, volume, mono/bi-tonal setting and duration upon a successful label scan.
ROM Failure	There is an error in the scanner's software/programming	Flashes 200mS on / 200mS off	Scanner sounds one error beep at highest volume for 200 mS.
Limited Scanning Label Read	Indicates that a host connection is not established when the USB interface is enabled.	Top Green LED blinks	Scanner 'chirps' six times at the highest frequency and current volume.
Scanner Disabled	The scanner has been disabled by the host.	The LED blinks continuously 100mS on / 900 mS off	N/A

Programming Mode - The following indications ONLY occur when the scanner is in Programming Mode.

INDICATION	DESCRIPTION	LED	SPEAKER
Label Programming Mode Entry	A valid programming label has been scanned.	LED blinks continuously	Scanner sounds four low frequency beeps.
Label Programming Mode Rejection of Label	A label has been rejected.	N/A	Scanner sounds three times at lowest frequency & current volume.

Programming Mode - The following indications ONLY occur when the scanner is in Programming Mode.

INDICATION	DESCRIPTION	LED	SPEAKER
Label Programming Mode Acceptance of Partial Label	In cases where multiple labels must be scanned to program one feature, this indication acknowledges each portion as it is successfully scanned.	N/A	Scanner sounds one short beep at highest frequency & current volume.
Label Programming Mode Acceptance of Programming	Configuration option(s) have been successfully programmed via labels and the scanner has exited Programming Mode.	N/A	Scanner sounds one high frequency beep and 4 low frequency beeps followed by reset beeps.
Label Programming Mode Cancel Item Entry	Cancel label has been scanned.	N/A	Scanner sounds two times at low frequency and current volume.

Error Codes

Upon startup, if the scanner sounds a long tone, this means the scanner has not passed its automatic Selftest and has entered FRU (Field Replaceable Unit) isolation mode. If the scanner is reset, the sequence will be repeated. The following table describes the LED flashes/beep codes associated with an error found.

NUMBER OF LED FLASHES/ BEEPS	ERROR	CORRECTIVE ACTION
1	Configuration	Contact Helpdesk for assistance
2	Interface PCB	
5	[Reserved]	
6	Digital PCB	

NOTES



Appendix B

Standard Defaults

The most common configuration settings are listed in the 'Default' column of [Table 25](#). The settings in this table are as applied to a standard RS-232 interface. See [Table 26](#) for a listing of default exceptions to this list as applied to other interface types. Page references are also provided for feature descriptions and programming bar codes for each parameter. A column has also been provided for recording of your preferred default settings for these same configurable features.

Table 25. Standard Defaults

Parameter	Default	Your Setting	Page Number
GLOBAL INTERFACE FEATURES			
Host Commands — Obey/Ignore	Obey		17
USB Suspend Mode	Disable		18
RS-232			
Baud Rate	115200		19
Stop Bits	1 Stop Bit		20
Parity	None		21
Handshaking Control	Disable		22
RS-232/USB-COM			
Intercharacter Delay	No Delay		23
Beep On ASCII BEL	Disable		24
Beep On Not on File	Enable		24
ACK Character	'ACK'		26
NAK Character	'NAK'		26
ACK NAK Timeout Value	600 ms		27
ACK NAK Retry Count	3 Retries		28
ACK NAK Error Handling	Ignore Errors Detected		29
Indicate Transmission Failure	Enable		30

Parameter	Default	Your Setting	Page Number
Disable Character	'D'		30
Enable Character	'E'		31
KEYBOARD WEDGE			
Country Mode	U.S. Keyboard		33
Caps Lock State	Caps Lock OFF		36
Numlock	Numlock Key Unchanged		36
Keyboard Numeric Keypad	Standard Keys		37
Keyboard Send Control Characters	Disable		38
Wedge Quiet Interval	100ms		39
Intercharacter Delay	No Delay		40
Intercode Delay	100 ms		41
USB Keyboard Speed	1 ms		42
USB-OEM			
USB-OEM Device Usage	Handheld Scanner		44
USB-OEM Interface Options	Ignore		44
DATA FORMAT			
Global Prefix/Suffix	No Global Prefix Global Suffix = 0x0D (CR)		46
Global AIM ID	Disable		47
GS1-128 AIM ID	Enable		47
Label ID Control	Disable		49
Case Conversion	Disable		56
Character Conversion	No Char Conversion		56
READING PARAMETERS			
Double Read Timeout	0.6 Second		58
Label Gone Timeout	160 ms		60
LED and SPEAKER Indications			
Power On Alert	4 Beeps		66

Parameter	Default	Your Setting	Page Number
Good Read: When to Indicate	After Decode		73
Good Read Beep Type	Mono		74
Good Read Beep Frequency	Medium		74
Good Read Beep Length	80 ms		76
Good Read Beep Length — continued	Illumination Off during beep		77
Good Read Speaker Volume	High		75
Good Read LED Duration	LED on until next trigger pull		77
SYMBOLOGIES			
Coupon Control	Enable only UPC/EAN		80
UPC-A			
UPC-A Enable/Disable	Enable		81
UPC-A Check Character Transmission	Enable		81
Expand UPC-A to EAN-13	Don't Expand		82
UPC-A Number System Character Transmission	Transmit		82
In-Store Minimum Reads	2		83
UPC-E			
UPC-E Enable/Disable	Enable		84
UPC-E Check Character Transmission	Send		84
Expand UPC-E to EAN-13	Don't Expand		85
Expand UPC-E to UPC-A	Don't Expand		85
UPC-E Number System Character Transmission	Transmit		86
UPC-E Minimum Read	2		86
EAN 13			
EAN 13 Enable/Disable	Enable		87
EAN 13 Check Character Transmission	Send		87
EAN-13 Flag 1 Character	Transmit		88

Standard Defaults

Parameter	Default	Your Setting	Page Number
EAN-13 ISBN Conversion	Disable		88
ISSN Enable/Disable	Disable		89
EAN 13 Minimum Reads	1		89
EAN 8			
EAN 8 Enable/Disable	Enable		90
EAN 8 Check Character Transmission	Send		90
Expand EAN 8 to EAN 13	Disable		91
EAN 8 Minimum Reads	1		91
UPC/EAN Global Settings			
UPC/EAN Decoding Level	2		92
UPC/EAN Price Weight Check	Disable		93
UPC-A Minimum Reads	1 Read		94
Add-ons			
Optional Add-ons	Disable P2, P5 and P8		95
Optional Add-On Timer	70 ms		96
P2 Add-Ons Minimum Reads	2		97
P5 Add-Ons Minimum Reads	1		98
GS1 DataBar Omnidirectional			
GS1 DataBar Omnidirectional Enable/Disable	Disable		99
GS1 DataBar Omnidirectional GS1-128 Emulation	Disable		99
GS1 DataBar Omnidirectional Minimum Reads	1		100
GS1 DataBar Expanded			
GS1 DataBar Expanded Enable/Disable	Disable		101
GS1 DataBar Expanded GS1-128 Emulation	Disable		101
GS1 DataBar Expanded Minimum Reads	1		102
GS1 DataBar Expanded Length Control	Variable		103

Parameter	Default	Your Setting	Page Number
GS1 DataBar Expanded Set Length 1	1		103
GS1 DataBar Expanded Set Length 2	74		104
GS1 DataBar Limited			
GS1 DataBar Limited Enable/Disable	Disable		105
GS1 DataBar Limited GS1-128 Emulation	Disable		105
GS1 DataBar Limited Minimum Reads	1		106
Code 39			
Code 39 Enable/Disable	Enable		107
Code 39 Check Character Calculation	Don't Calculate		108
Code 39 Check Character Transmission	Send		109
Code 39 Start/Stop Character Transmission	Don't Transmit		109
Code 39 Full ASCII	Disable		110
Code 39 Quiet Zones	Auto		111
Code 39 Minimum Reads	2		112
Code 39 Decoding Level	3		113
Code 39 Length Control	Variable		114
Code 39 Set Length 1	2		115
Code 39 Set Length 2	50		116
Code 39 Interdigit Ratio	4		117
Code 32			
Code 32 Enable/Disable	Disable		119
Code 32 Check Character Transmission	Don't Send		120
Code 32 Start/Stop Character Transmission	Don't Transmit		120
Code 39 CIP			
Code 39 CIP Enable/Disable	Disable		121
Code 128			
Code 128 Enable/Disable	Enable		121

Standard Defaults

Parameter	Default	Your Setting	Page Number
Expand Code 128 to Code 39	Don't Expand		122
Code 128 Check Character Transmission	Don't Send		122
Code 128 Quiet Zones	Auto		124
Code 128 Minimum Reads	1		125
Code 128 Decoding Level	3		126
Code 128 Length Control	Variable		127
Code 128 Set Length 1	1		128
Code 128 Set Length 2	80		129
Code 128 Stitching	Enable		129
GS1-128			
GS1-128 Enable	Transmit in Code 128 Data Format		130
Interleaved 2 of 5			
I 2 of 5 Enable/Disable	Disable		131
I 2 of 5 Check Character Calculation	Disable		132
I 2 of 5 Check Character Transmission	Send		133
I 2 of 5 Minimum Reads	2		141
I 2 of 5 Decoding Level	3		135
I 2 of 5 Length Control	Variable		136
I 2 of 5 Set Length 1	6		137
I 2 of 5 Set Length 2	50		138
Interleaved 2 of 5 CIP			
Interleaved 2 of 5 CIP HR Enable/Disable	Disable		139
Datalogic 2 of 5			
Datalogic 2 of 5 Enable/Disable	Enable		140
Datalogic 2 of 5 Check Character Calculation	Disable		140
Datalogic 2 of 5 Check Character Transmission	Don't Send		141
Datalogic 2 of 5 Minimum Reads	2		141

Parameter	Default	Your Setting	Page Number
Datalogic 2 of 5 Length Control	Variable		142
Datalogic 2 of 5 Set Length 1	12		143
Datalogic 2 of 5 Set Length 2	100		144
Datalogic 2 of 5 Interdigit Ratio	4		145
Codabar			
Codabar Enable/Disable	Disable		147
Codabar Check Character Calculation	Don't Calculate		147
Codabar Check Character Transmission	Send		148
Codabar Start/Stop Character Transmission	Transmit		148
Codabar Start/Stop Character Set	abcd/abcd		149
Codabar Start/Stop Character Match	Don't Require Match		149
Codabar Quiet Zones	Auto		150
Codabar Minimum Reads	2		151
Codabar Decoding Level	3		152
Codabar Length Control	Variable		153
Codabar Set Length 1	3		154
Codabar Set Length 2	50		155
Codabar Interdigit Ratio	4		156
ABC Codabar			
ABC Codabar Enable/Disable	Disable		158
ABC Codabar Concatenation Mode	Static		158
ABC Codabar Dynamic Concatenation Timeout	200mS		159
ABC Codabar Force Concatenation	Disable		159
Code 11			
Code 11 Enable/Disable	Disable		160
Code 11 Check Character Calculation	Check C and K		161
Code 11 Check Character Transmission	Send		161

Standard Defaults

Parameter	Default	Your Setting	Page Number
Code 11 Minimum Reads	2		162
Code 11 Length Control	Variable		163
Code 11 Set Length 1	4		163
Code 11 Set Length 2	50		164
Code 11 Interdigit Ratio	4		165
Code 11 Decoding Level	3		167
Standard 2 of 5			
Standard 2 of 5 Enable/Disable	Disable		168
Standard 2 of 5 Check Character Calculation	Disable		168
Standard 2 of 5 Check Character Transmission	Send		169
Standard 2 of 5 Minimum Reads	2		169
Standard 2 of 5 Decoding Level	3		170
Standard 2 of 5 Length Control	Variable		170
Standard 2 of 5 Set Length 1	8		171
Standard 2 of 5 Set Length 2	50		172
Industrial 2 of 5			
Industrial 2 of 5 Enable/Disable	Disable		173
Industrial 2 of 5 Check Character Calculation	Disable		173
Industrial 2 of 5 Check Character Transmission	Enable		174
Industrial 2 of 5 Length Control	Variable		174
Industrial 2 of 5 Set Length 1	1 Character		175
Industrial 2 of 5 Set Length 2	50 Characters		176
Industrial 2 of 5 Minimum Reads	1 Read		177
IATA			
IATA Enable/Disable	Disable		178
IATA Check Character Transmission	Enable		178

Parameter	Default	Your Setting	Page Number
ISBT 128			
ISBT 128 Concatenation	Disable		179
ISBT 128 Concatenation Mode	Static		179
ISBT 128 Dynamic Concatenation Time-out	200ms		180
ISBT 128 Force Concatenation	Disable		181
ISBT 128 Advanced Concatenation Options	Disable		181
MSI			
MSI Enable/Disable	Disable		182
MSI Check Character Calculation	Enable Mod10		182
MSI Check Character Transmission	Enable		183
MSI Length Control	Variable		183
MSI Set Length 1	1 Character		184
MSI Set Length 2	50 Characters		185
MSI Minimum Reads	4 Reads		186
MSI Decoding Level	Level 3		187
Code 93			
Code 93 Enable/Disable	Disable		188
Code 93 Check Character Calculation	Disable		188
Code 93 Check Character Transmission	Enable		189
Code 93 Length Control	Variable		189
Code 93 Set Length 1	1 Character		190
Code 93 Set Length 2	50 Characters		191
Code 93 Minimum Reads	1 Read		192
Code 93 Decoding Level	Level 3		193
Code 93 Quiet Zones	Auto		194
Codablock F			
Codablock F Enable/Disable	Disable		195
Codablock F EAN Enable/Disable	Disable		195

Standard Defaults

Parameter	Default	Your Setting	Page Number
Codablock F AIM Check	Enable Check C		196
Codablock F Length Control	Variable		196
Codablock F Set Length 1	3 Characters		197
Codablock F Set Length 2	100 Characters		198
Code 4			
Code 4 Enable/Disable	Disable		199
Code 4 Check Character Transmission	Enable		199
Code 4 Hex to Decimal Conversion	Enable		200
Code 5			
Code 5 Enable/Disable	Disable		200
Code 5 Check Character Transmission	Enable		201
Code 5 Hex to Decimal Conversion	Enable		201
Code 4 and Code 5 Common Configuration Items			
Code 4 and 5 Decoding Level	3		202
Code 4 and Code 5 Minimum Reads	1		203
Follett 2 of 5			
Follett 2 of 5 Enable/Disable	Disable		204
BC412			
BC412 Enable/Disable	Disable		204
BC412 Check Character Calculation	Don't Calculate		205
BC412 Minimum Reads	2 Reads		205
BC412 Decoding Level	3		206
BC412 Length Control	Variable Length		207
BC412 Set Length 1	1 Character		207
BC412 Set Length 2	50 Characters		208
Plessey			
Plessey Enable/Disable	Disable		209
Plessey Check Character Calculation	Enable Plessey std. check char. verification		210

Parameter	Default	Your Setting	Page Number
Plessey Check Character Transmission	Enable		211
Plessey Length Control	Variable Length		211
Plessey Set Length 1	1 Character		212
Plessey Set Length 2	50 Characters		213
Plessey Minimum Reads	4		214
Plessey Decoding Level	3		215

Default Exceptions

Table 26. Default Exceptions by Interface Type

Parameter	Default Exception
Interfaces: USB-OEM	
Global Suffix	No Global Suffix
Double Read Timeout	500 msec
Interfaces: All Keyboard Wedge, USB Keyboard	
No unique settings	
Interface: RS232-WN	
Expand UPC-A to EAN-13	Enable
UPC-E Check Character Transmission	Disable
Parity	Odd Parity
Handshaking Control	RTS/CTS
Transmission Label ID Code	Prefix
GS1-128 AIM ID	Disable
UPCE Label ID Character(s)	C
EAN 8 Label ID Character(s)	B
EAN 13 Label ID Character(s)	A
Code ISBN Label ID Character(s)	A
Code 39 Label ID Character(s)	M
Interleaved 2of5 Label ID Character(s)	I
Code Standard 2/5 Label ID Character(s)	H

Standard Defaults

Parameter	Default Exception
Codabar Label ID Character(s)	N
Code 128 Label ID Character(s)	K
GS1-128 Label ID Character(s)	P
Datalogic 2 of 5 Label ID Character(s)	H
ISBT 128 Label ID Character(s)	K
UPCE P2 Label ID Character(s)	C
UPCE/P5 Label ID Character(s)	C
UPCE/GS1-128 Label ID Character(s)	C
EAN8/P2 Label ID Character(s)	B
EAN8/P5 Label ID Character(s)	B
EAN8/GS1-128 Label ID Character(s)	B
EAN13/P2 Label ID Character(s)	A
EAN13/P5 Label ID Character(s)	A
EAN13/GS1-128 Label ID Character(s)	A
GS1 DataBar 14 (Omnidirectional) Label ID Character(s)	E
GS1 DataBar Expanded Label ID Character(s)	E
GS1 DataBar Limited Label ID Character(s)	E
Character Conversion	CR to `
Interface: RS232-OPOS	
Baud Rate	115200 Baud
Transmission Label ID Code	Prefix
GS1-128 AIM ID	Disable
UPCA Label ID Character(s)	C
UPCE Label ID Character(s)	D
EAN 8 Label ID Character(s)	A
EAN 13 Label ID Character(s)	B
Code ISBN Label ID Character(s)	@
Code 39 Label ID Character(s)	V
Code 32 Label ID Character(s)	X
Interleaved 2of5 Label ID Character(s)	N
Code Standard 2/5 Label ID Character(s)	P

Parameter	Default Exception
Codabar Label ID Character(s)	R
Code 11 Label ID Character(s)	b
Code 128 Label ID Character(s)	T
GS1-128 Label ID Character(s)	k
UPCA/P2 Label ID Character(s)	F
UPCA/P5 Label ID Character(s)	G
UPCA/GS1-128 Label ID Character(s)	Q
UPCE P2 Label ID Character(s)	H
UPCE/P5 Label ID Character(s)	I
EAN8/P2 Label ID Character(s)	J
EAN8/P5 Label ID Character(s)	K
EAN8/GS1-128 Label ID Character(s)	*
EAN13/P2 Label ID Character(s)	L
EAN13/P5 Label ID Character(s)	M
EAN13/GS1-128 Label ID Character(s)	#
GS1 DataBar 14 (Omnidirectional) Label ID Character(s)	u
GS1 DataBar Expanded Label ID Character(s)	t
GS1 DataBar Limited Label ID Character(s)	v

NOTES

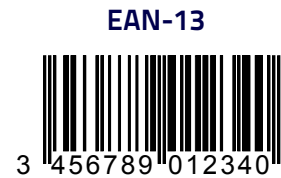


Appendix C

Sample Bar Codes

The sample bar codes in this appendix are typical representations for their symbology types.

1D Bar Codes




Code 128



Interleaved 2 of 5




Code 32



Codabar



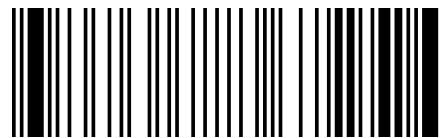Code 93



Code 11



GS1 DataBar (RSS)



NOTE

GS1 DataBar variants must be enabled to read the bar codes below (see [GS1 DataBar \(RSS\)](#) on page 265).



10293847560192837465019283746029478450366523
(GS1 DataBar Expanded Stacked)



1234890hjio9900mnb
(GS1 DataBar Expanded)



08672345650916
(GS1 DataBar Limited)

GS1 DataBar-14



55432198673467
(GS1 DataBar Omnidirectional Truncated)



90876523412674
(GS1 DataBar Omnidirectional Stacked)








78123465709811
(GS1 DataBar Omnidirectional Stacked)






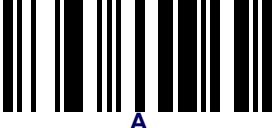
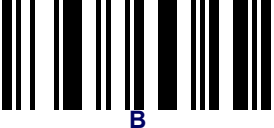
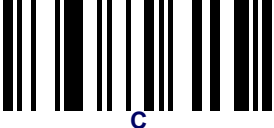
NOTES



Appendix D Keypad

Use the bar codes in this appendix to enter numbers as you would select digits/characters from a keypad.

 0	
	 1
 2	
	 3
 4	

	 5
 6	
	 7
 8	
	 9
 A	
	 B
 C	

	 D
 E	
	 F

NOTES



Appendix E

Scancode Tables

Control Character Emulation

Control character emulation selects from different scancode tables as listed in this appendix. Each of the control character sets below are detailed by interface type in the tables. These apply to Wedge and USB Keyboard platforms.

Control Character 00 — Characters from 00 to 0x1F are sent as control character Ctrl+Keys, special keys are located from 0x80 to 0xA1.

Control Character 01 — Characters from 00 to 0x1F are sent as control character Ctrl+Capital Key, special keys are located from 0x80 to 0xA1.

Control Character 02 — Special keys are located from 00 to 0x1F and characters from 0x80 to 0xFE are intended as an extended ASCII table (Microsoft Windows Codepage 1252 — [see page 276](#)).

Interface Type PC AT PS/2 or USB-Keybaord

Table 27. Scancode Set When Control Character is 00 or 01

	x0	x2	x3	x4	x5	X6	x7	x8	x9	xA	xB	xC	xD	xE	xF	
0x	NULL	SOH	STX	ETX	EOT	ENQ	ACK	BEL	BS	HT	LF	VT	FF	CR	SO	SI
	C(S)+ @	C(S)+A	C(S)+B	C(S)+C	C+D	C(S)+E	C(S)+F	C(S)+G	C(S)+H	TAB	C(S)+J	C(S)+K	C(S)+L	Enter	C(S)+N	C(S)+O
1x	DLE	DC1	DC2	DC3	DC4	NAK	SYN	ETB	CAN	EM	SUB	ESC	FS	GS	RS	US
	C(S)+P	C(S)+Q	C(S)+R	C(S)+S	C(S)+T	C(S)+U	C(S)+V	C(S)+ W	C(S)+X	C(S)+Y	C(S)+Z	Esc	C(S)+\ \	C+]	C(S)+^	C(S)+_ _
2x	SP	!	"	#	\$	%	&	'	()	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
6x	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Del
8x	_	Sh↓	Sh↑	Ins	Ent	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11
					(keyp)											
9x	F12	Home	End	Pg Up	Pg Dwn	á	â	ß	à	Ar↓	Ar↑	Al↓	Al ↑	Cl↓	Cl ↑	Cr↓
Ax	Cr↑	–	'	f	„	…	†	‡	^	%	Š	<	Ś	<	Œ	_
Bx	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¿	?	?	¿
Cx	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
Dx	Ð	–	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
Ex	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
Fx	ð	ñ	ò	ó	ô	õ	ö	·	ø	ù	ú	û	ü	ý	þ	ÿ

Extended characters (sky blue) are sent via dedicated keys (when available in the selected country mode) or by an Alt Mode sequence.

Interface Type PC AT PS/2 or USB-Keyboard – cont.

Table 28. Scancode Set When Control Character is 02

	x0	x1	x2	x3	x4	x5	X6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	Ar↓	Ar↑	Al↓	Al ↑	Cl ↓	Cl ↑	Cr ↓	Cr ↑	BS	Tab	à	S+Tab	Enter Keypd	Enter	Ins	Pg Up
1x	Pg Dwn	Home	ß	â	á	F6	F1	F2	F3	F4	F5	ESC	F7	F8	F9	F10
2x	Space	!	'	#	\$	%	&	'	()	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
6x	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Del
8x	–	–	'	f	„	…	†	‡	^	%	Š	<	Š	<	Œ	–
9x	–	'	'	'	„	▪	–	—	~	™	š	>	œ	–	–	ÿ
Ax	NBSP	ı	ç	£	¤	¥	ı	§	¨	©	ª	«	¬	–	®	–
Bx	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¿	¿	¿	¿
Cx	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
Dx	Ð	–	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
Ex	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
Fx	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

Interface type PC AT PS/2 Alt Mode or USB-Keyboard Alt Mode

Table 29. Scancode Set When Control Character is 00 or 01

	x0	x1	x2	x3	x4	x5	X6	x7	x8	x9	xA	xB	xC	xD	xE	Xf
0x	Alt+00 0	Alt+00 1	Alt+00 2	Alt+00 3	Alt+00 4	Alt+00 5	Alt+00 6	Alt+00 7	Alt+00 8	HT TAB	Alt+01 0	Alt+01 1	Alt+01 2	CR Enter	Alt+01 4	Alt+01 5
1x	Alt+01 6	Alt+01 7	Alt+01 8	Alt+01 9	Alt+02 0	Alt+02 1	Alt+02 2	Alt+02 3	Alt+02 4	Alt+02 5	Alt+02 6	ESC Esc	Alt+02 8	Alt+02 9	Alt+03 0	Alt+03 1
2x	A+032	A+033	A+034	A+035	A+036	A+037	A+038	A+039	A+040	A+041	A+042	A+043	A+044	A+045	A+046	A+047
3x	A+048	A+049	A+050	A+051	A+052	A+053	A+054	A+055	A+056	A+057	A+058	A+059	A+060	A+061	A+062	A+063
4x	A+064	A+065	A+066	A+067	A+068	A+069	A+070	A+071	A+072	A+073	A+074	A+075	A+076	A+077	A+078	A+079
5x	A+080	A+081	A+082	A+083	A+084	A+085	A+086	A+087	A+088	A+089	A+090	A+091	A+092	A+093	A+094	A+095
6x	A+096	A+097	A+098	A+099	A+100	A+101	A+102	A+103	A+104	A+105	A+106	A+107	A+108	A+109	A+110	A+111
7x	A+112	A+113	A+114	A+115	A+116	A+117	A+118	A+119	A+120	A+121	A+122	A+123	A+124	A+125	A+126	A+127
8x	_	Sh↓	Sh?	Ins	Ent (keyp)	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11
9x	F12	Home	End	Pg Up	Pg Dwn	á	â	ß	à	Ar↓	Ar↑	Al↓	Al ↑	Cl ↓	Cl ↑	Cr ↓
Ax	Cr↑	A+016 1	A+016 2	A+016 3	A+016 4	A+016 5	A+016 6	A+016 7	A+016 8	A+016 9	A+017 0	A+017 1	A+017 2	A+017 3	A+017 4	A+017 5
Bx	A+017 6	A+017 7	A+017 8	A+017 9	A+018 0	A+018 1	A+018 2	A+018 3	A+018 4	A+018 5	A+018 6	A+018 7	A+018 8	A+018 9	A+019 0	A+019 1
Cx	A+019 2	A+019 3	A+019 4	A+019 5	A+019 6	A+019 7	A+019 8	A+019 9	A+020 0	A+020 1	A+020 2	A+020 3	A+020 4	A+020 5	A+020 6	A+020 7
Dx	A+020 8	A+020 9	A+021 0	A+021 1	A+021 2	A+021 3	A+021 4	A+021 5	A+021 6	A+021 7	A+021 8	A+021 9	A+022 0	A+022 1	A+022 2	A+022 3
Ex	A+022 4	A+022 5	A+022 6	A+022 7	A+022 8	A+022 9	A+023 0	A+023 1	A+023 2	A+023 3	A+023 4	A+023 5	A+023 6	A+023 7	A+023 8	A+023 9
Fx	A+024 0	A+024 1	A+024 2	A+024 3	A+024 4	A+024 5	A+024 6	A+024 7	A+024 8	A+024 9	A+025 0	A+025 1	A+052	A+025 3	A+025 4	A+025 5

Interface type PC AT PS/2 Alt Mode or USB-Keyboard Alt Mode — cont.

Table 30. Scancode Set When Control Character is 02

	x0	x1	x2	x3	x4	x5	X6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	Ar↓	Ar↑	Al↓	Al↑	Cl↓	Cl↑	Cr↓	Cr↑	BS	Tab	à	S+Tab	Enter Keypd	Enter	Ins	Pg Up
1x	Pg Dwn	Home	ß	â	á	F6	F1	F2	F3	F4	F5	ESC	F7	F8	F9	F10
2x	A+032	A+033	A+034	A+035	A+036	A+037	A+038	A+039	A+040	A+041	A+042	A+043	A+044	A+045	A+046	A+047
3x	A+048	A+049	A+050	A+051	A+052	A+053	A+054	A+055	A+056	A+057	A+058	A+059	A+060	A+061	A+062	A+063
4x	A+064	A+065	A+066	A+067	A+068	A+069	A+070	A+071	A+072	A+073	A+074	A+075	A+076	A+077	A+078	A+079
5x	A+080	A+081	A+082	A+083	A+084	A+085	A+086	A+087	A+088	A+089	A+090	A+091	A+092	A+093	A+094	A+095
6x	A+096	A+097	A+098	A+099	A+100	A+101	A+102	A+103	A+104	A+105	A+106	A+107	A+108	A+109	A+110	A+111
7x	A+112	A+113	A+114	A+115	A+116	A+117	A+118	A+119	A+120	A+121	A+122	A+123	A+124	A+125	A+126	A+127
8x	A+012 8	A+012 9	A+013 0	A+013 1	A+013 2	A+013 3	A+013 4	A+013 5	A+013 6	A+013 7	A+013 8	A+013 9	A+014 0	A+014 1	A+014 2	A+014 3
9x	A+014 4	A+014 5	A+014 6	A+014 7	A+014 8	A+014 9	A+015 0	A+015 1	A+015 2	A+015 3	A+015 4	A+015 5	A+015 6	A+015 7	A+015 8	A+015 9
Ax	A+016 0	A+016 1	A+016 2	A+016 3	A+016 4	A+016 5	A+016 6	A+016 7	A+016 8	A+016 9	A+017 0	A+017 1	A+017 2	A+017 3	A+017 4	A+017 5
Bx	A+017 6	A+017 7	A+017 8	A+017 9	A+018 0	A+018 1	A+018 2	A+018 3	A+018 4	A+018 5	A+018 6	A+018 7	A+018 8	A+018 9	A+019 0	A+019 1
Cx	A+019 2	A+019 3	A+019 4	A+019 5	A+019 6	A+019 7	A+019 8	A+019 9	A+020 0	A+020 1	A+020 2	A+020 3	A+020 4	A+020 5	A+020 6	A+020 7
Dx	A+020 8	A+020 9	A+021 0	A+021 1	A+021 2	A+021 3	A+021 4	A+021 5	A+021 6	A+021 7	A+021 8	A+021 9	A+022 0	A+022 1	A+022 2	A+022 3
Ex	A+022 4	A+022 5	A+022 6	A+022 7	A+022 8	A+022 9	A+023 0	A+023 1	A+023 2	A+023 3	A+023 4	A+023 5	A+023 6	A+023 7	A+023 8	A+023 9
Fx	A+024 0	A+024 1	A+024 2	A+024 3	A+024 4	A+024 5	A+024 6	A+024 7	A+024 8	A+024 9	A+025 0	A+025 1	A+052	A+025 3	A+025 4	A+025 5

Microsoft Windows Codepage 1252

Windows-1252 is a character encoding of the Latin alphabet, used by default in the legacy components of Microsoft Windows in English and some other Western languages.

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	<u>NUL</u> 0000	<u>STX</u> 0001	<u>SOT</u> 0002	<u>ETX</u> 0003	<u>EOT</u> 0004	<u>ENQ</u> 0005	<u>ACK</u> 0006	<u>BEL</u> 0007	<u>BS</u> 0008	<u>HT</u> 0009	<u>LF</u> 000A	<u>VT</u> 000B	<u>FF</u> 000C	<u>CR</u> 000D	<u>SO</u> 000E	<u>SI</u> 000F
10	<u>DLE</u> 0010	<u>DC1</u> 0011	<u>DC2</u> 0012	<u>DC3</u> 0013	<u>DC4</u> 0014	<u>NAK</u> 0015	<u>SYN</u> 0016	<u>ETB</u> 0017	<u>CAN</u> 0018	<u>EM</u> 0019	<u>SUB</u> 001A	<u>ESC</u> 001B	<u>FS</u> 001C	<u>GS</u> 001D	<u>RS</u> 001E	<u>US</u> 001F
20	<u>SP</u> 0020	!	"	#	\$	%	&	'	()	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	<u>DEL</u> 007F
80	€ 20AC		ƒ 201A	„ 0192	… 201E	† 2026	‡ 2020	ˆ 02C6	% 2030	š 0160	< 2039	Œ 0152		ž 017D		
90		˘ 2018	˙ 2019	˚ 201C	˛ 201D	• 2022	– 2013	— 2014	˜ 02DC	™ 2122	š 0161	> 203A	œ 0153		ž 017E	ÿ 0178
A0	<u>NBSP</u> 00A0	ı 00A1	ı̇ 00A2	£ 00A3	* 00A4	¥ 00A5	ı̈ 00A6	§ 00A7	¨ 00A8	© 00A9	ª 00AA	« 00AB	¬ 00AC	– 00AD	® 00AE	— 00AF
B0	° 00B0	± 00B1	² 00B2	³ 00B3	´ 00B4	µ 00B5	¶ 00B6	· 00B7	¸ 00B8	¹ 00B9	º 00BA	» 00BB	¼ 00BC	½ 00BD	¾ 00BE	¿ 00BF
C0	À 00C0	Á 00C1	Â 00C2	Ã 00C3	Ä 00C4	Å 00C5	Æ 00C6	Ç 00C7	È 00C8	É 00C9	Ê 00CA	Ë 00CB	Ì 00CC	Í 00CD	Î 00CE	Ï 00CF
D0	Ð 00D0	Ñ 00D1	Ò 00D2	Ó 00D3	Ô 00D4	Õ 00D5	Ö 00D6	× 00D7	Ø 00D8	Ù 00D9	Ú 00DA	Û 00DB	Ü 00DC	Ý 00DD	Þ 00DE	ß 00DF
E0	à 00E0	á 00E1	â 00E2	ã 00E3	ä 00E4	å 00E5	æ 00E6	ç 00E7	è 00E8	é 00E9	ê 00EA	ë 00EB	ì 00EC	í 00ED	î 00EE	ï 00EF
F0	ð 00F0	ñ 00F1	ò 00F2	ó 00F3	ô 00F4	õ 00F5	ö 00F6	÷ 00F7	ø 00F8	ù 00F9	ú 00FA	û 00FB	ü 00FC	ý 00FD	þ 00FE	ÿ 00FF



Index

B

- bar codes
 - RS-232
 - baud rate 42
 - RS-232 parameters
 - parity 199, 200, 202, 204
- barcodes
 - cancel 267
 - numeric barcodes 267
 - RS-232 parameters
 - parity 35
- Beeper
 - Pitch, Good Read 74
 - Volume, Good Read 75
- Beeper, Good Read 66

C

- Cable Pinouts 245
- Clear to Send 22, 218
- Conversion, case 56
- Conversion, character 56, 236
- CTS 22, 218

D

- Defaults 249

E

- Error Codes 247
- Errors 247

G

- Good Read, Beeper 66
 - Pitch 74

- Volume 75

- Good Read, Beeper – 66
- Good Read, Beeper Pitch – 74
- Good Read, Beeper Volume – 75

H

- Handheld Scanner 44

I

- Indications 246

K

- keyboard support 33
- KEYBOARD WEDGE (KBW) interface selection 10
- Keyboard Wedge Connection 6

N

- numbers lock key 36, 37

P

- Pitch – Good Read, Beeper 74
- Prefix/Suffix 46, 229
- Product Specifications 243
- Programming Barcodes 11

R

- Read, Beeper – Good 66
- Read, Beeper Pitch – Good 74
- Read, Beeper Volume – Good 75
- Request to Send 22, 218
- RS-232 interface selection 9

RTS 22, 218

S

sample bar codes

code 128 264

code 39 263

interleaved 2 of 5 264

select digits/characters 267

Serial Output 245

Standard Cable Pinouts 245

Suffix 46, 229

Symbologies 217

symbology types 263

T

Table Top Scanner 44

U

UPC 81

USB Connection 6

USB interface selection 9

V

Volume – Good Read, Beeper 75

X

XON/XOFF 22, 218

ASCII Chart

ASCII Char.	Hex No.	ASCII Char.	Hex No.	ASCII Char.	Hex No.	ASCII Char.	Hex No.
NUL	00	SP	20	@	40	'	60
SOH	01	!	21	A	41	a	61
STX	02	"	22	B	42	b	62
ETX	03	#	23	C	43	c	63
EOT	04	\$	24	D	44	d	64
ENQ	05	%	25	E	45	e	65
ACK	06	&	26	F	46	f	66
BEL	07	'	27	G	47	g	67
BS	08	(28	H	48	h	68
HT	09)	29	I	49	i	69
LF	0A	*	2A	J	4A	j	6A
VT	0B	+	2B	K	4B	k	6B
FF	0C	,	2C	L	4C	l	6C
CR	0D	-	2D	M	4D	m	6D
SO	0E	.	2E	N	4E	n	6E
SI	0F	/	2F	O	4F	o	6F
DLE	10	0	30	P	50	p	70
DC1	11	1	31	Q	51	q	71
DC2	12	2	32	R	52	r	72
DC3	13	3	33	S	53	s	73
DC4	14	4	34	T	54	t	74
NAK	15	5	35	U	55	u	75
SYN	16	6	36	V	56	v	76
ETB	17	7	37	W	57	w	77
CAN	18	8	38	X	58	x	78
EM	19	9	39	Y	59	y	79
SUB	1A	:	3A	Z	5A	z	7A
ESC	1B	;	3B	[5B	{	7B
FS	1C	<	3C	\	5C		7C
GS	1D	=	3D]	5D	}	7D
RS	1E	>	3E	^	5E	~	7E
US	1F	?	3F	_	5F	DEL	7F



www.datalogic.com

© 2014 Datalogic ADC, Inc. ▪ All rights reserved. ▪
Datalogic and the Datalogic logo are registered trademarks of
Datalogic S.p.A. in many countries, including the U.S.A. and the E.U.

Datalogic ADC, Inc.
959 Terry Street | Eugene | OR 97402 | USA
Telephone: (1) 541-683-5700 | Fax: (1) 541-345-7140

